



ACMER P2 Update Firmware Tutorial



1. Software Installation

ACMER P2 Firmware Update Instructions

ACMER_P2_Firmware_V1.1_20230127 - Change Log

ACMER_P2_Firmware_V1.1_20230127

MKSLaserTool_setupV1.0.6

Installer Language






Please select a language.

English

OK



Cancel

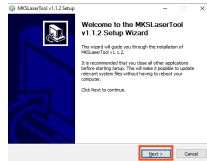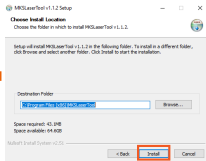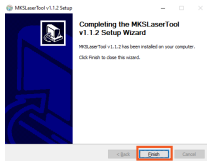

2.Firmware Updates

2.1 Power on the machine and use the USB cable to connect the machine to the computer.
(Please turn off LaserGRBL and Lightburn before updating the firmware)

2.2 Open the "MKSLaserTool" and click on "MKS ESP32 Download Tool".

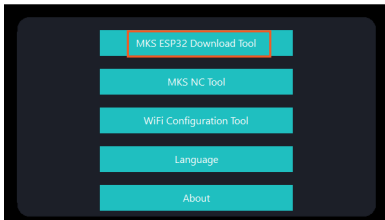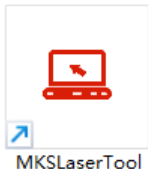

⑤ Start Writing




① Open file.

② Set FLASH SIZE to 8MB

③ Select the correct port

④ Set baud rate to 115200

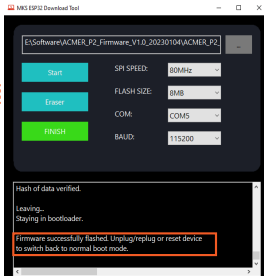

2.3 Press the above screen to set up.

2.4 Just wait for the data transfer to complete, and then restart the machine.