

Air pump ×1



Air nozzle ×1



Honeycomb panel ×1



Air hose ×1



Hex key ×1



① Sealing ring ×3



② Air hose clip ×3



③ Zip tie ×3




Product Name: iCube Ultra Air Pump
Manufacturer: Shenzhen Sculpfun Technology Co.,Ltd.
E-mail: support@sculpfun.com
Website: sculpfun.com



Video Tutorials



1. Use a wrench to remove the top cover.

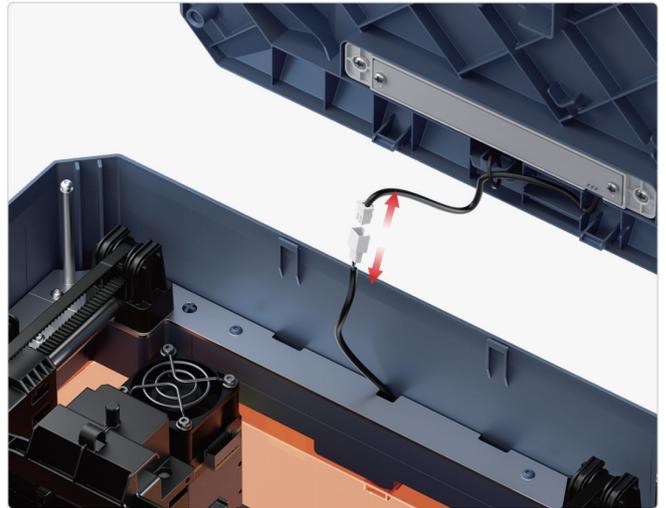


2. Be sure to disconnect the terminal cable of the status indicator.



3. Use a wrench to replace the 12W diode's air nozzle, and insert the sealing ring ①



4. Open the air hose port on the back of the machine, and insert the air hose terminal cable.

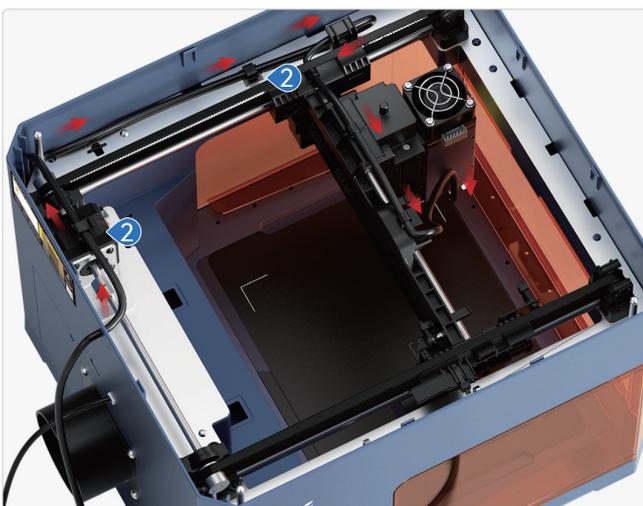

5. Affix the air hose clips ② as shown, then insert the air hose into the machine as indicated. Connect the air hose to the air nozzle on the laser head.



6. After installing the internal air hose, reinstall the top cover.