




bottom

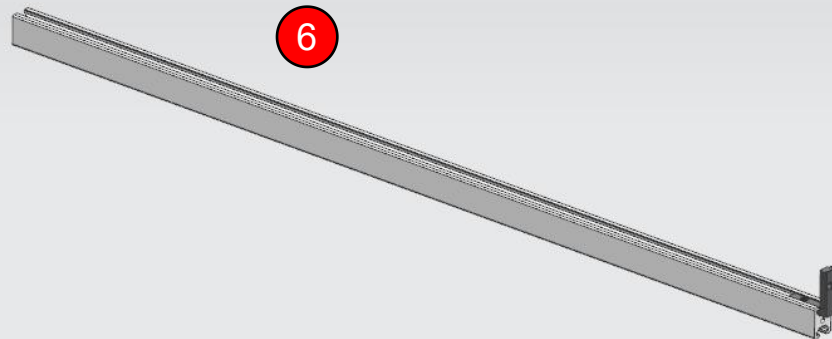


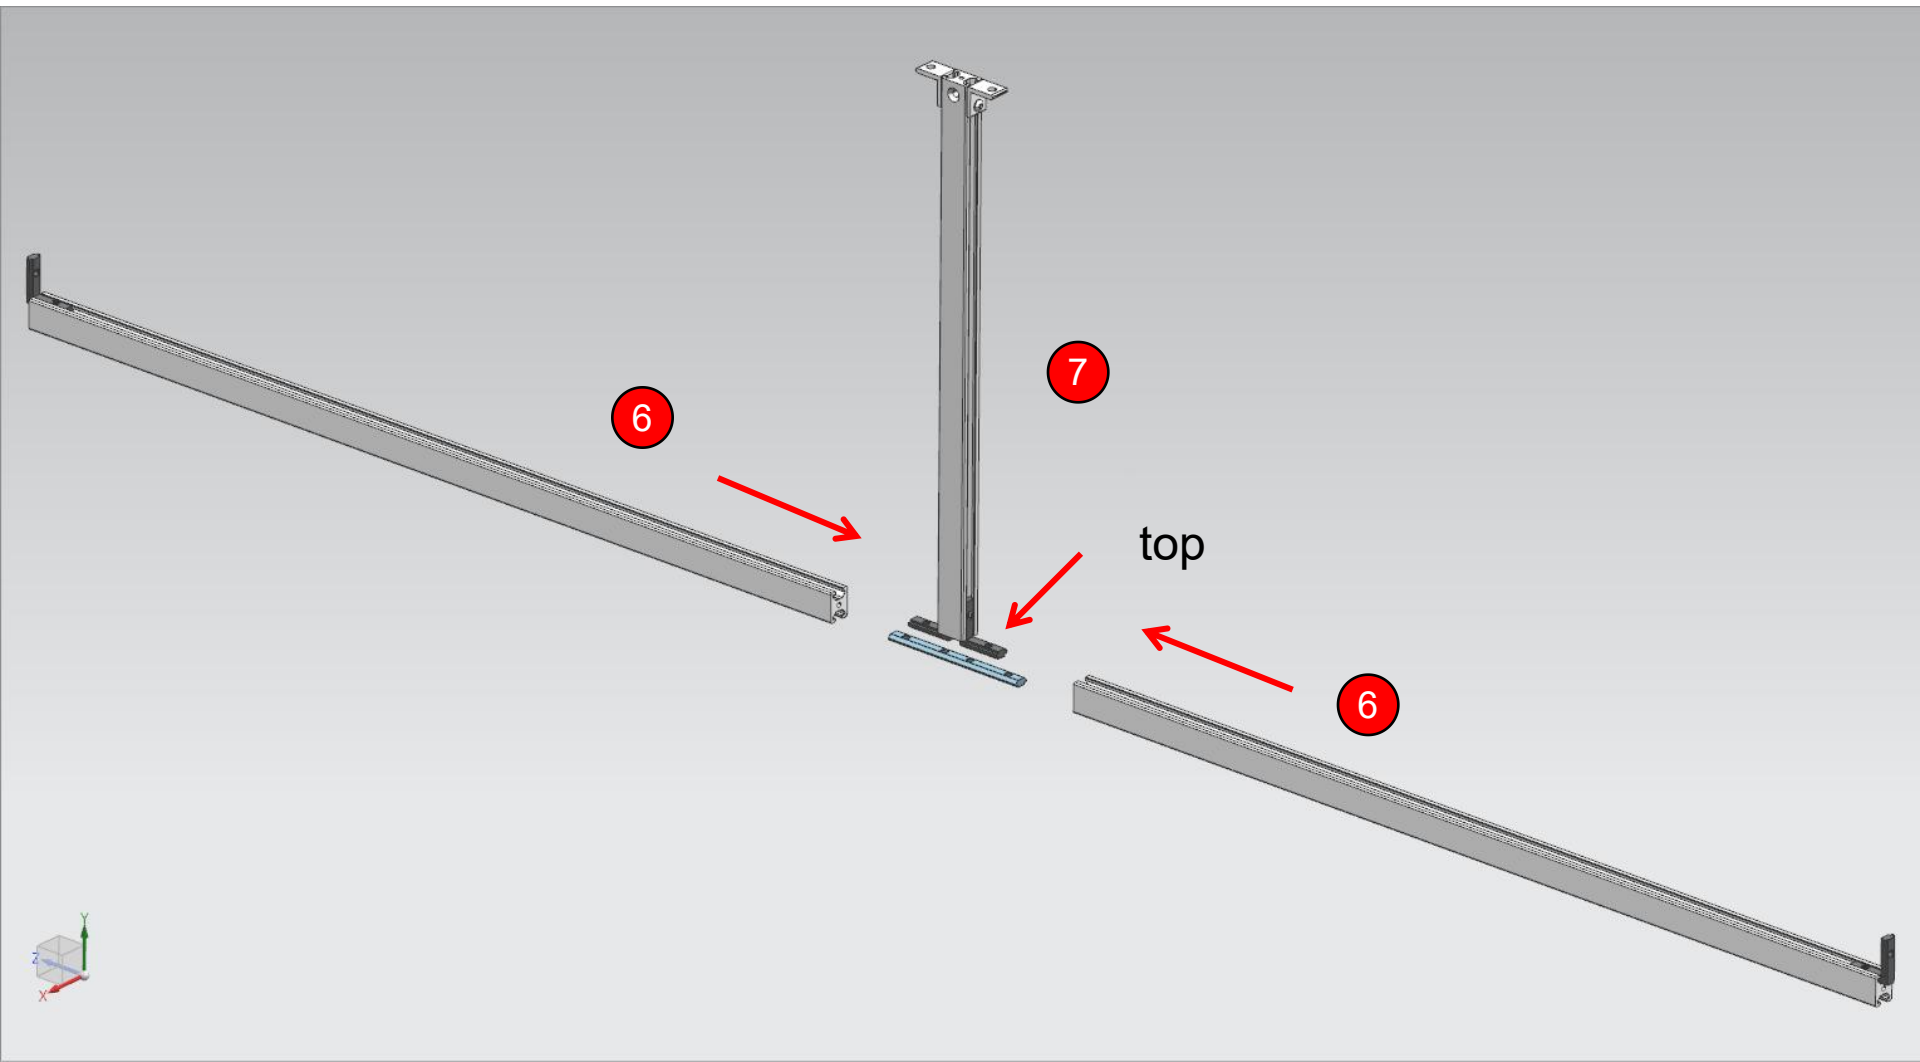

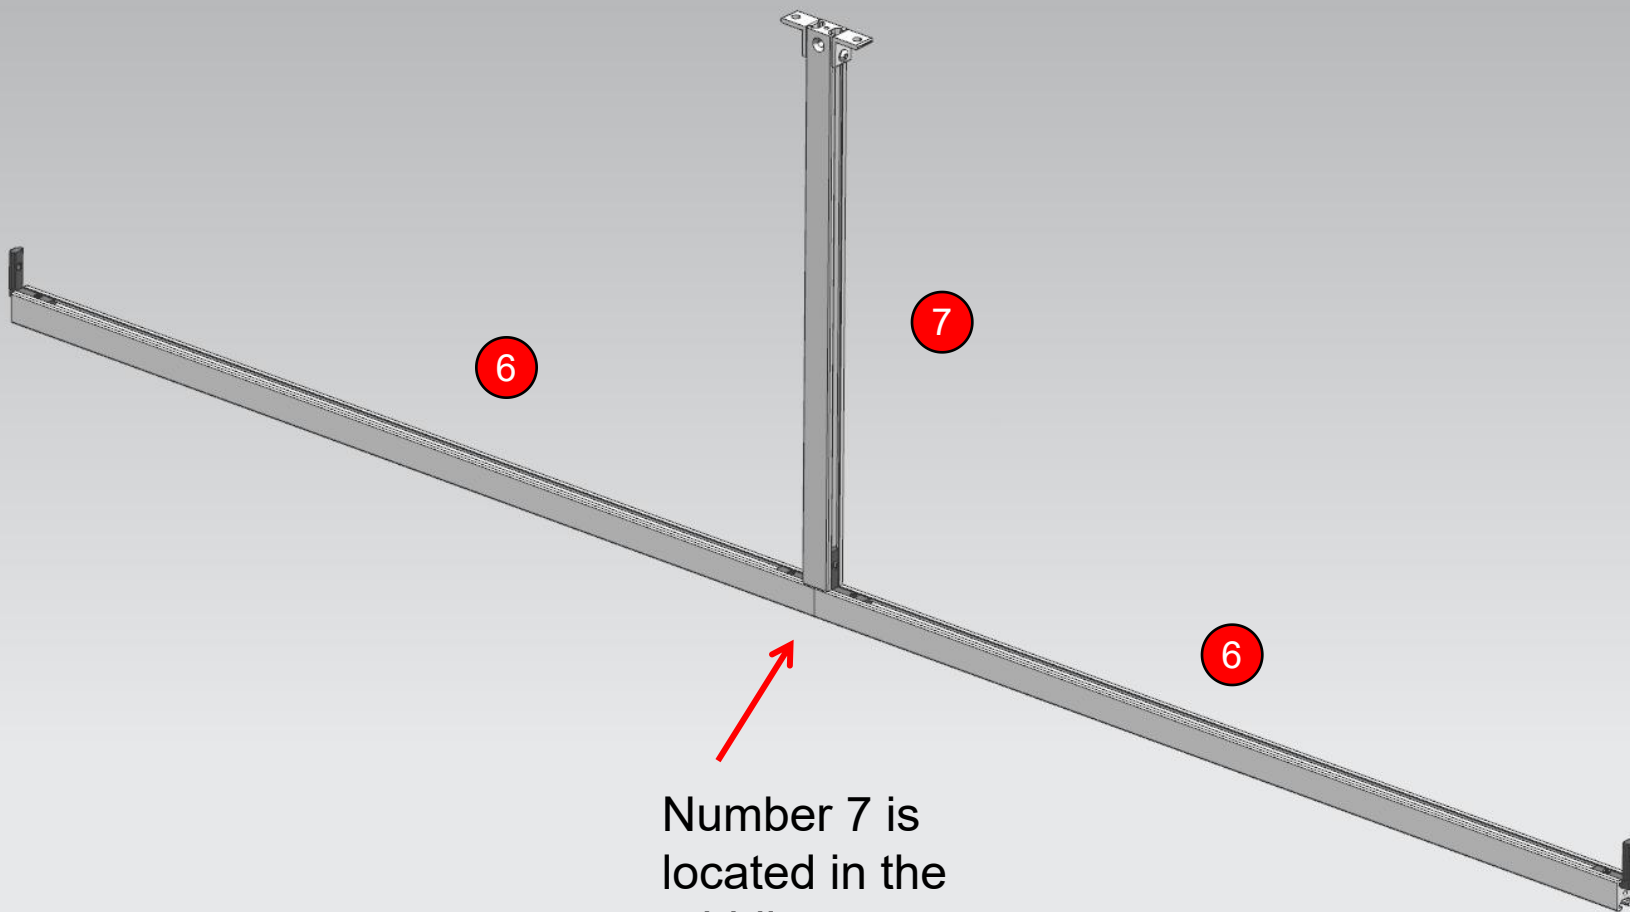


Number 7 is
located in the
middle



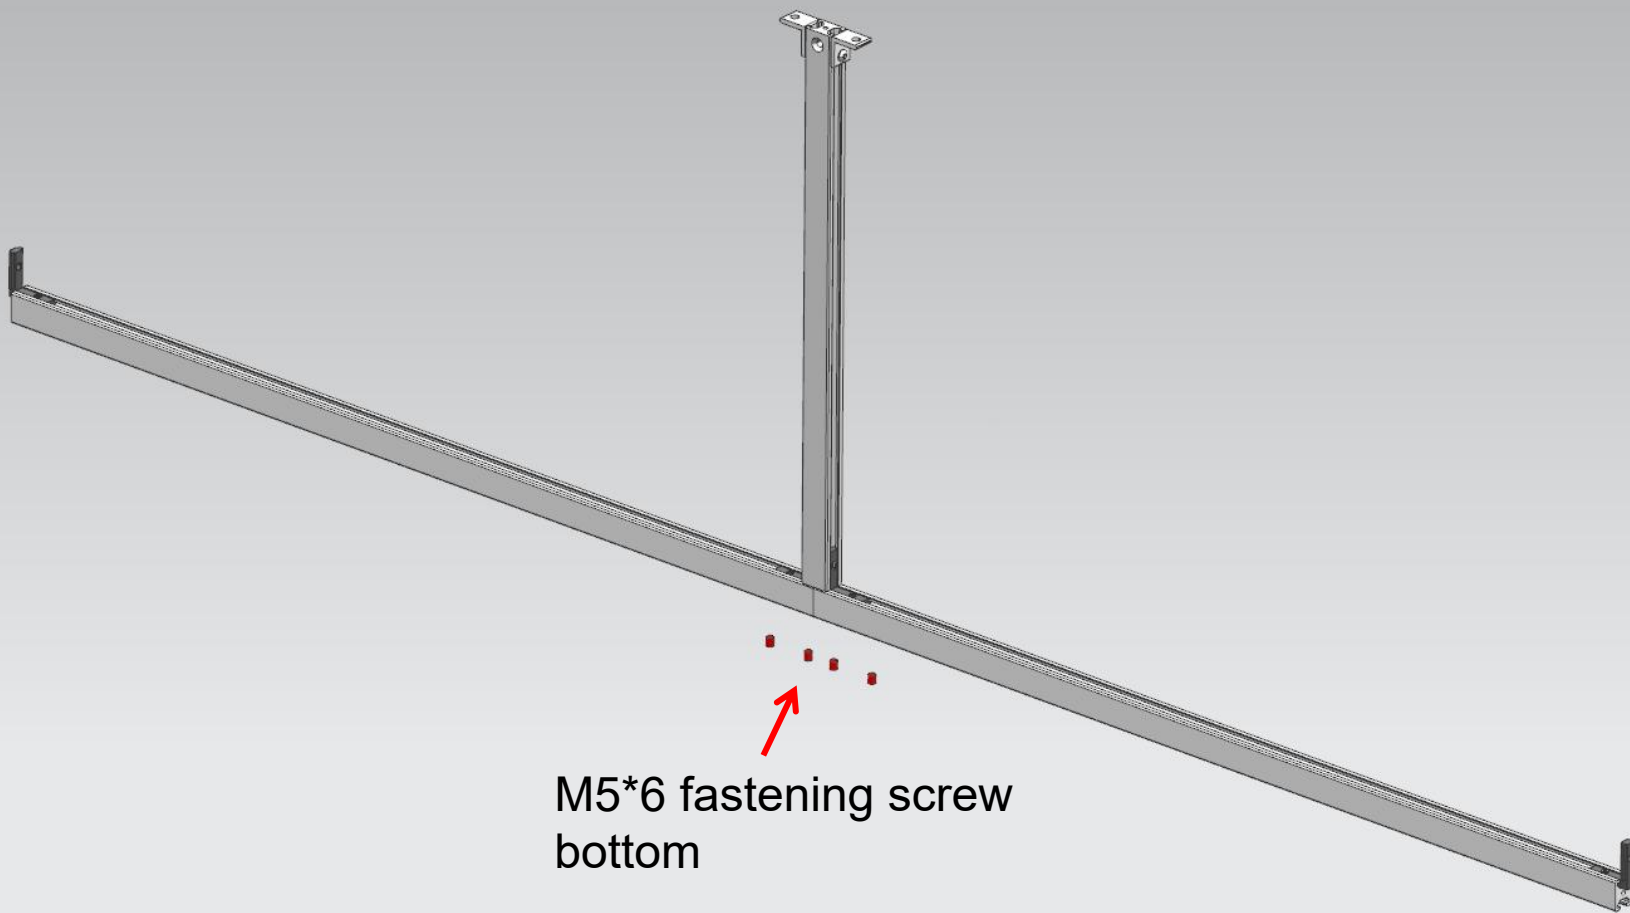

M5*6 fastening screw
bottom




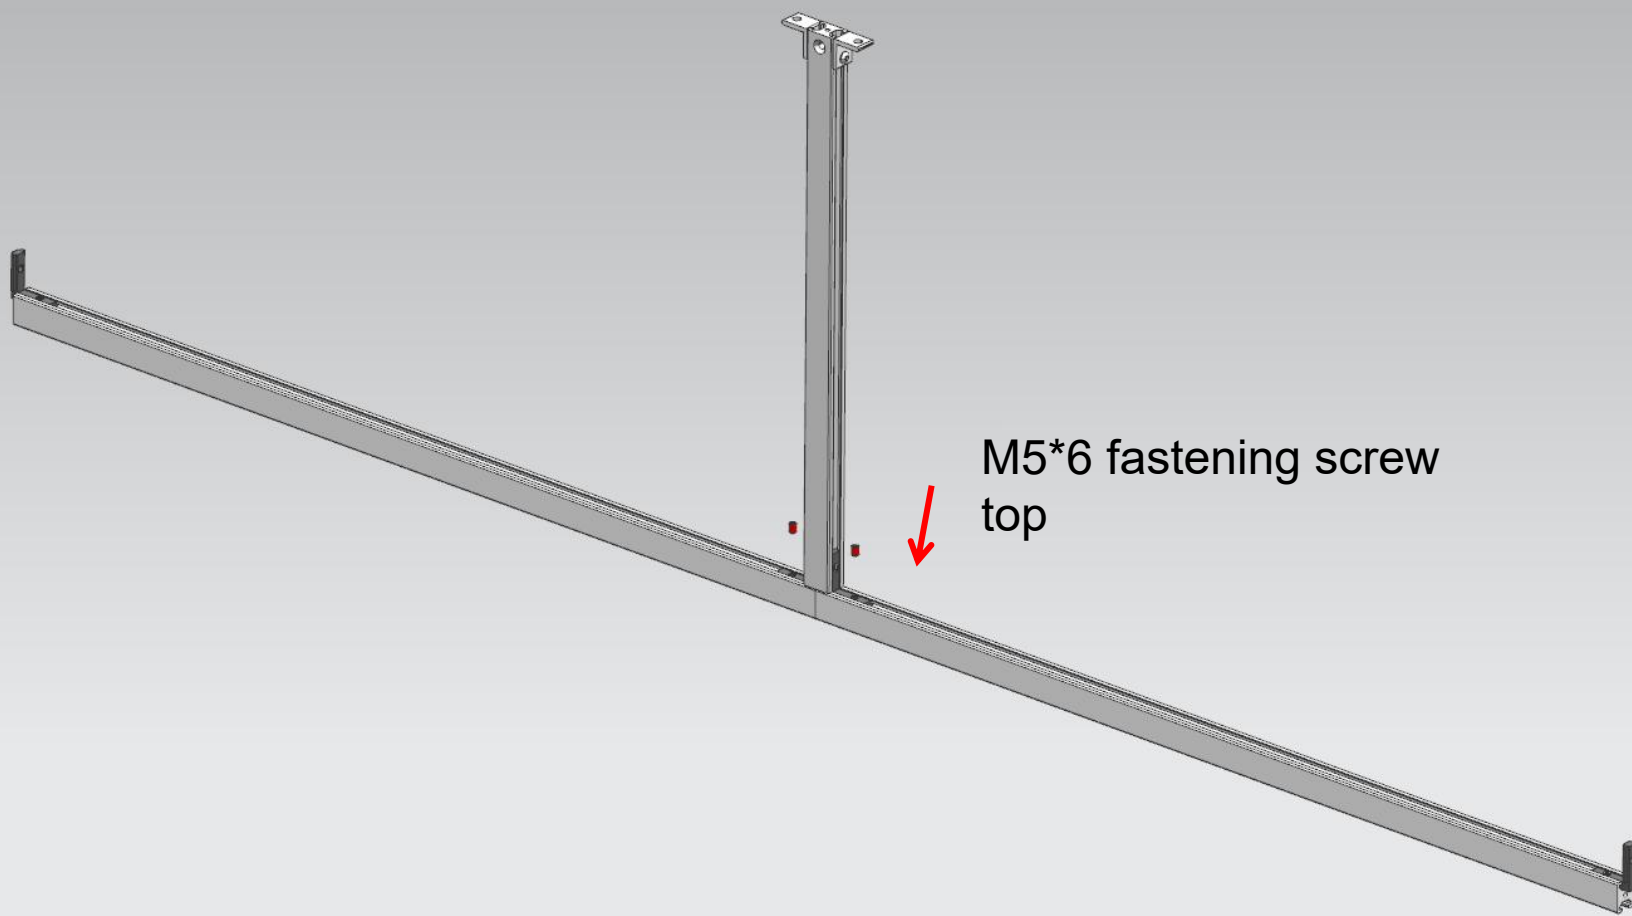

M5*6 fastening screw
top




I

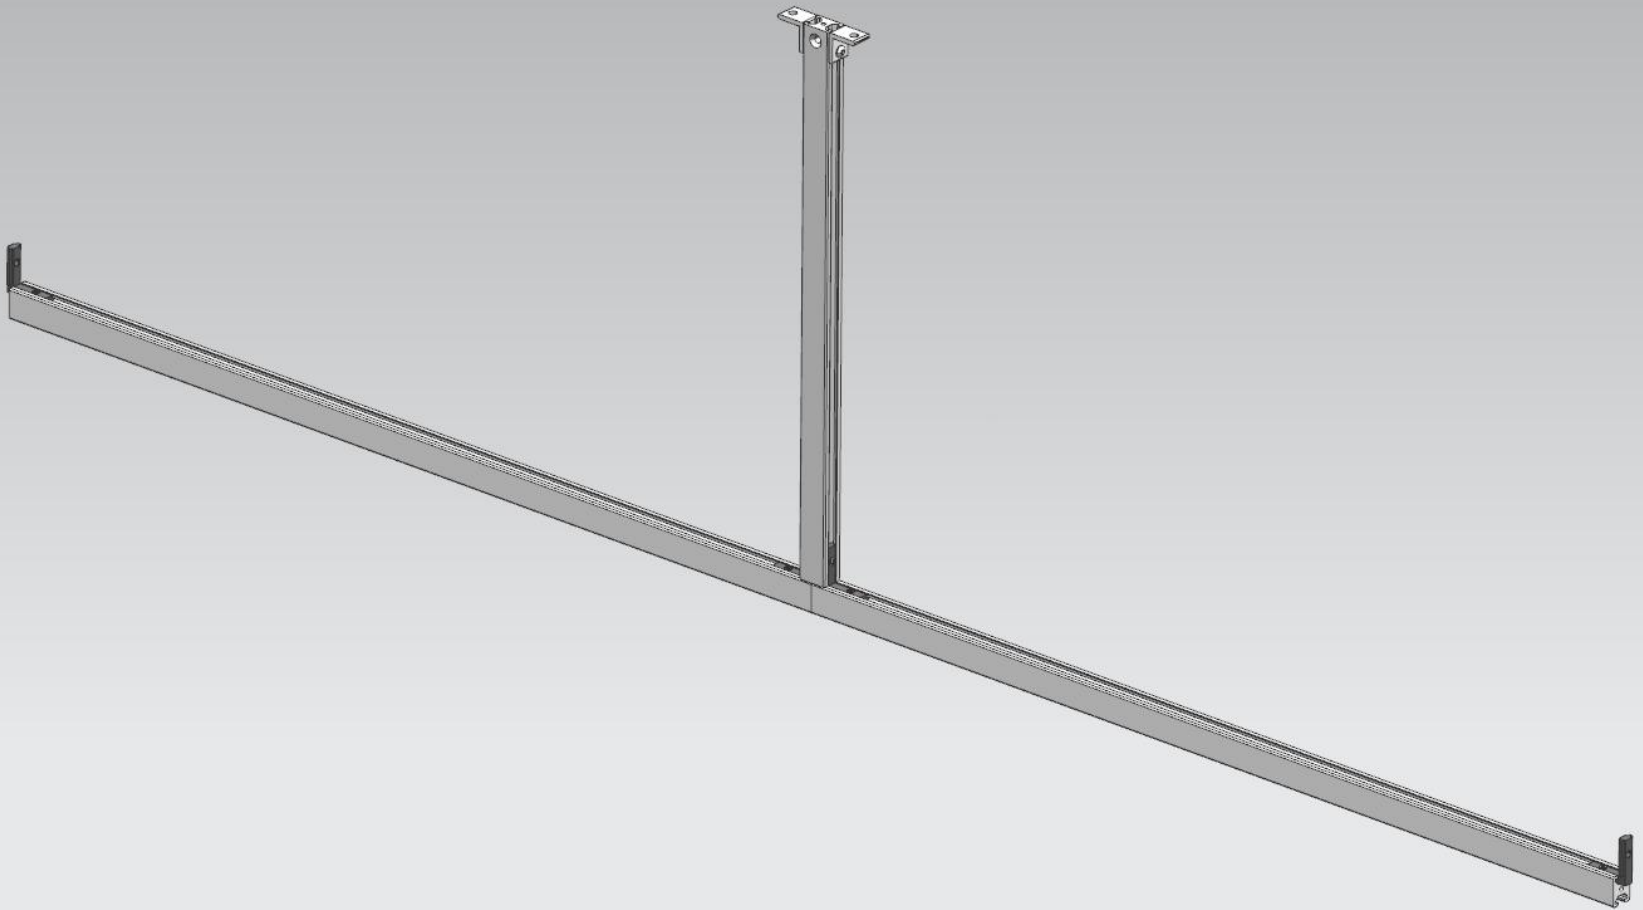



7





8




II

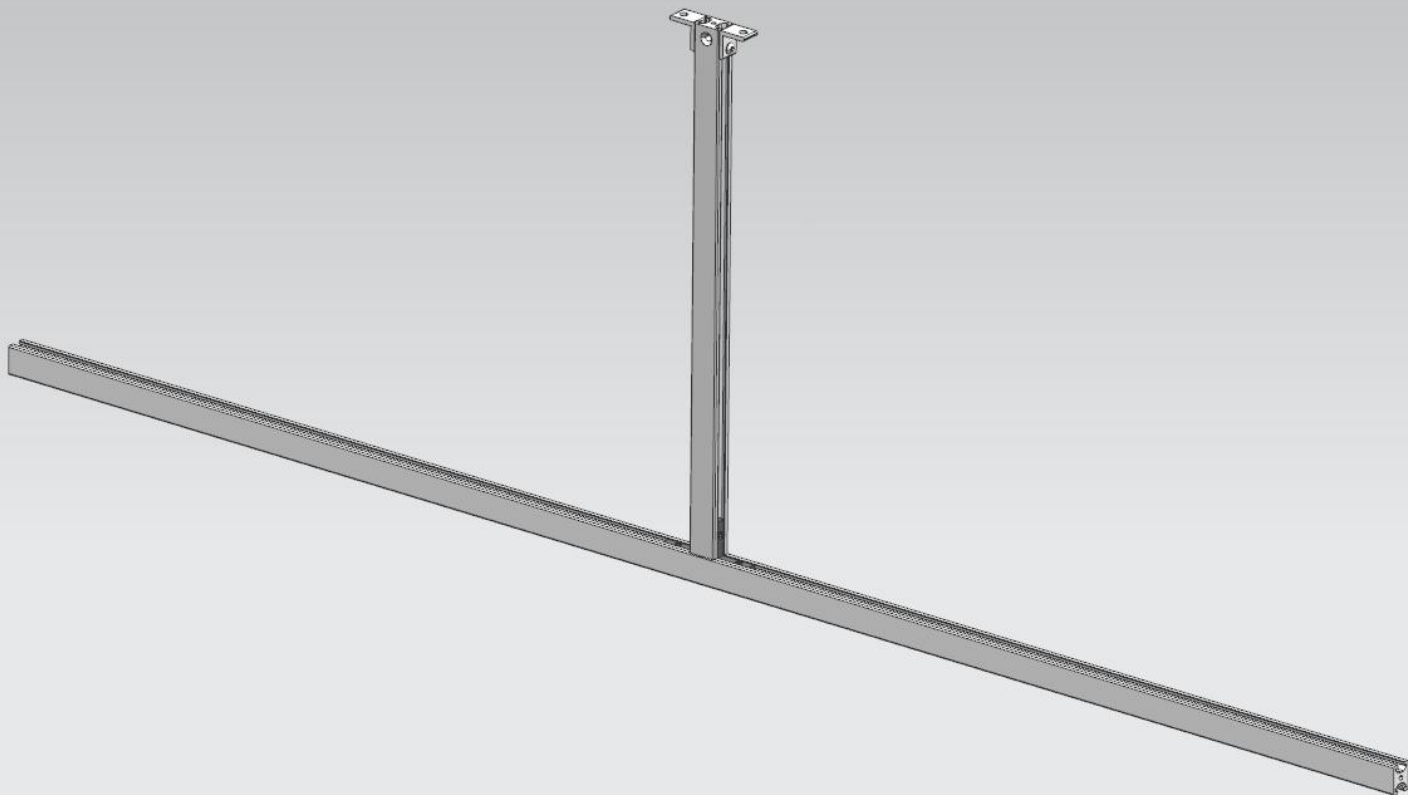

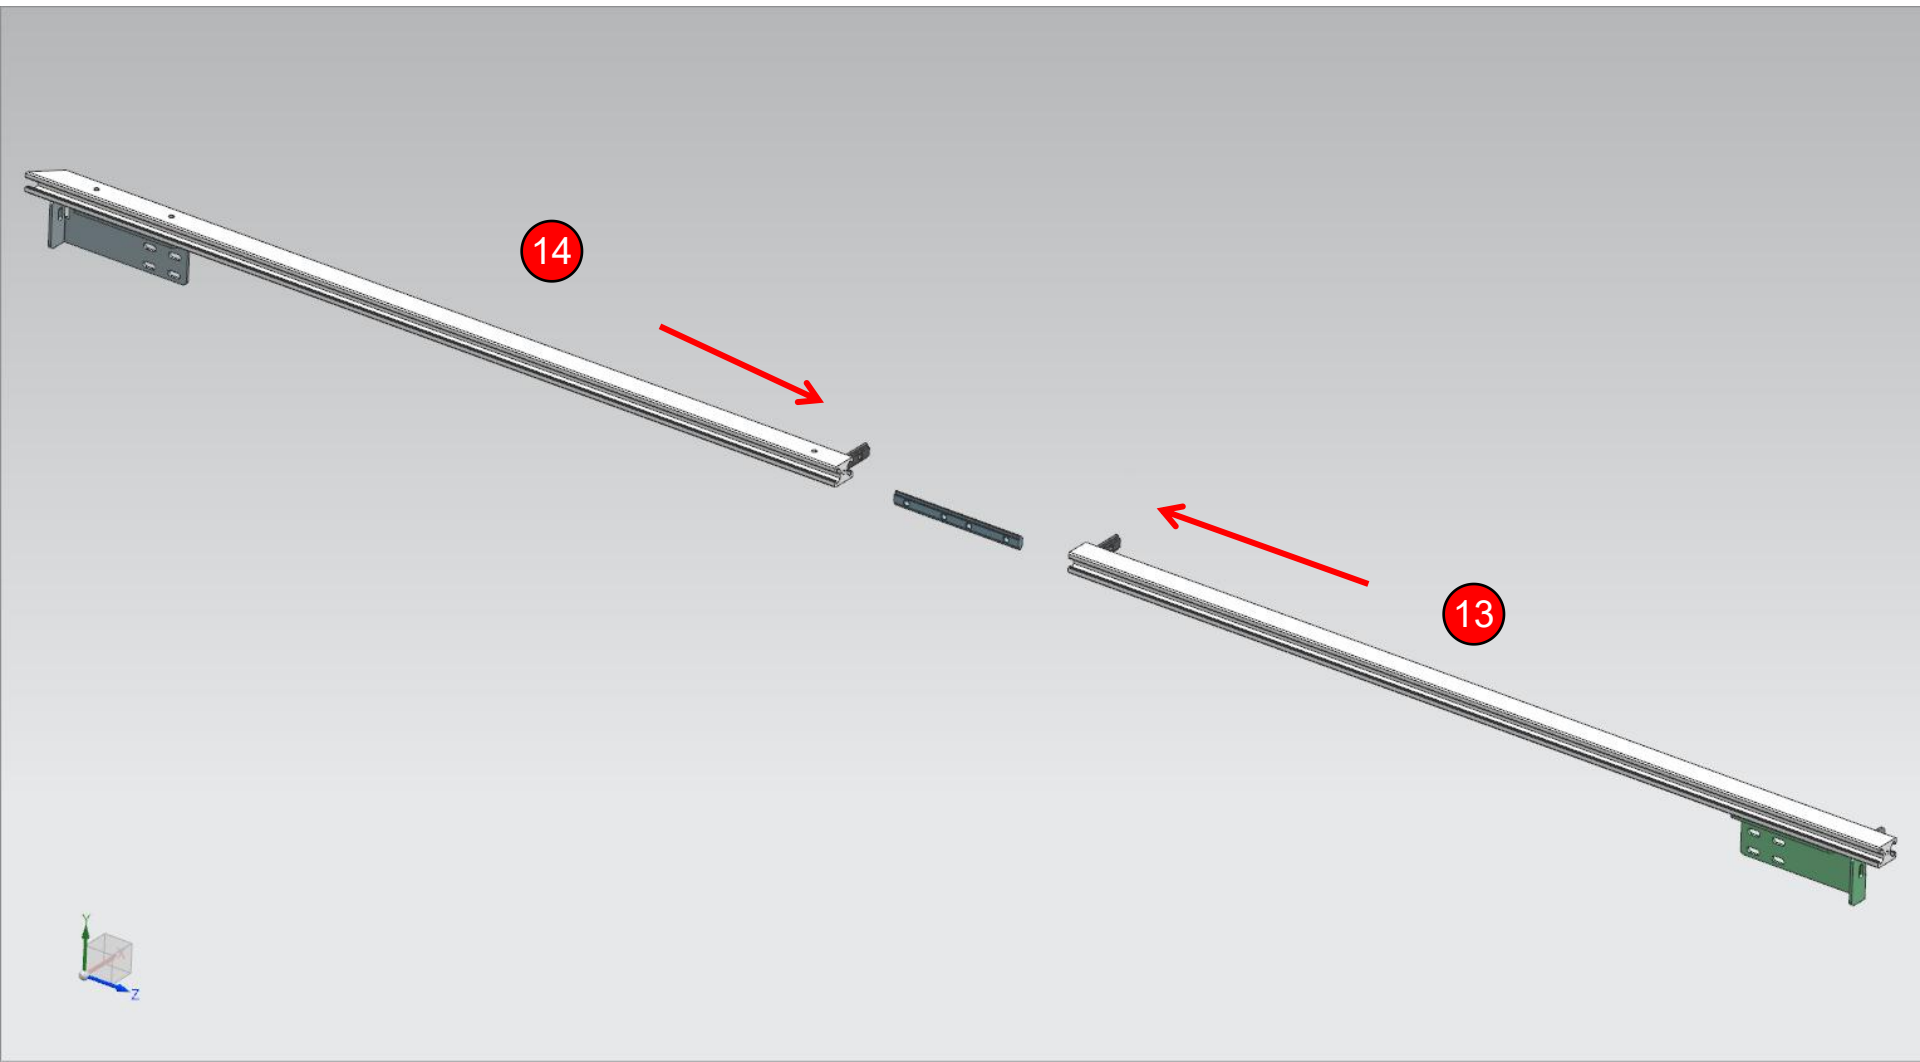

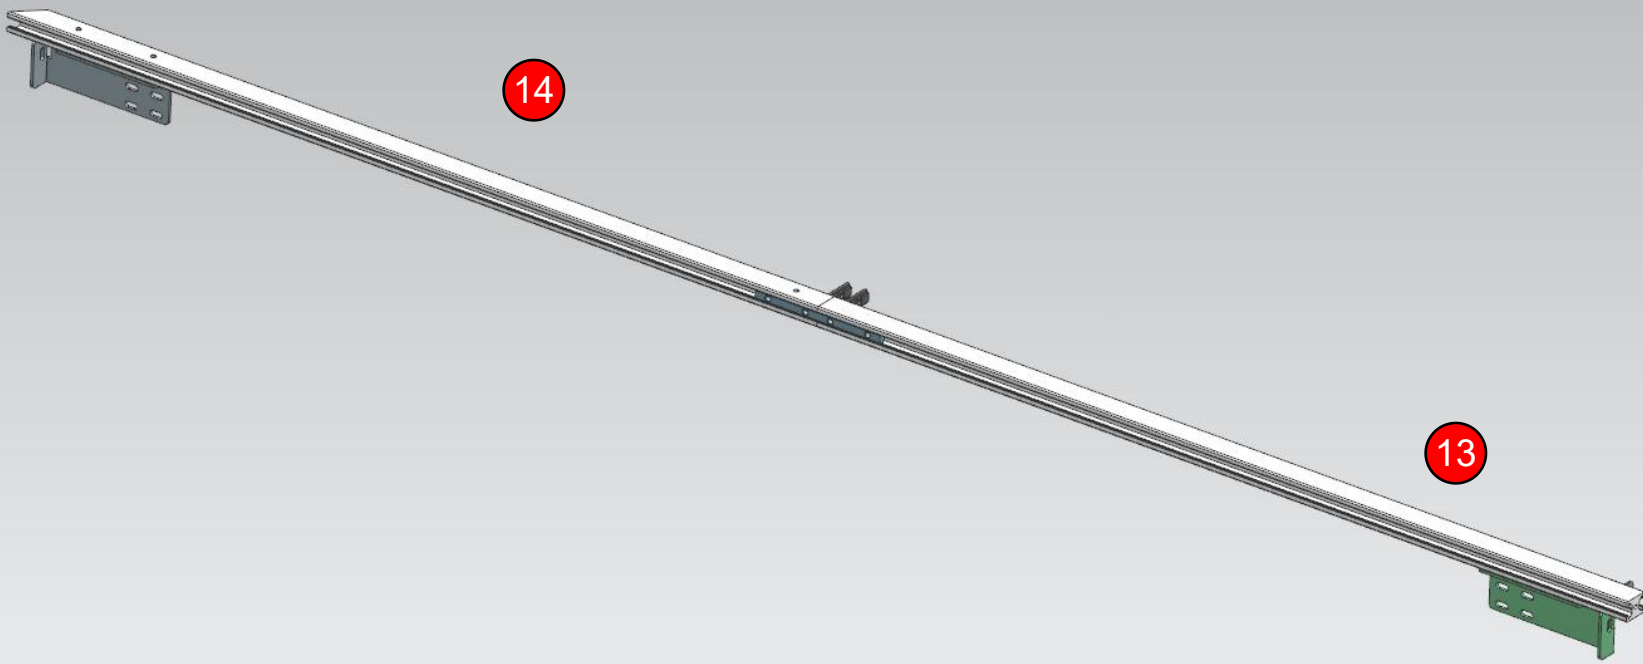

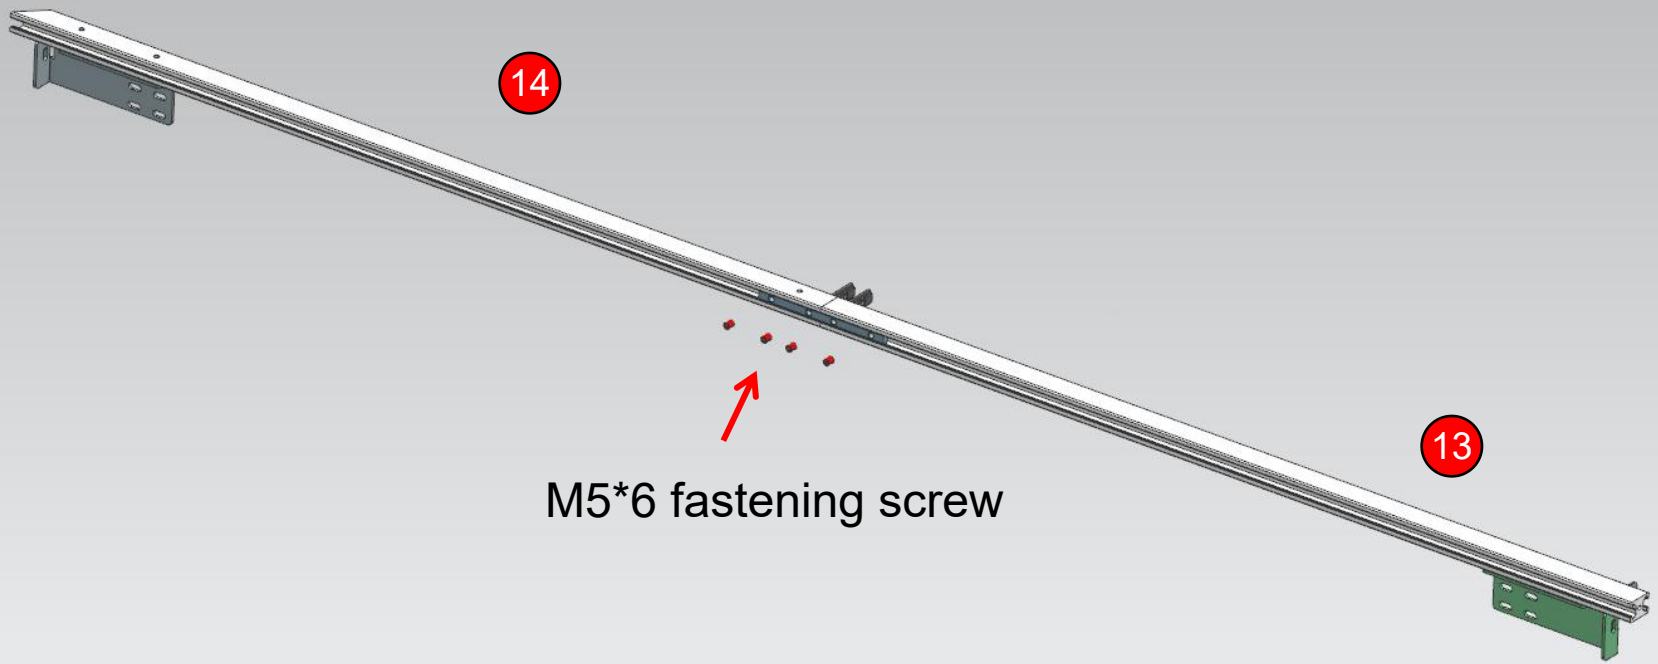


14


13


M5*6 fastening screw




III

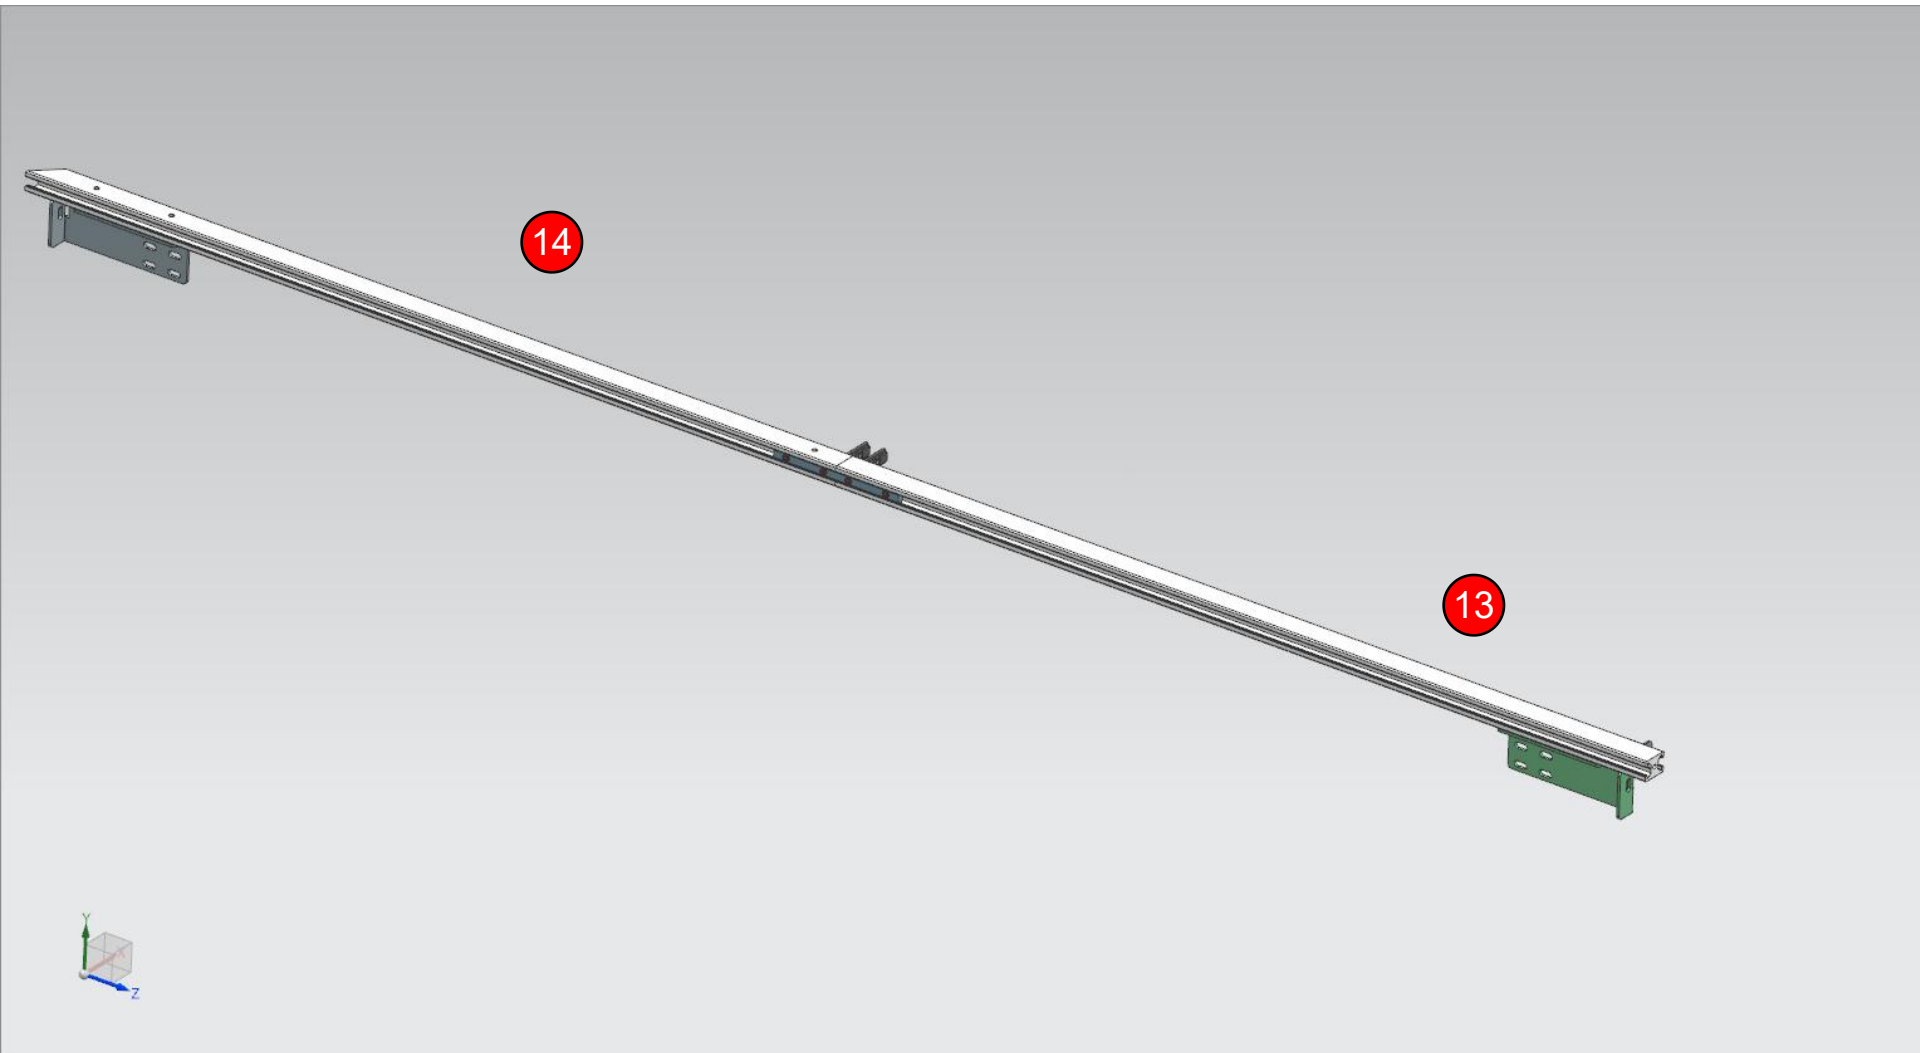


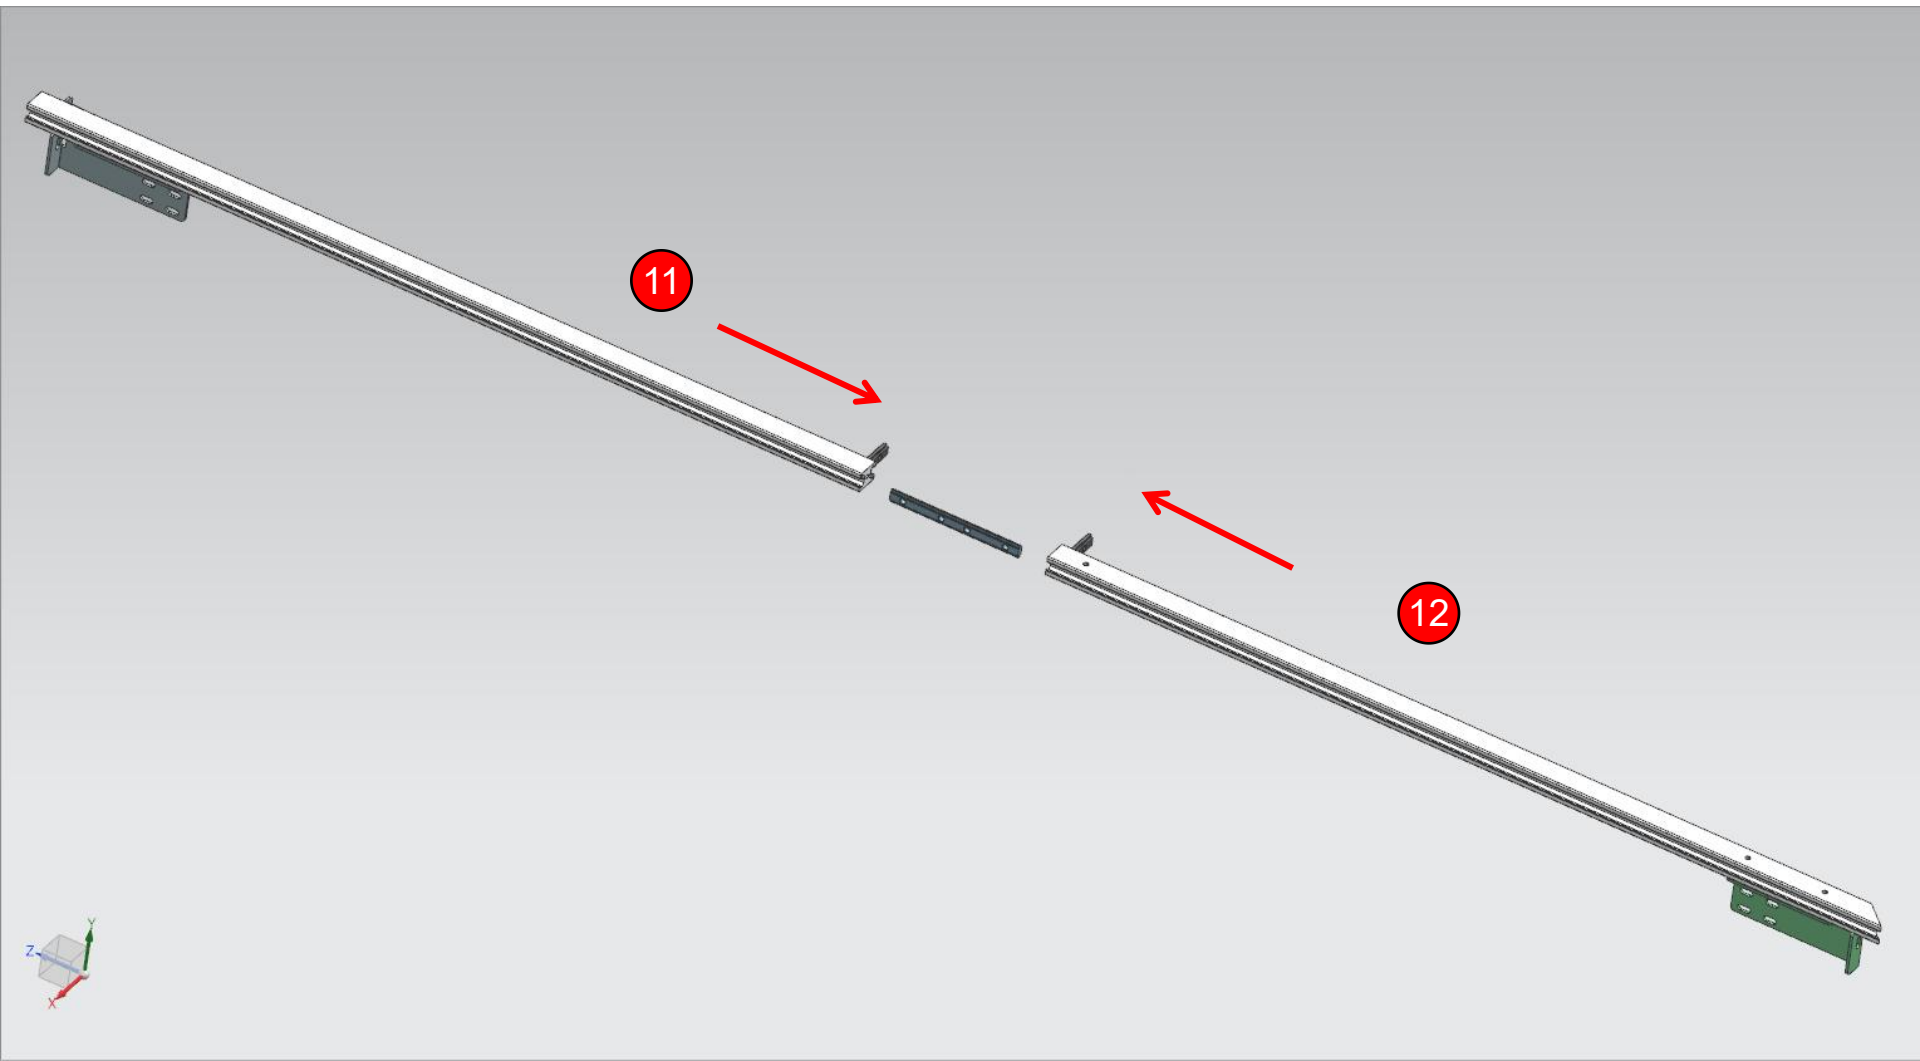


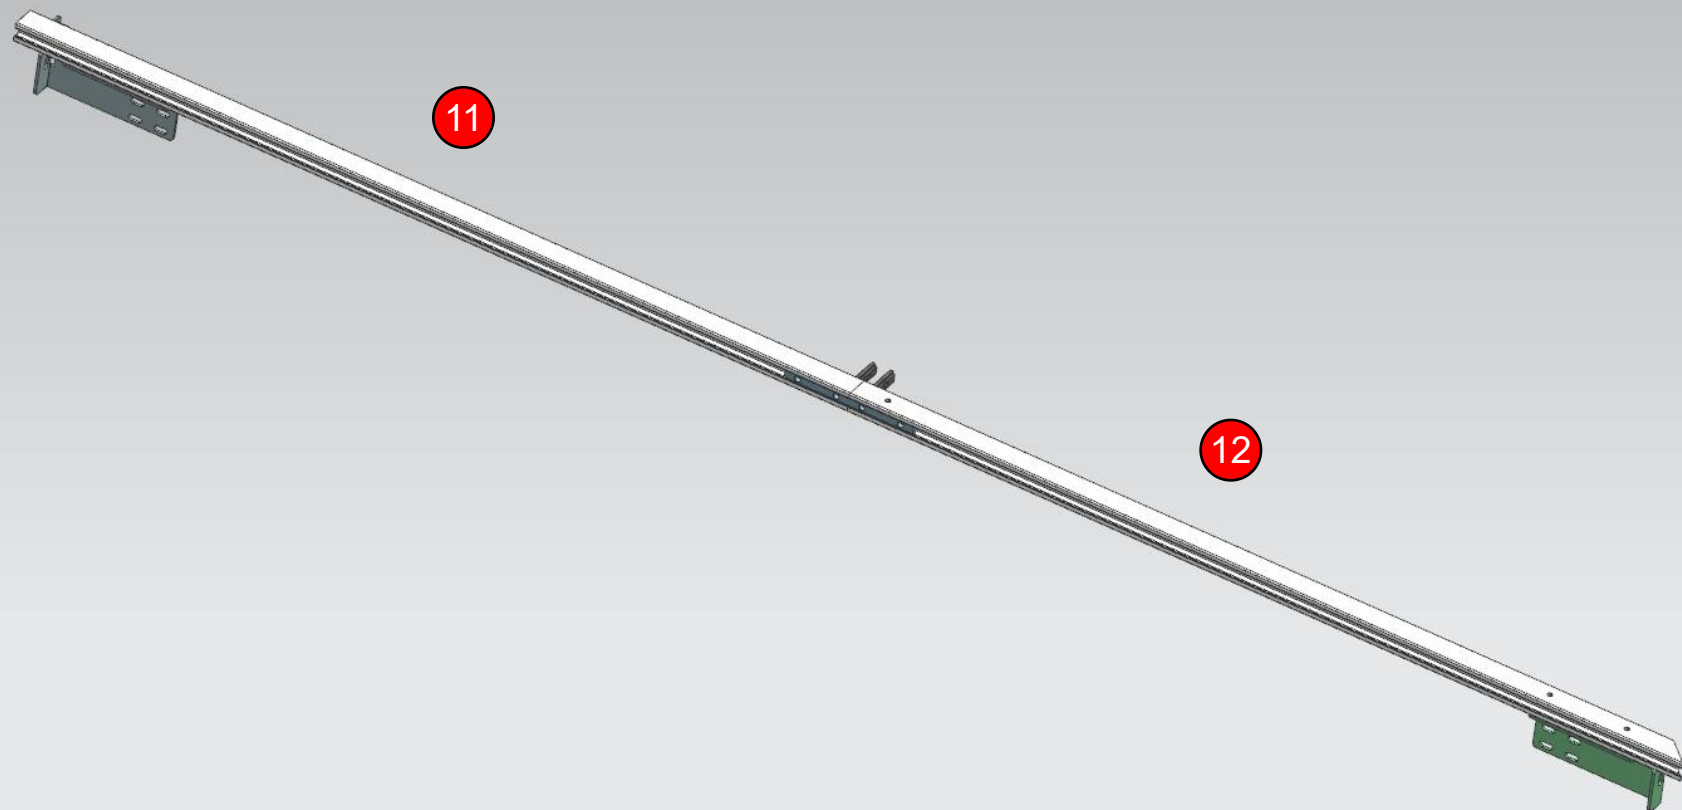


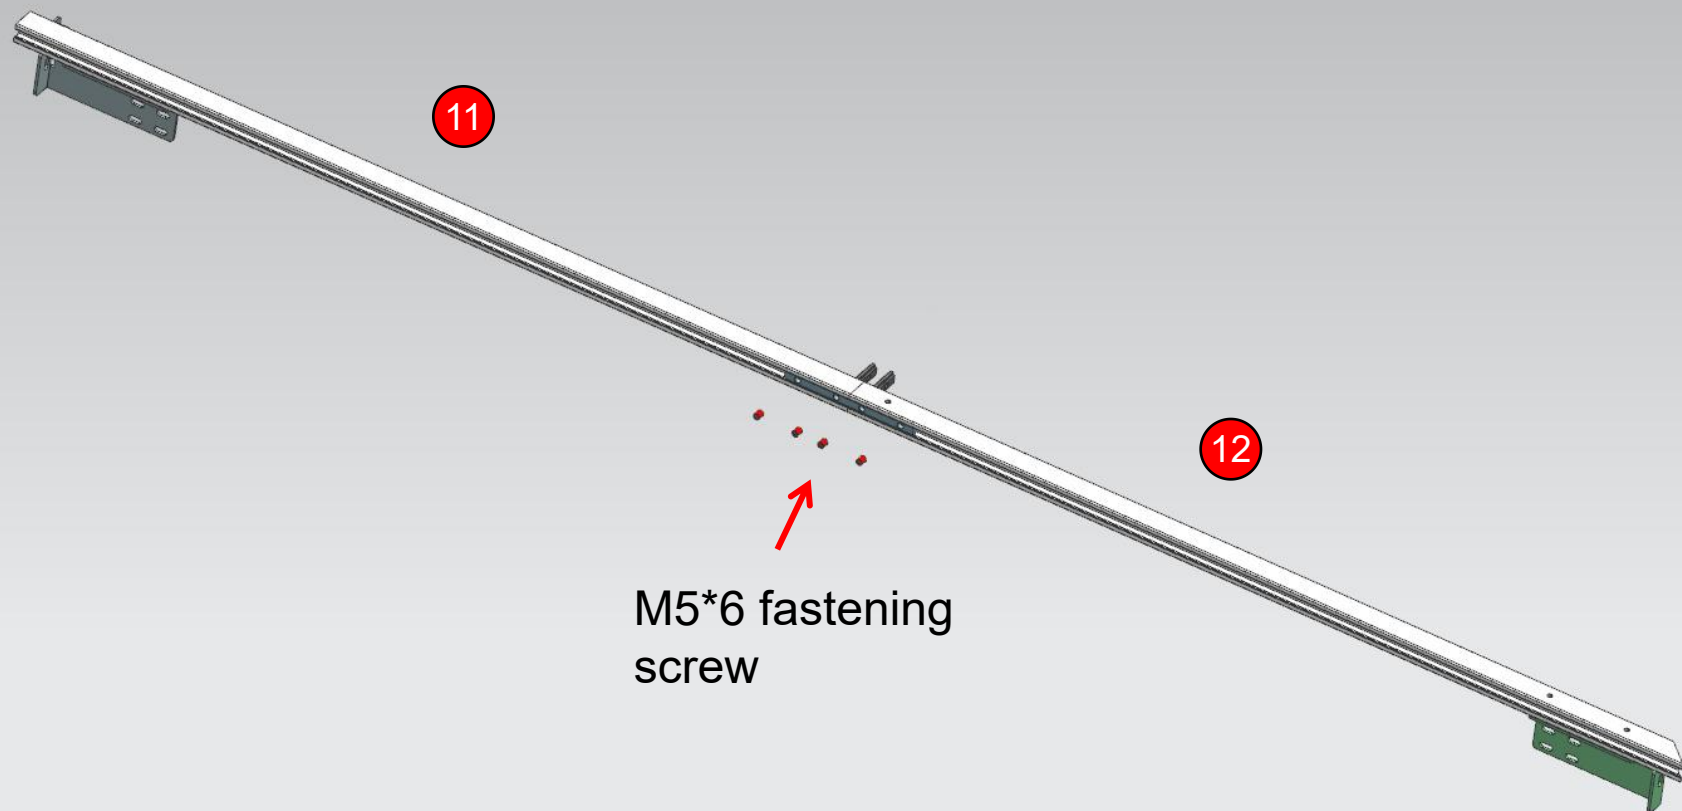



M5*6 fastening
screw

IV


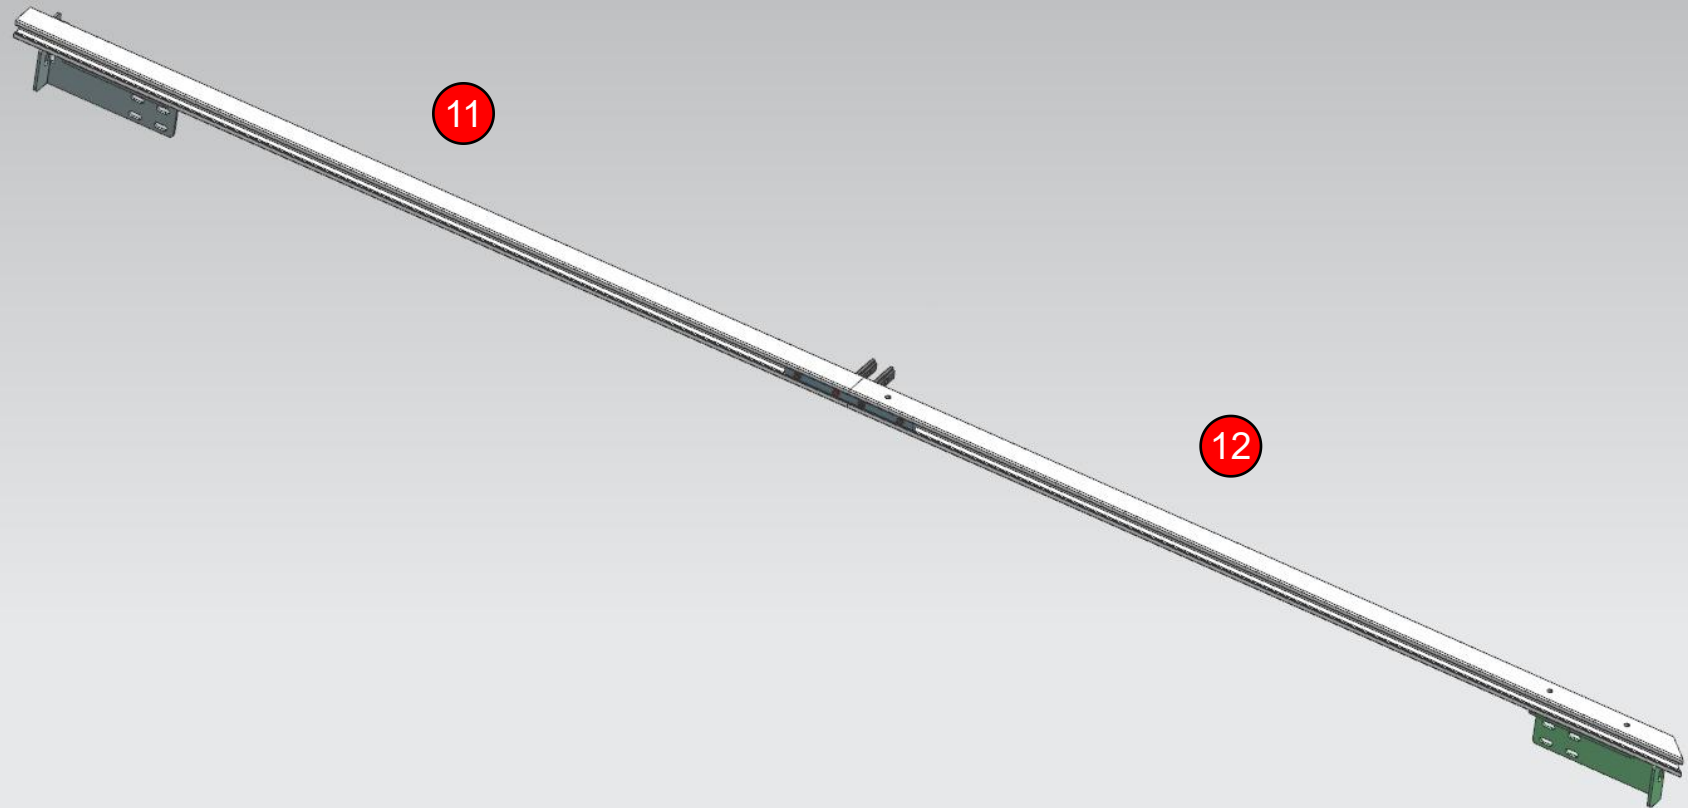


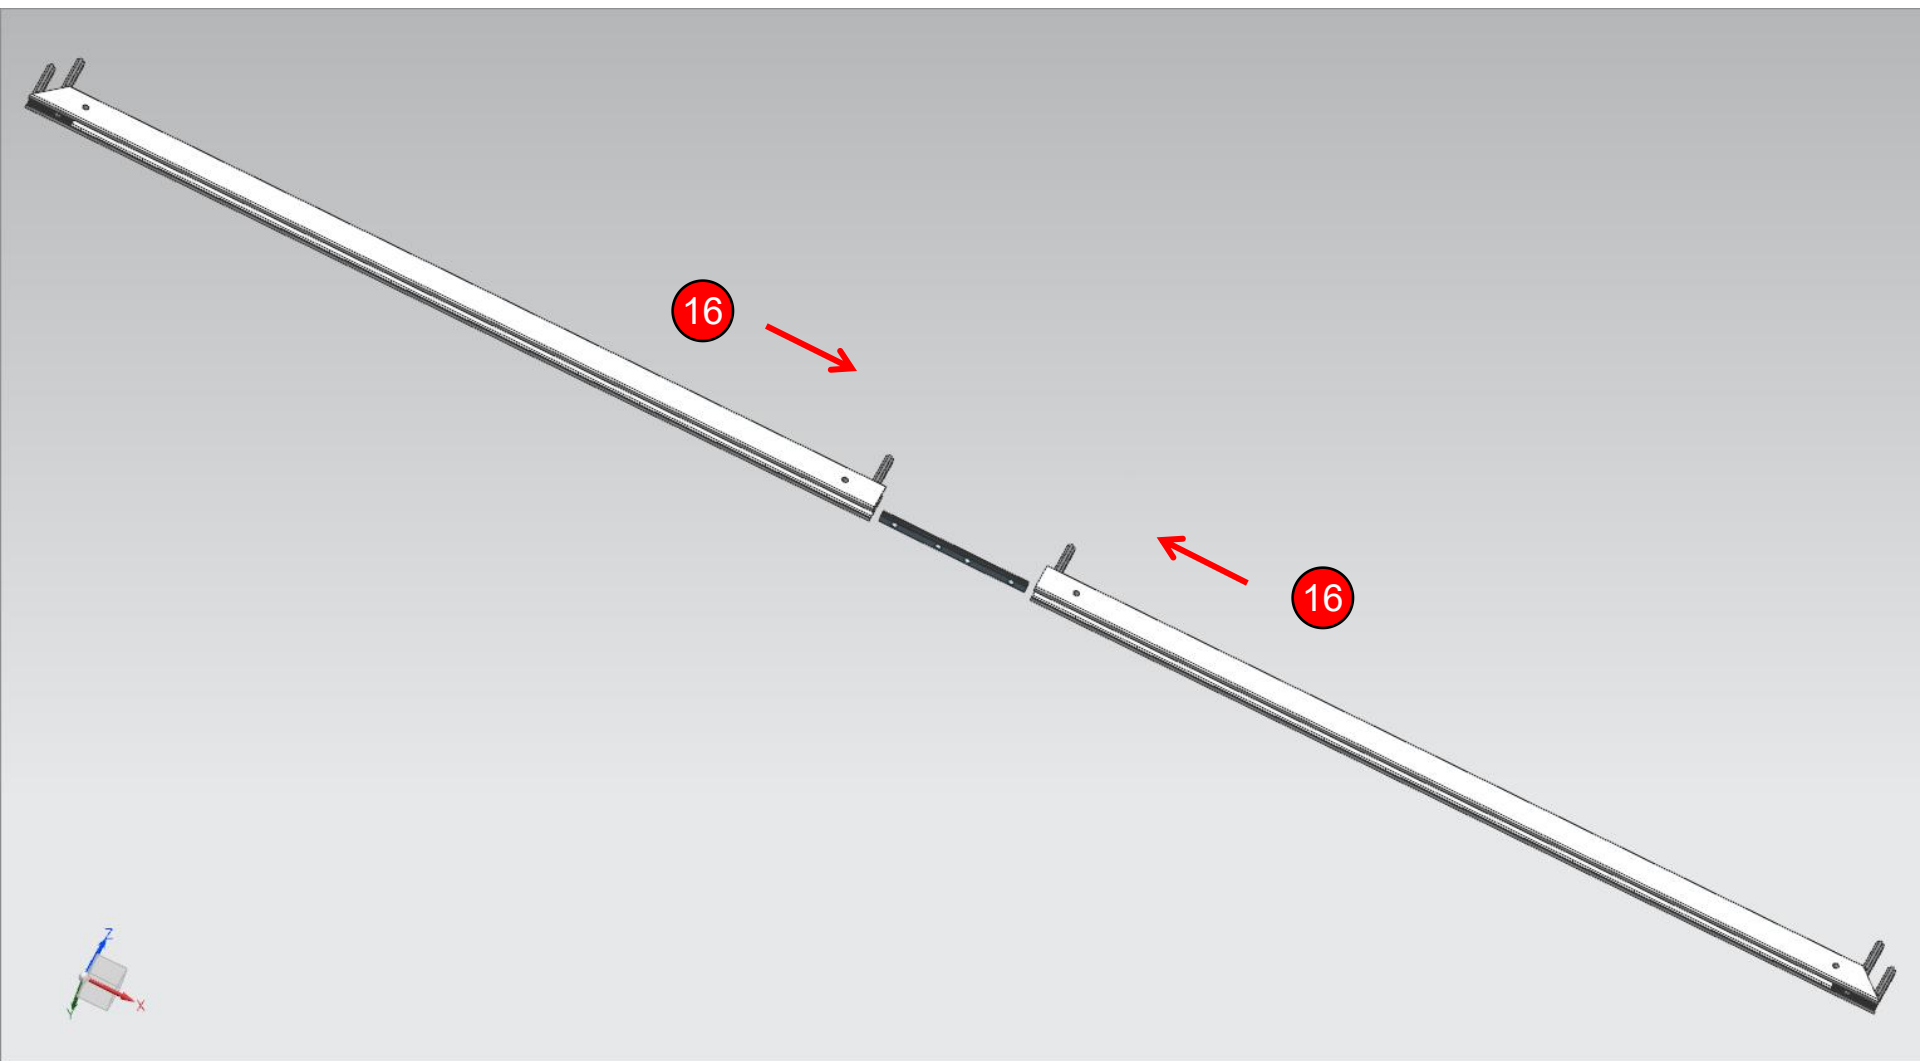


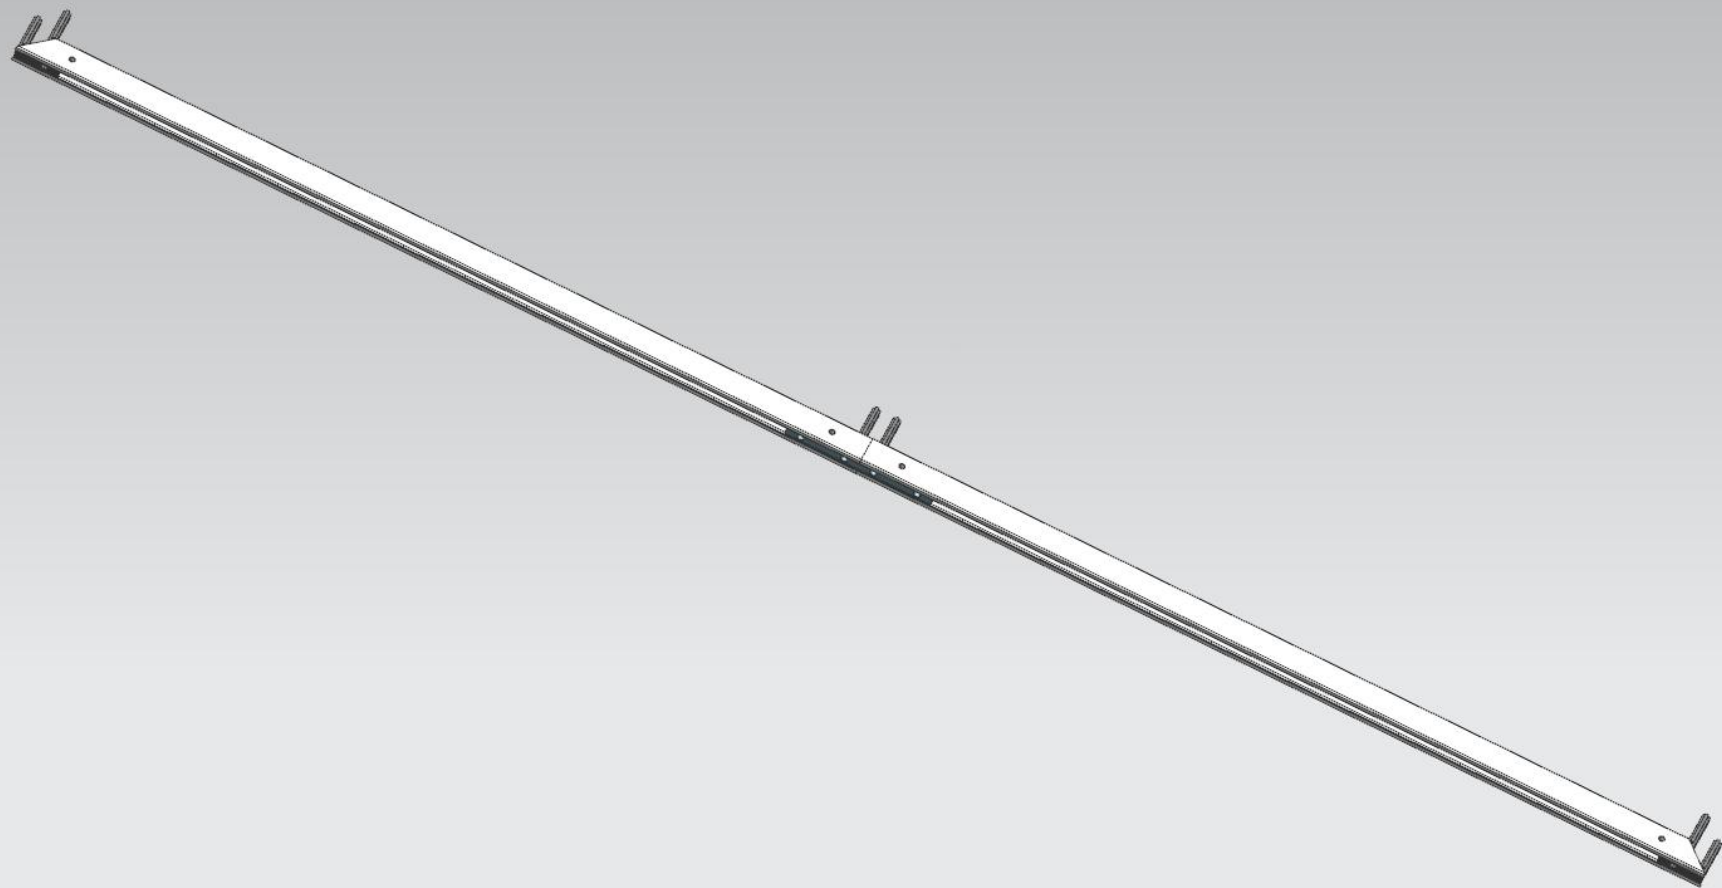



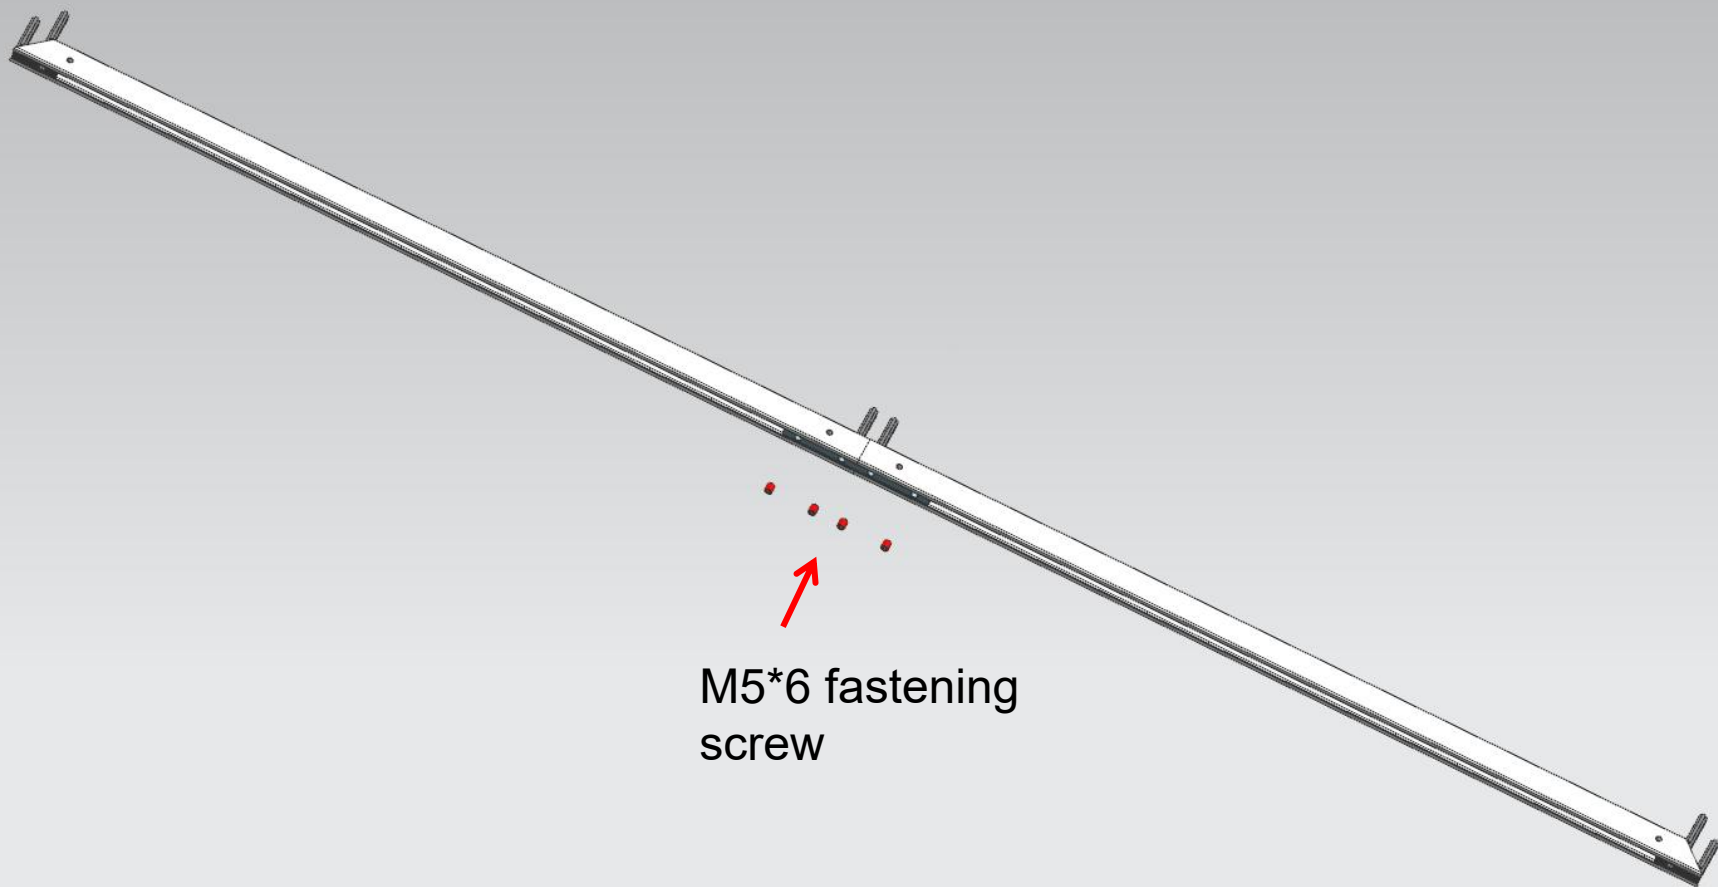



M5*6 fastening
screw

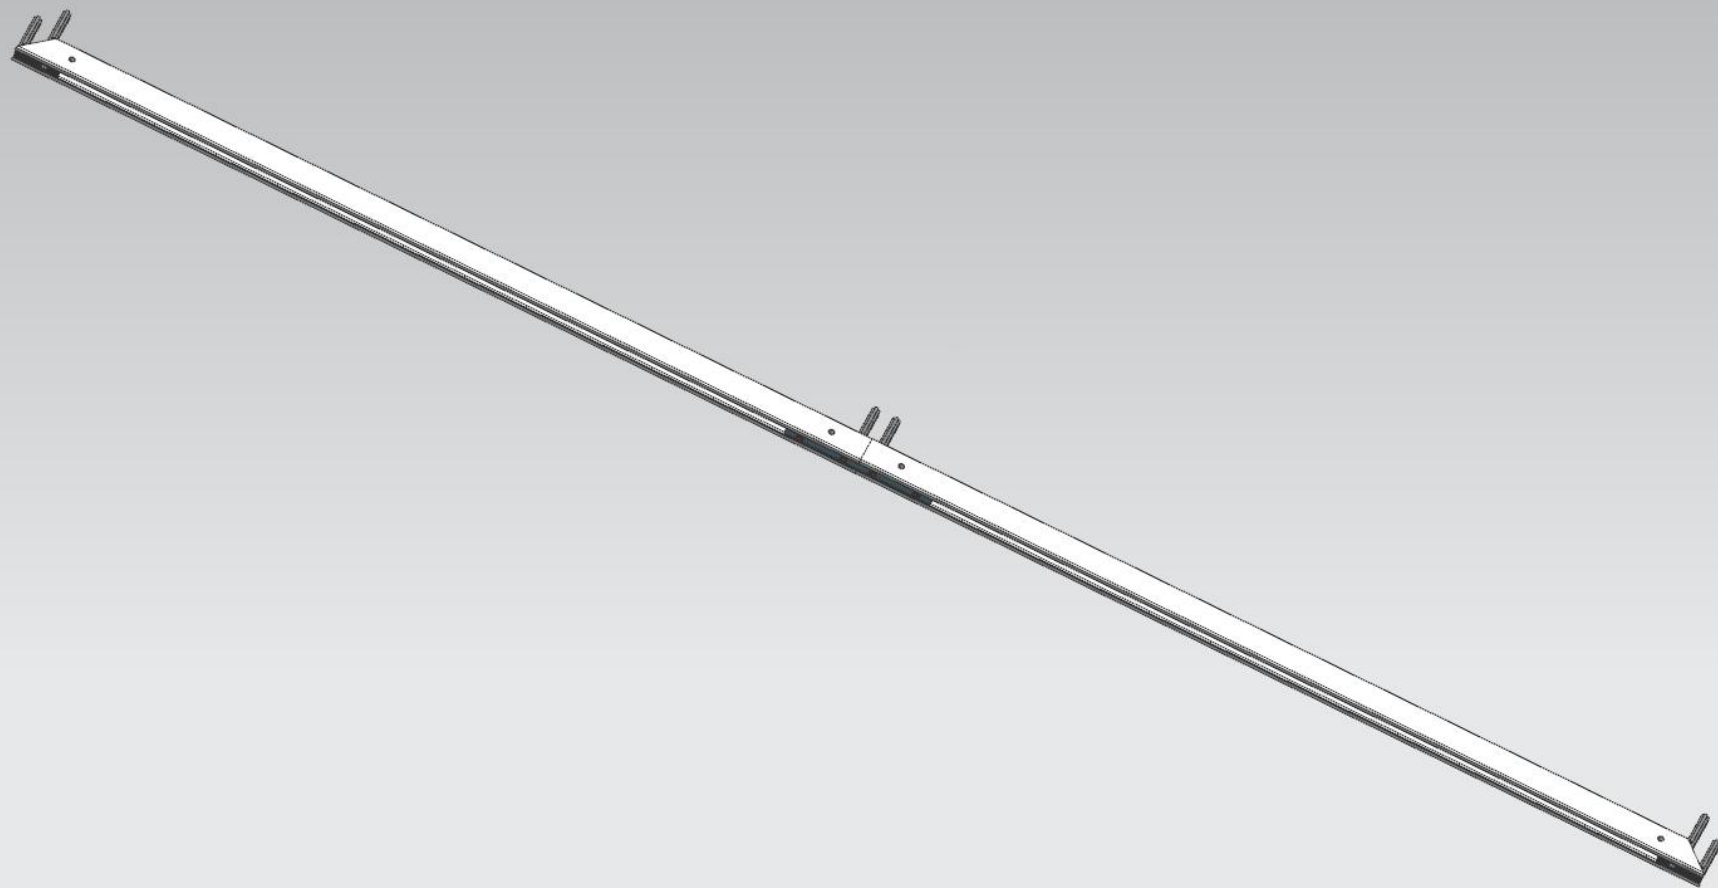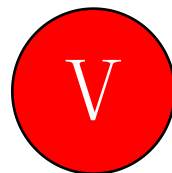


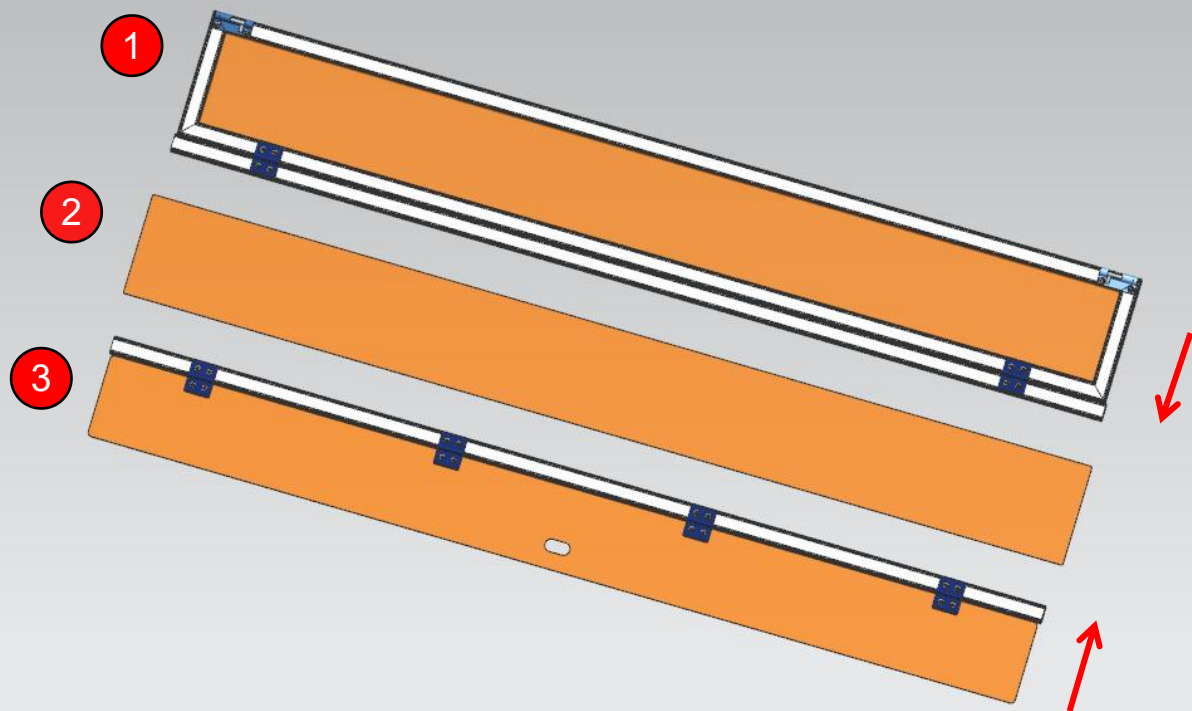


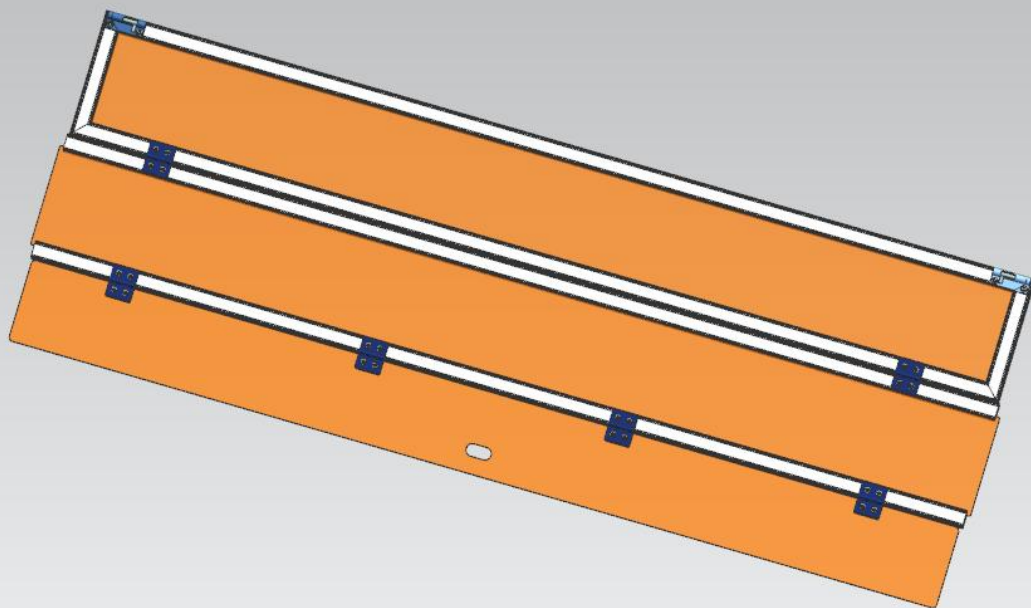


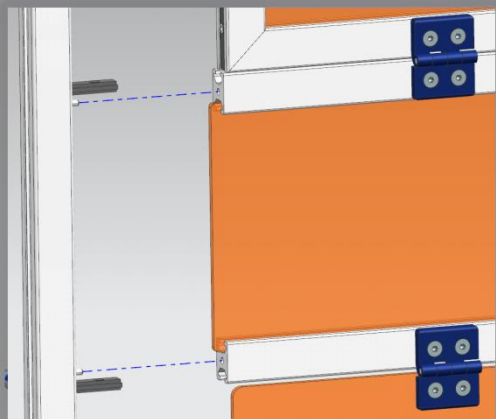
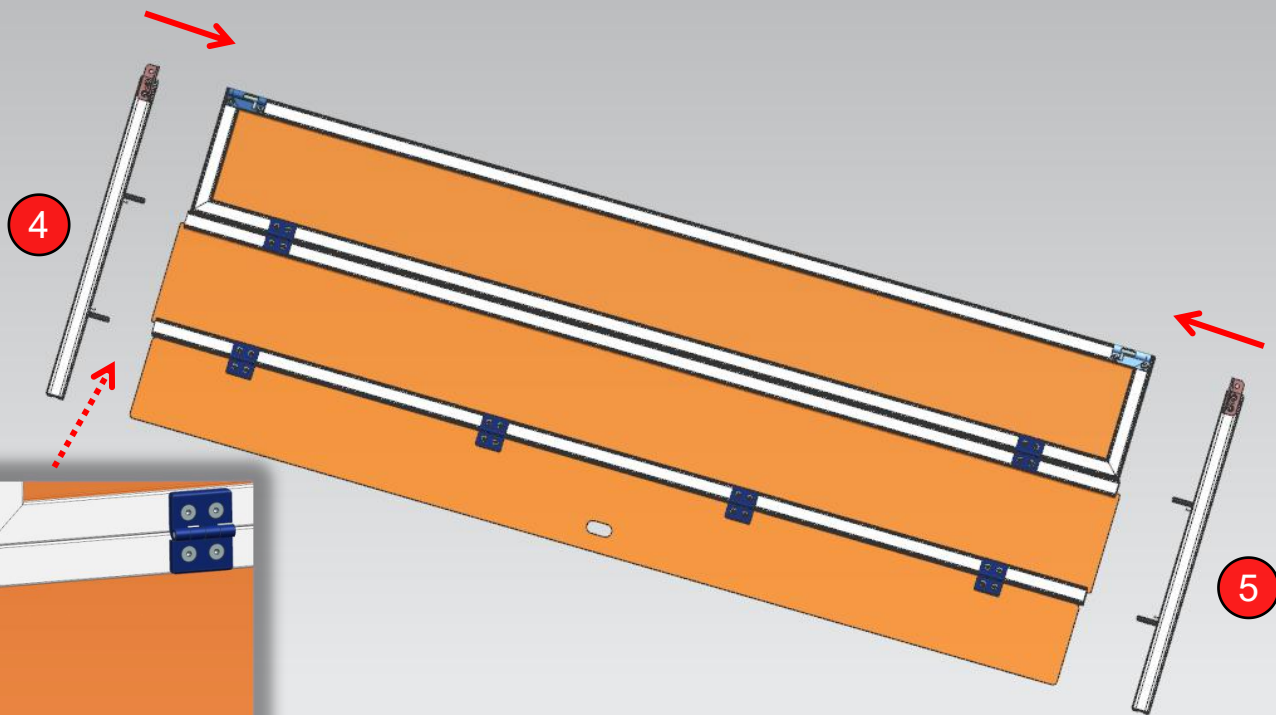


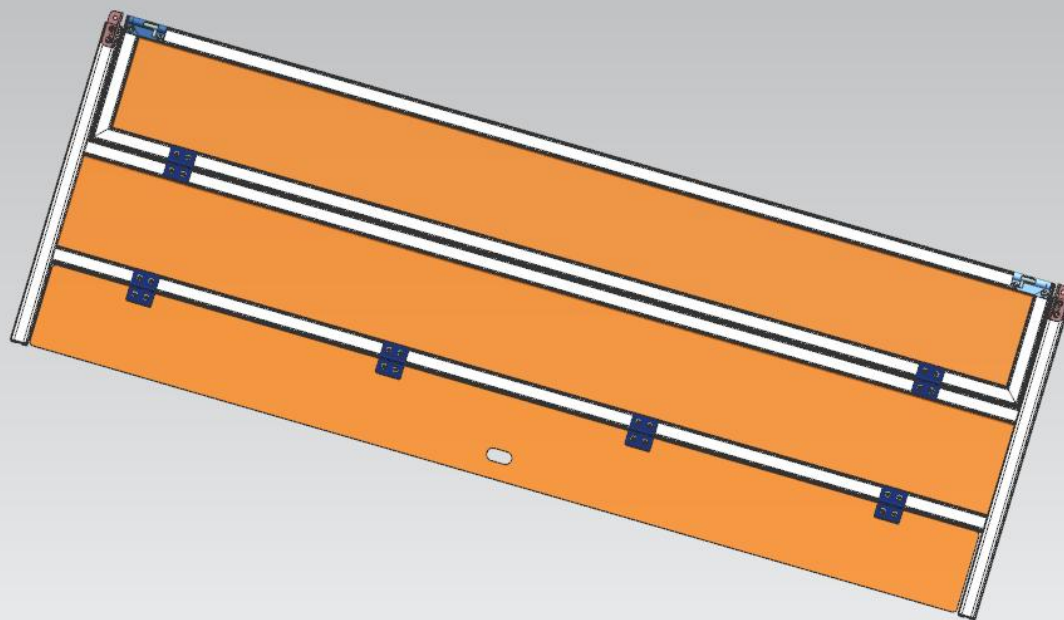


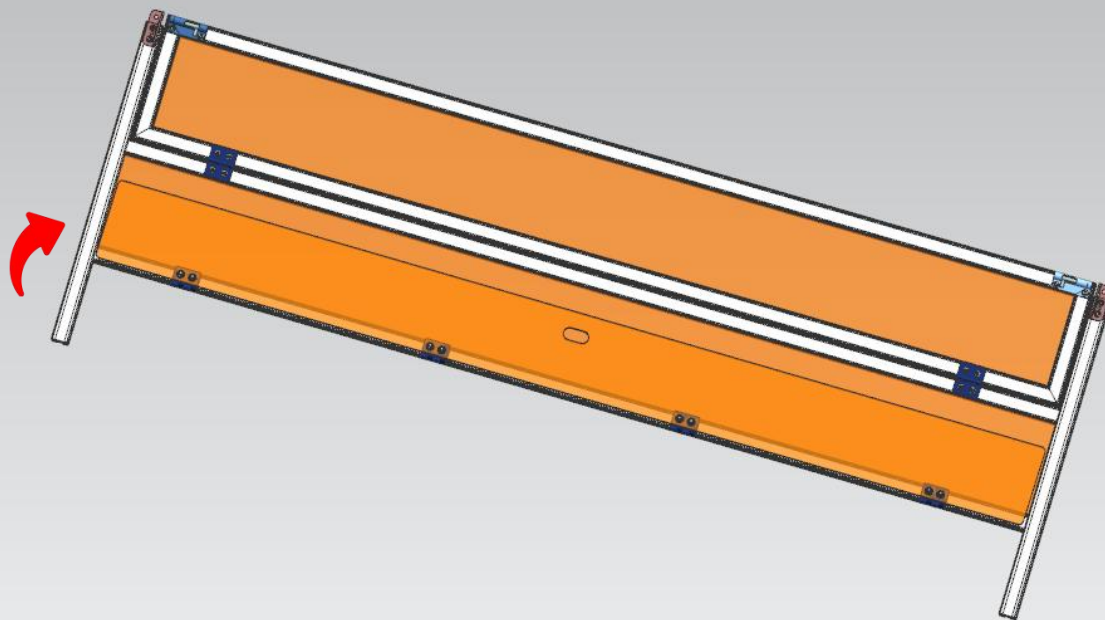


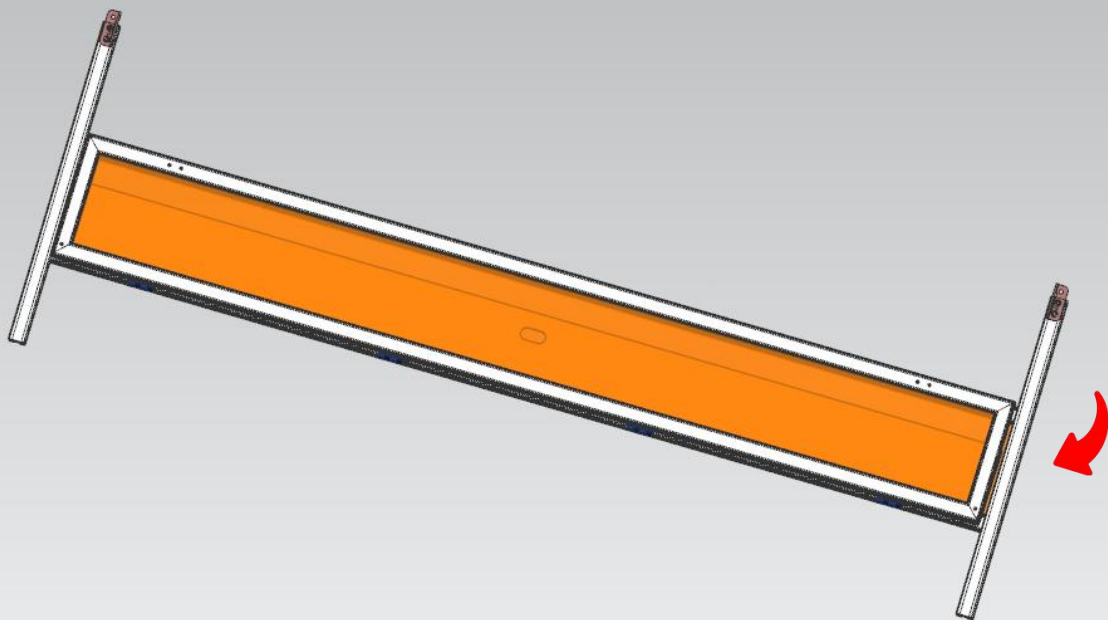

M5*6
fastening
screw

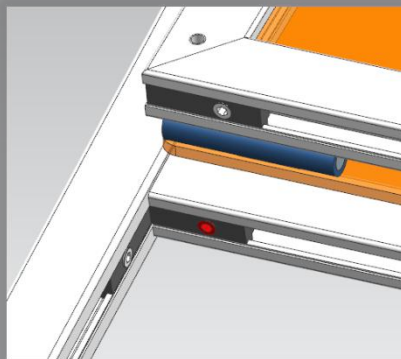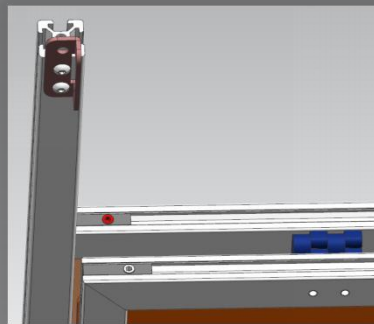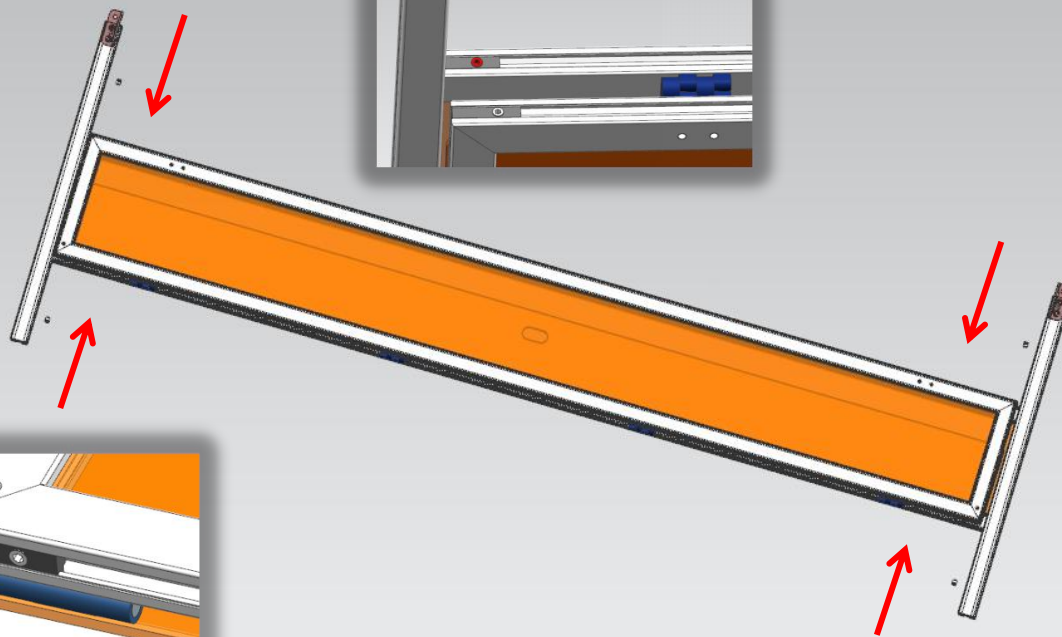

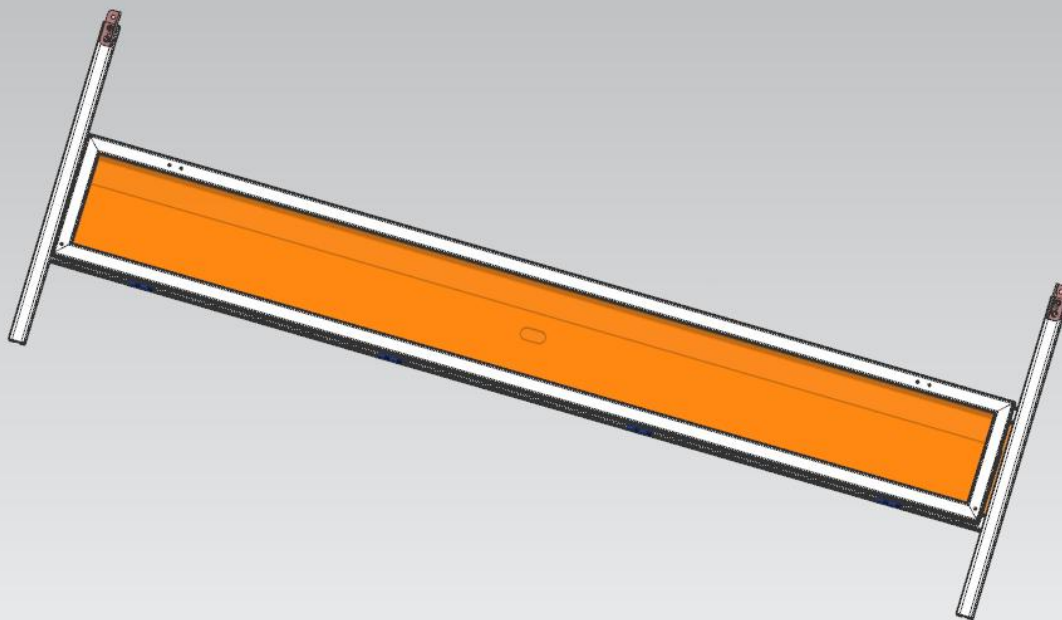



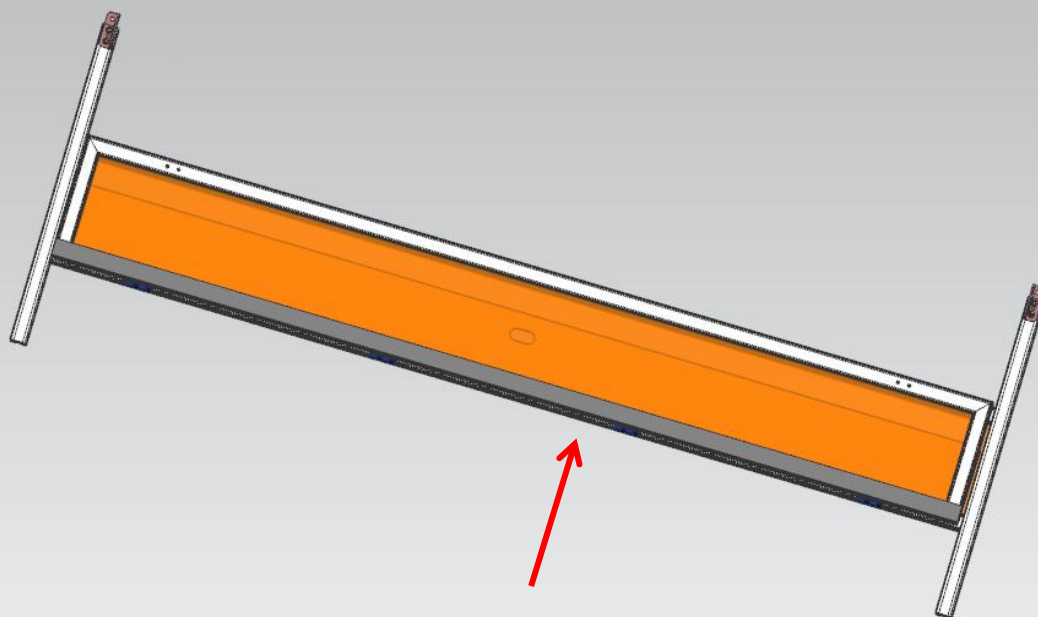



Attach EVA foam





VI

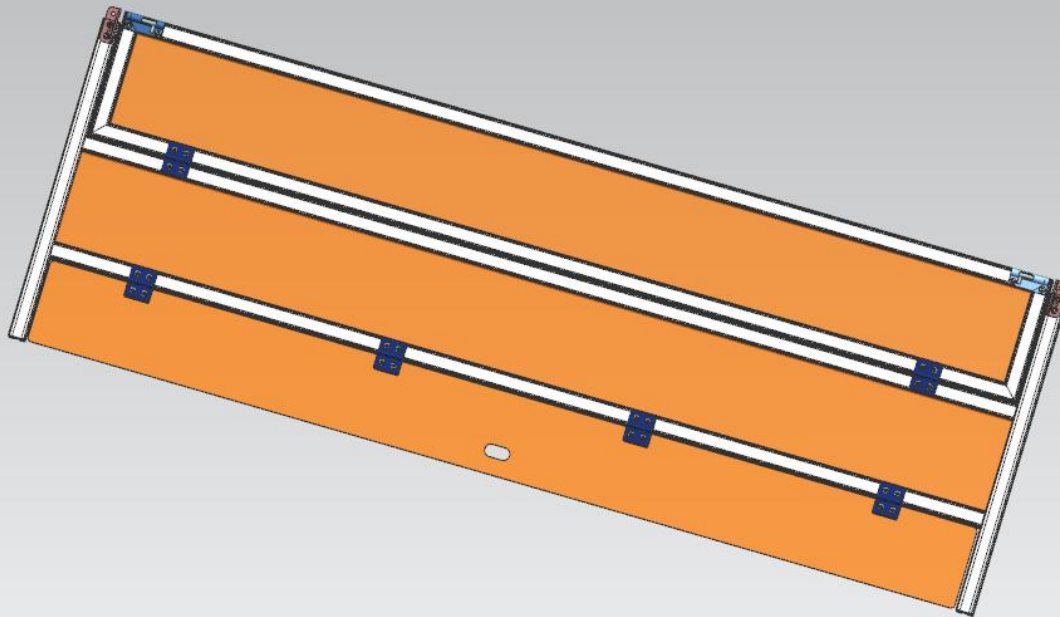


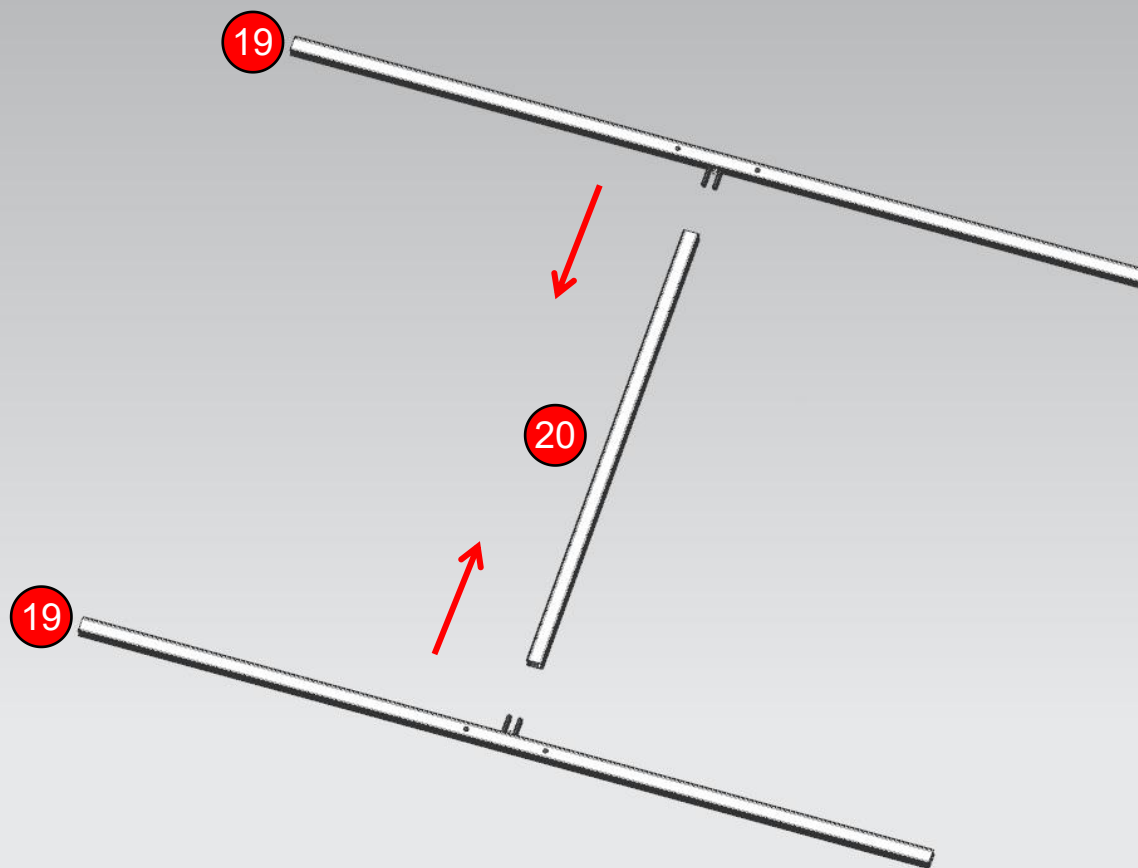


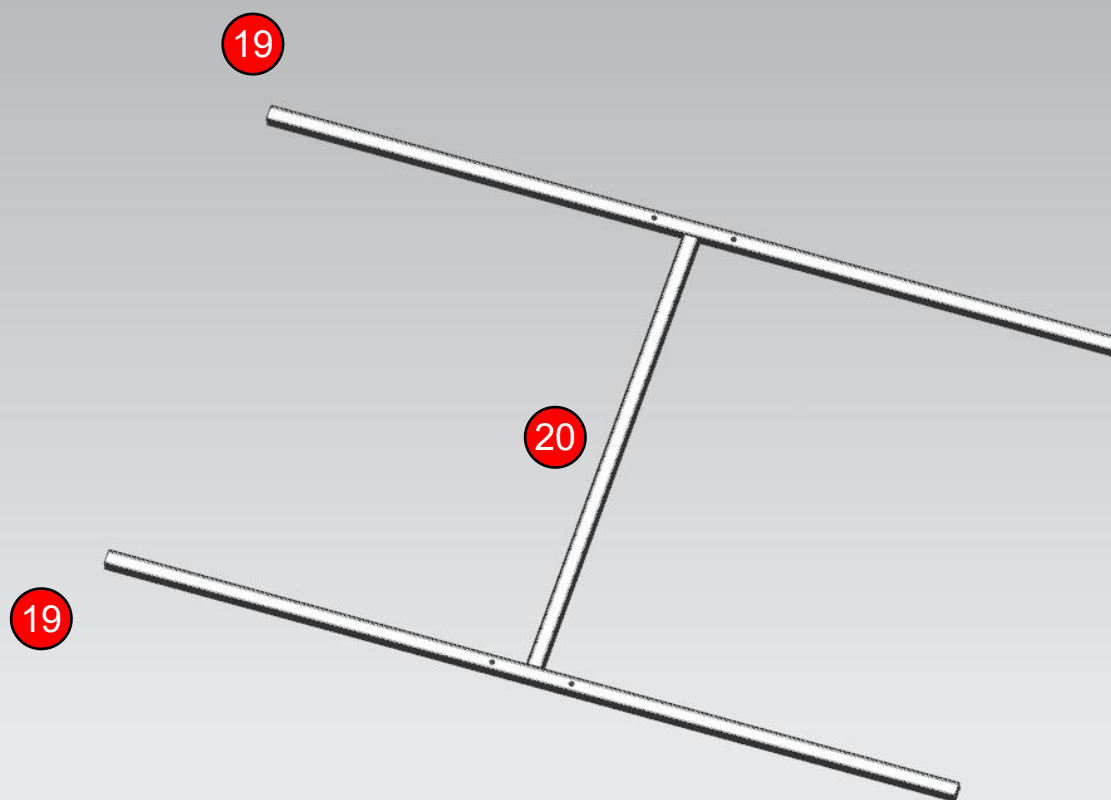




M5*6
fastening
screw

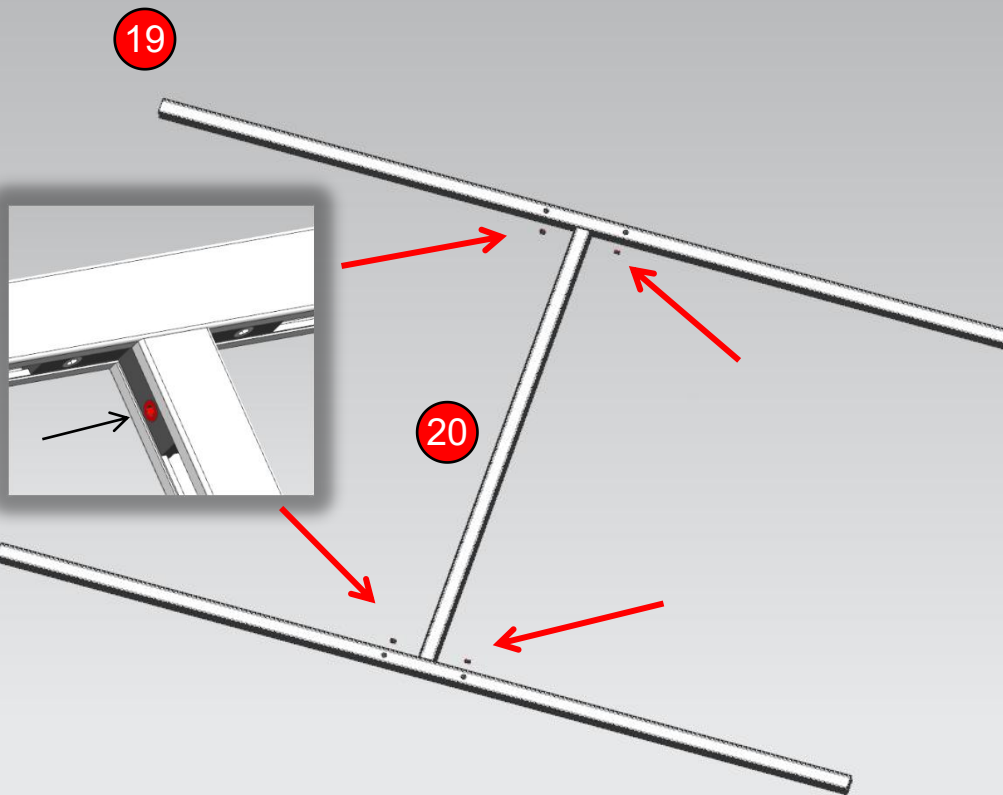


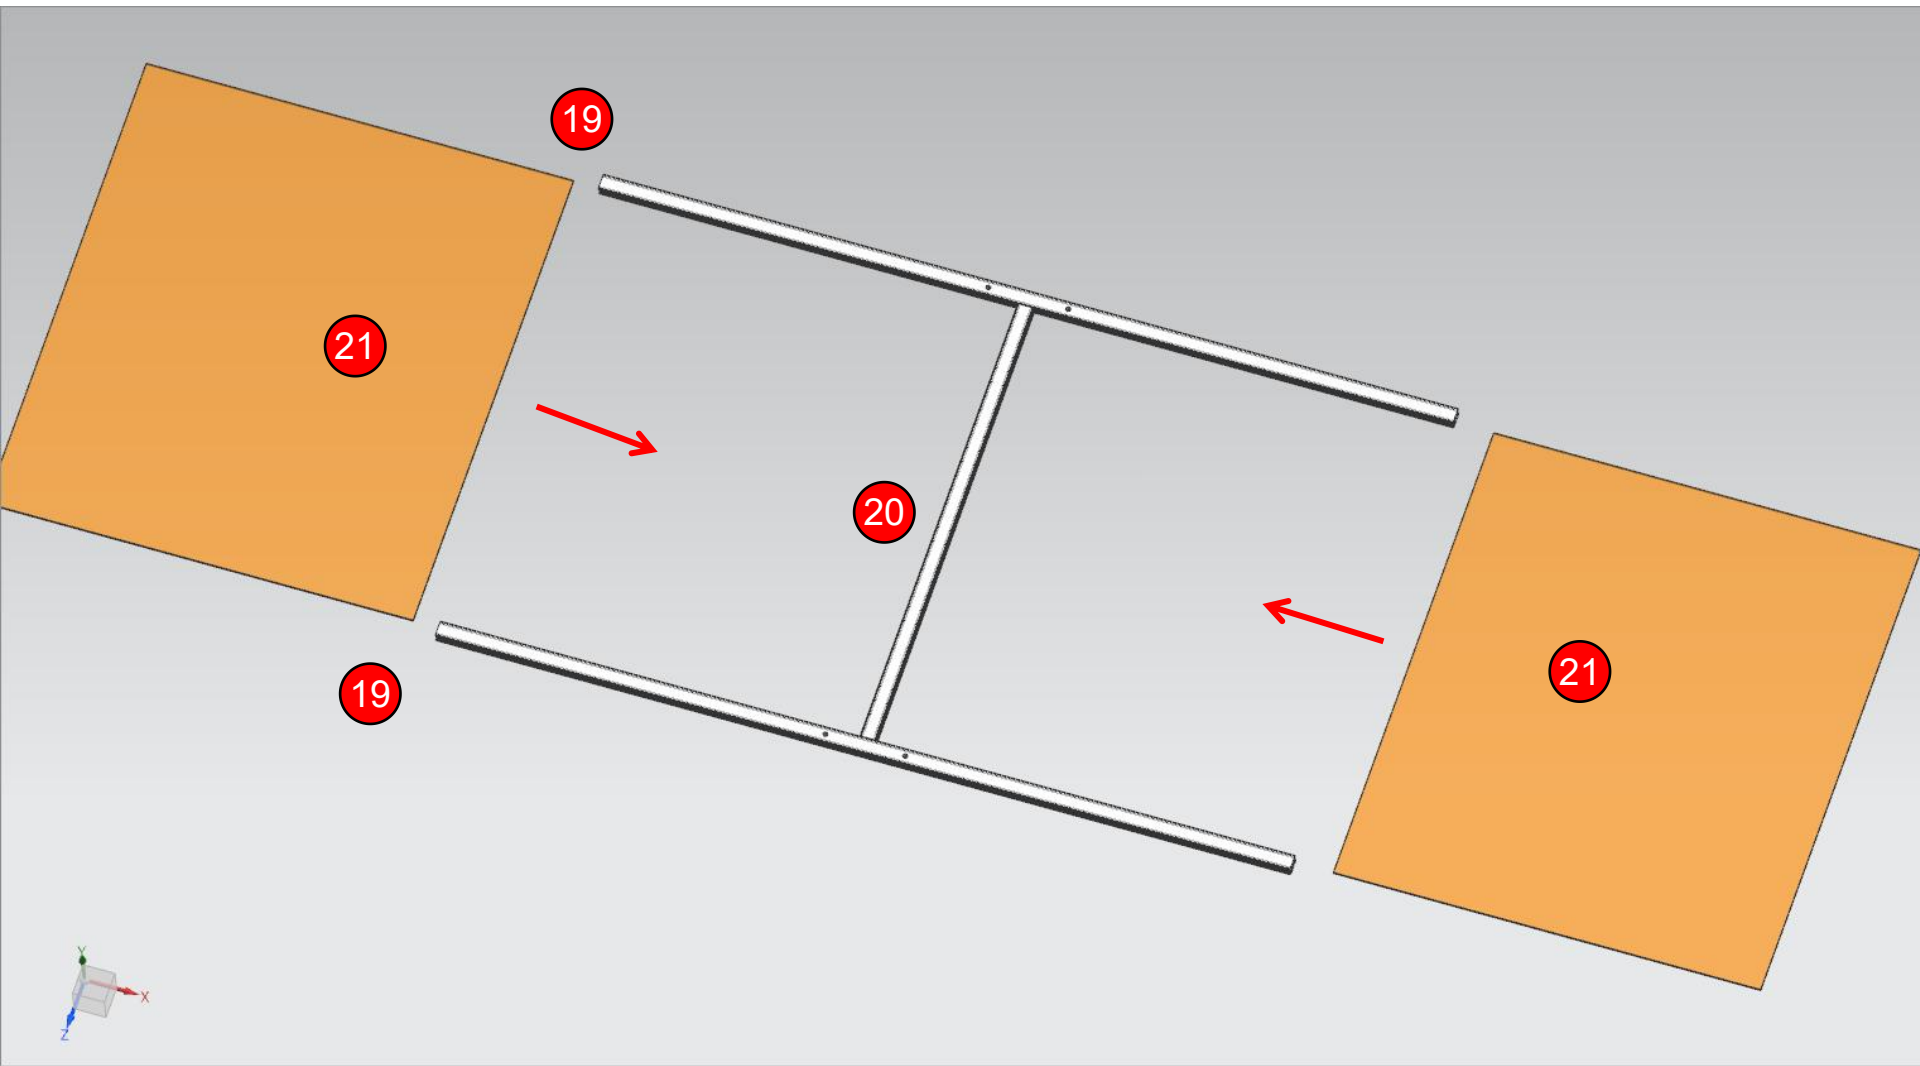

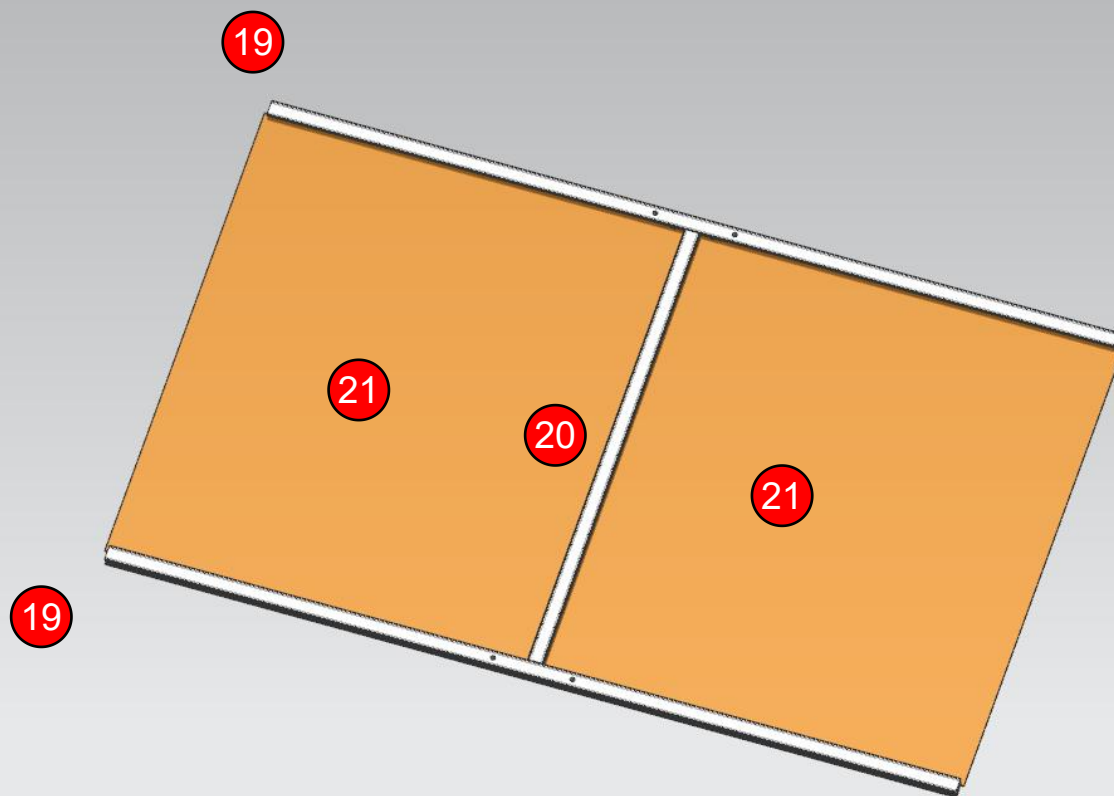


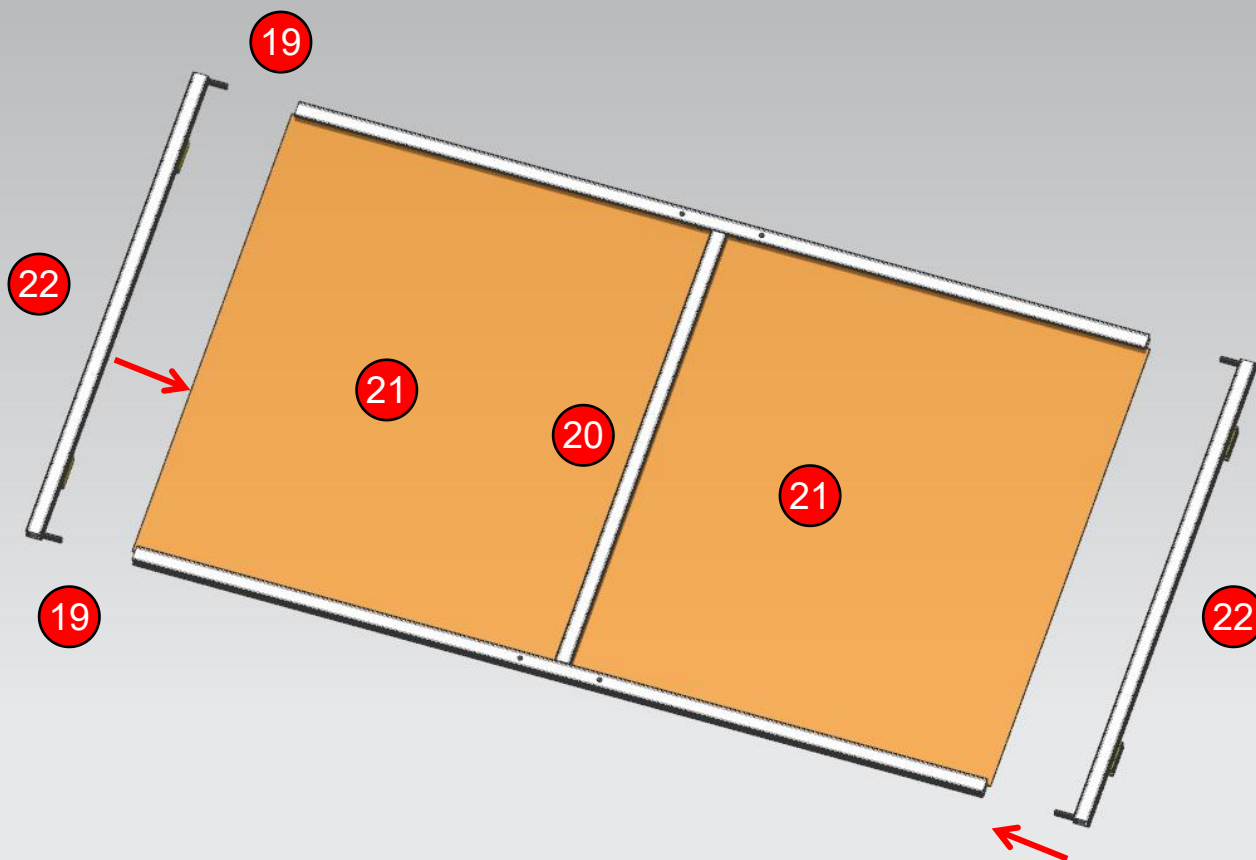


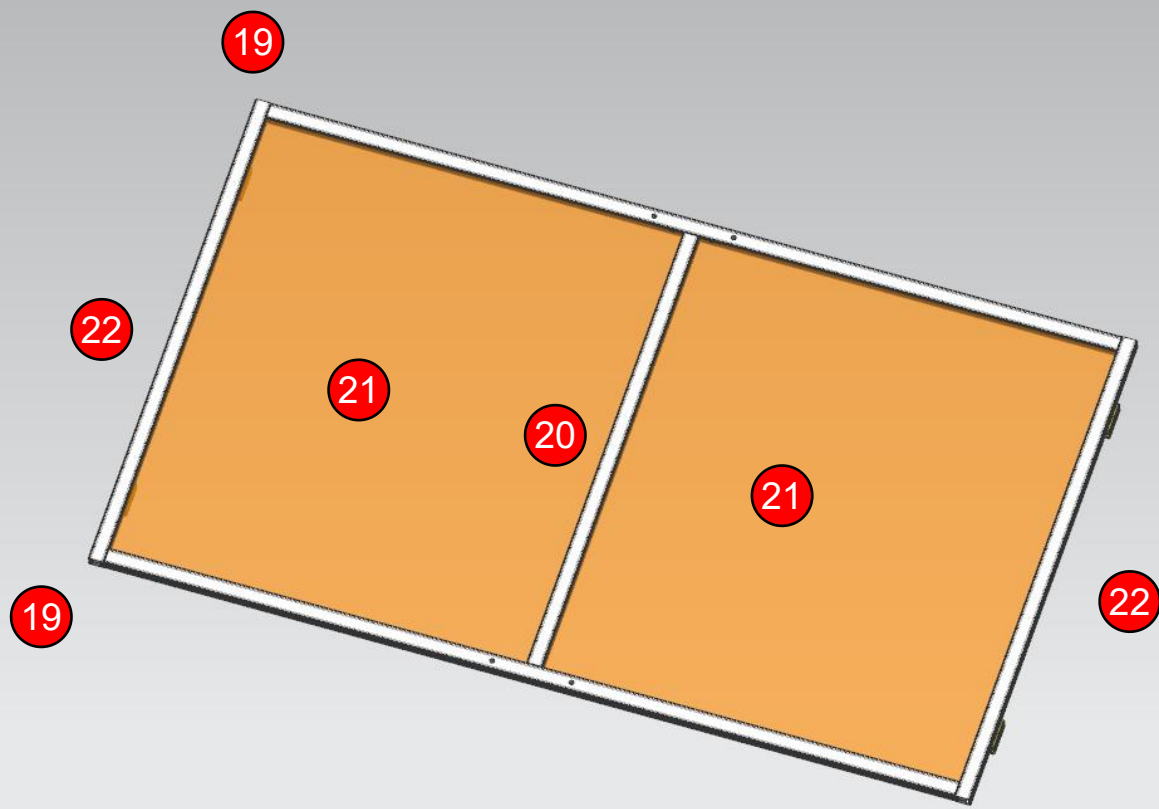


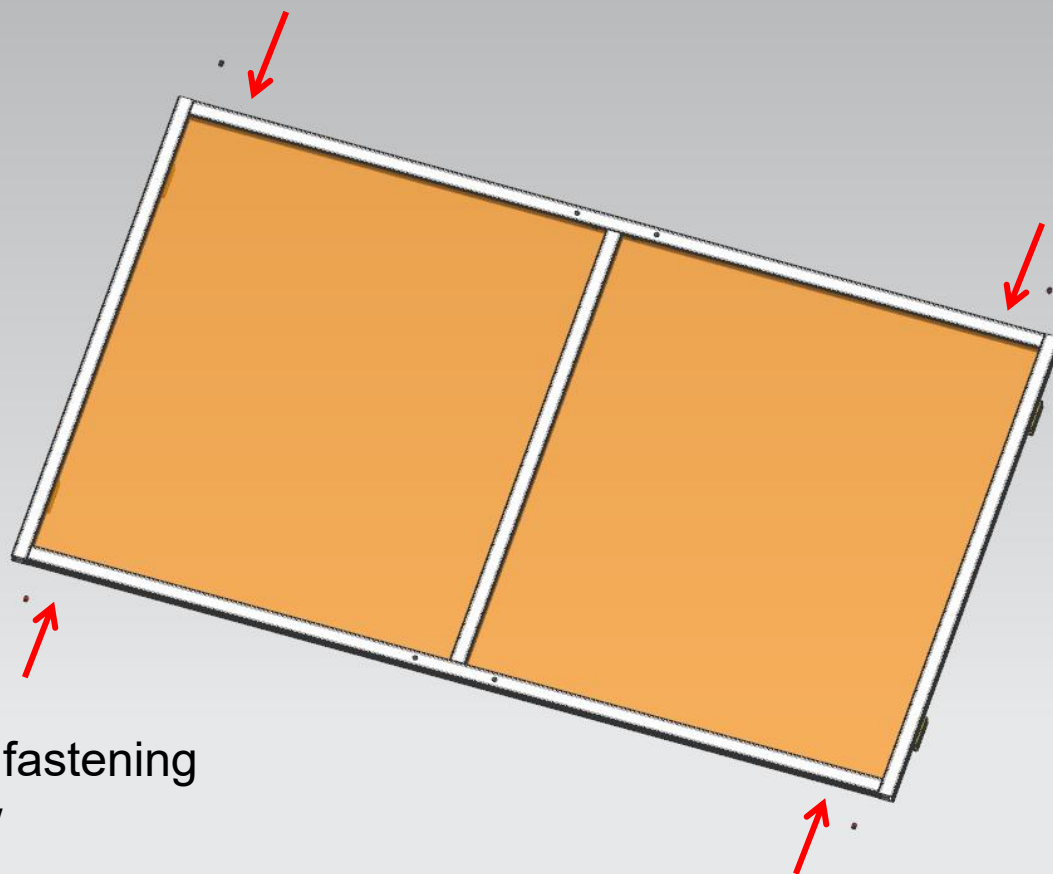

M5*6 fastening
screw




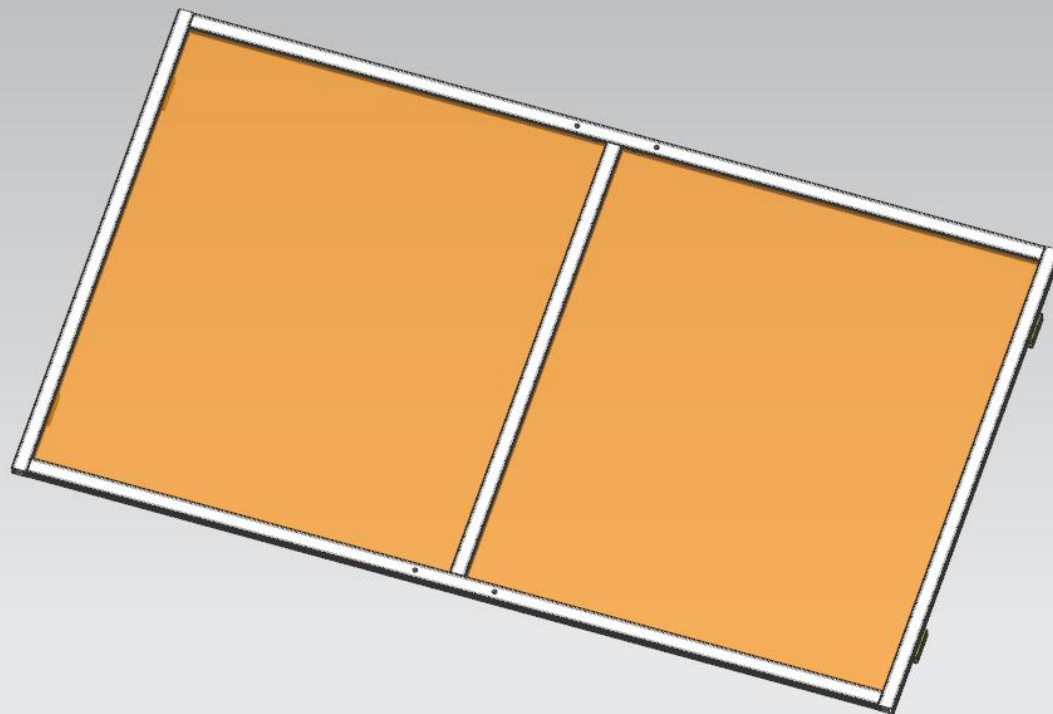


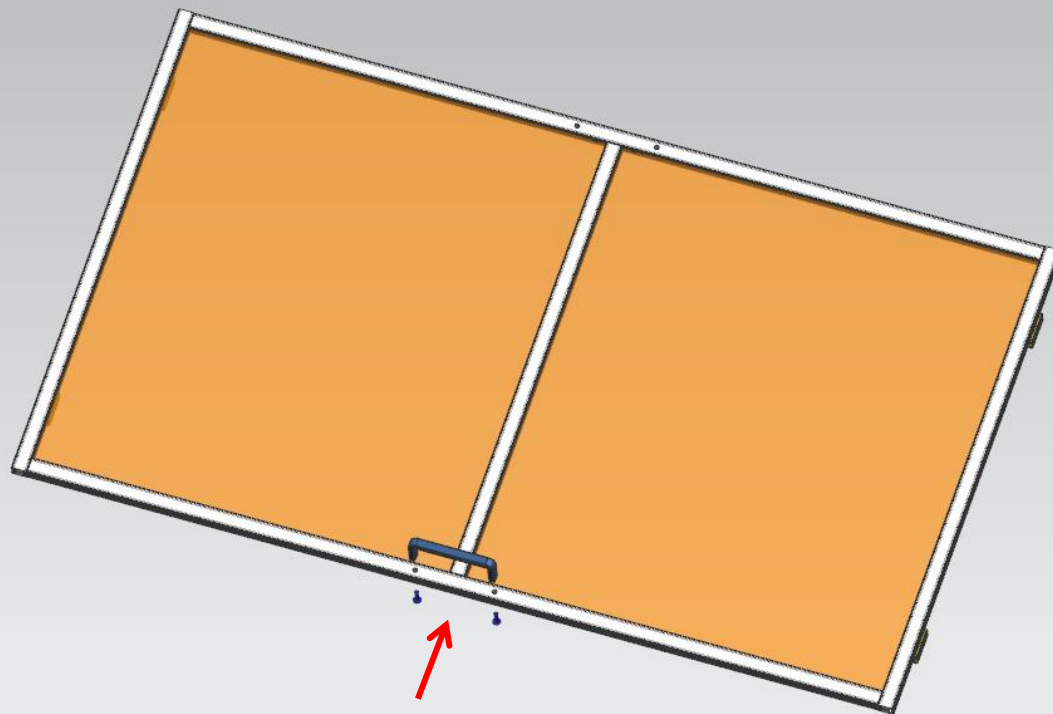


M5*20 flat round head screw
No distinction between front and
back






VII

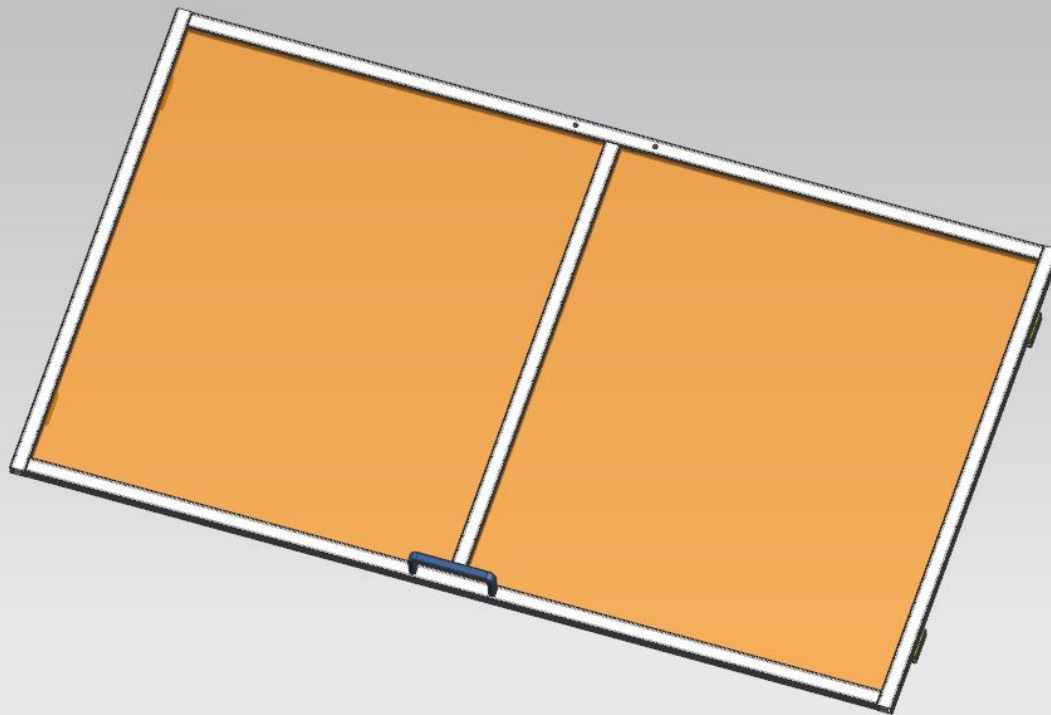

VIII

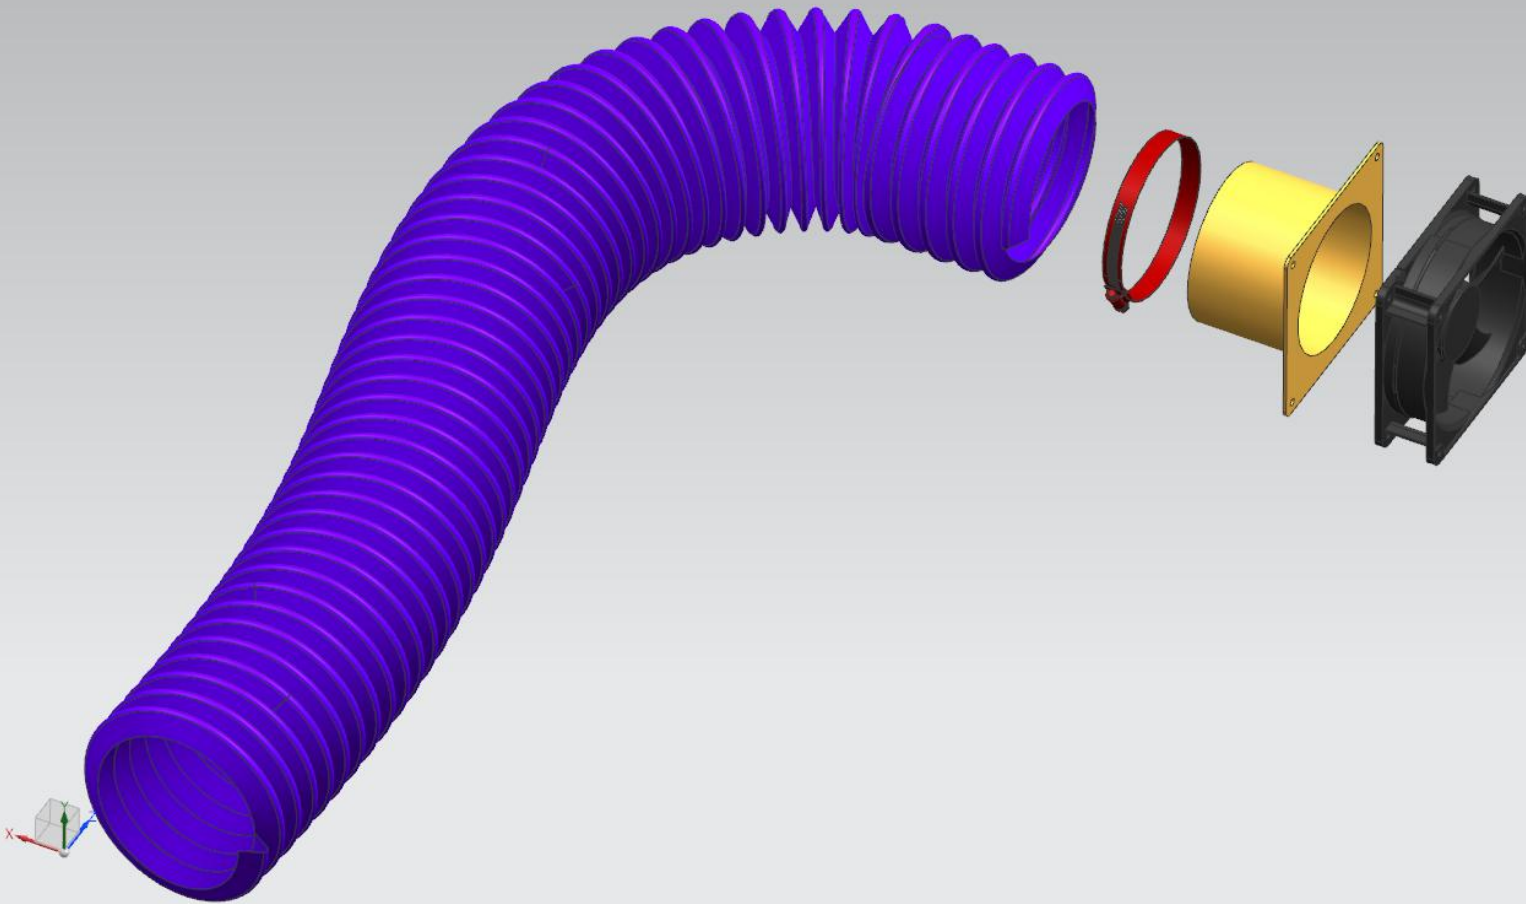

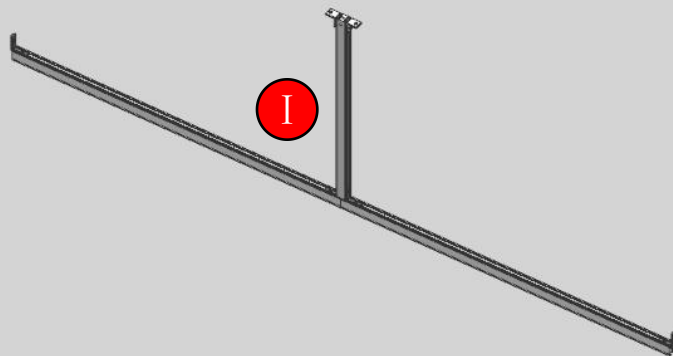

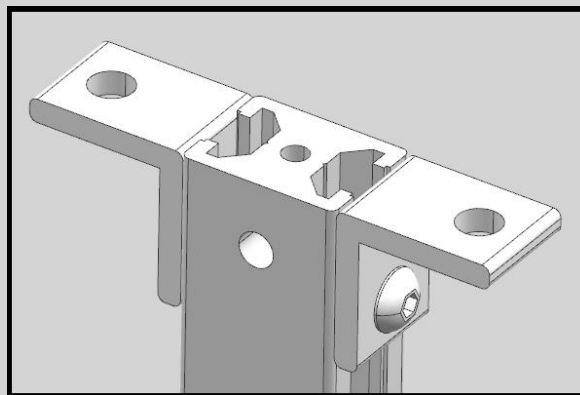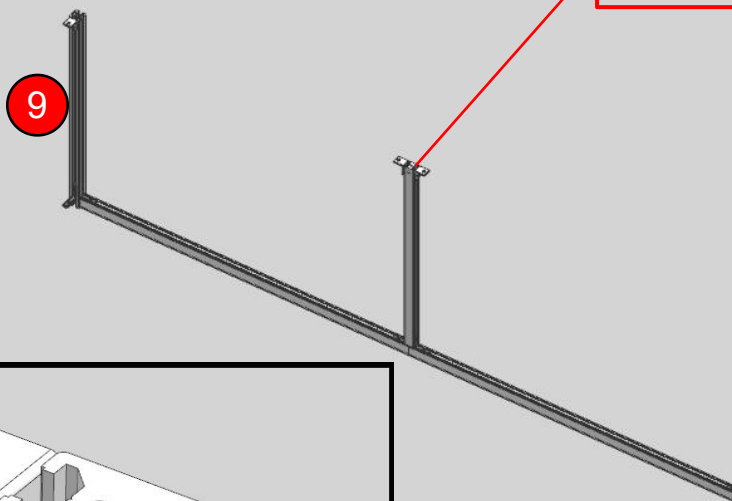


Sink hole facing outward



II

Sink hole facing outward




M5*6 fastening screw

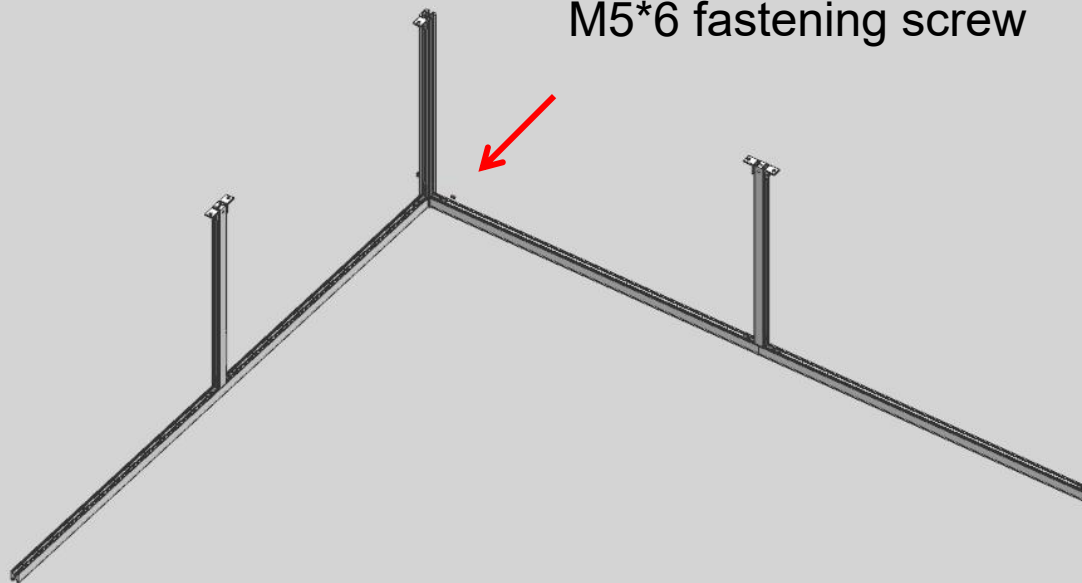


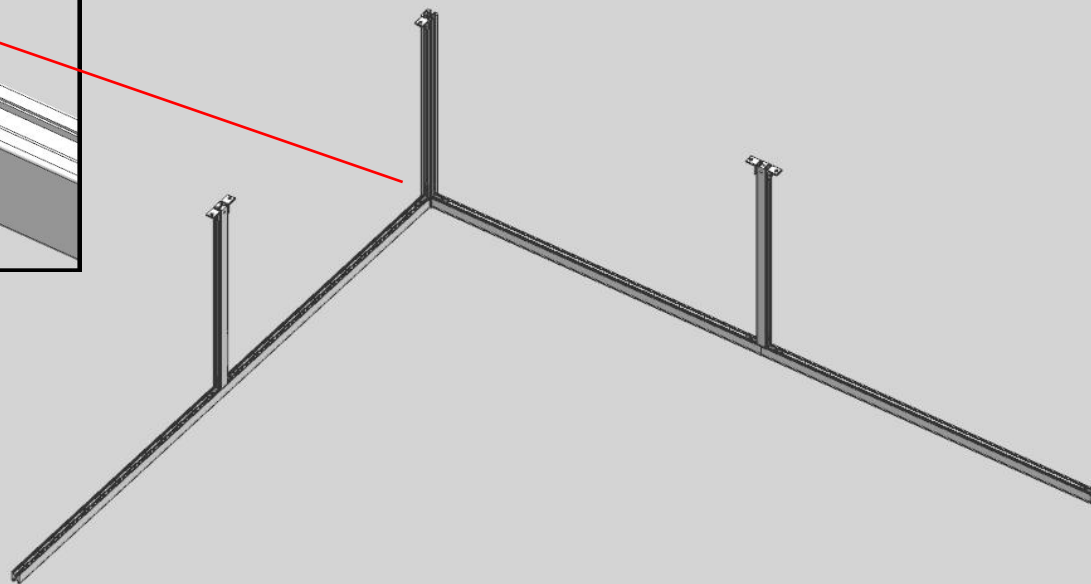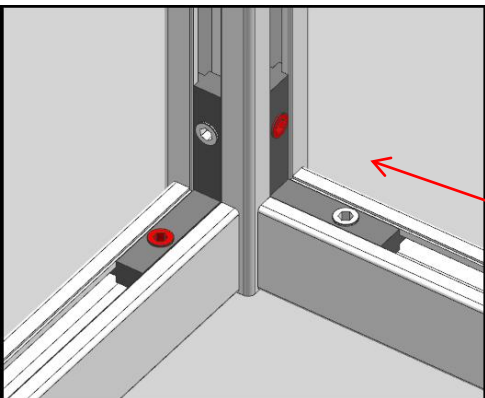

10




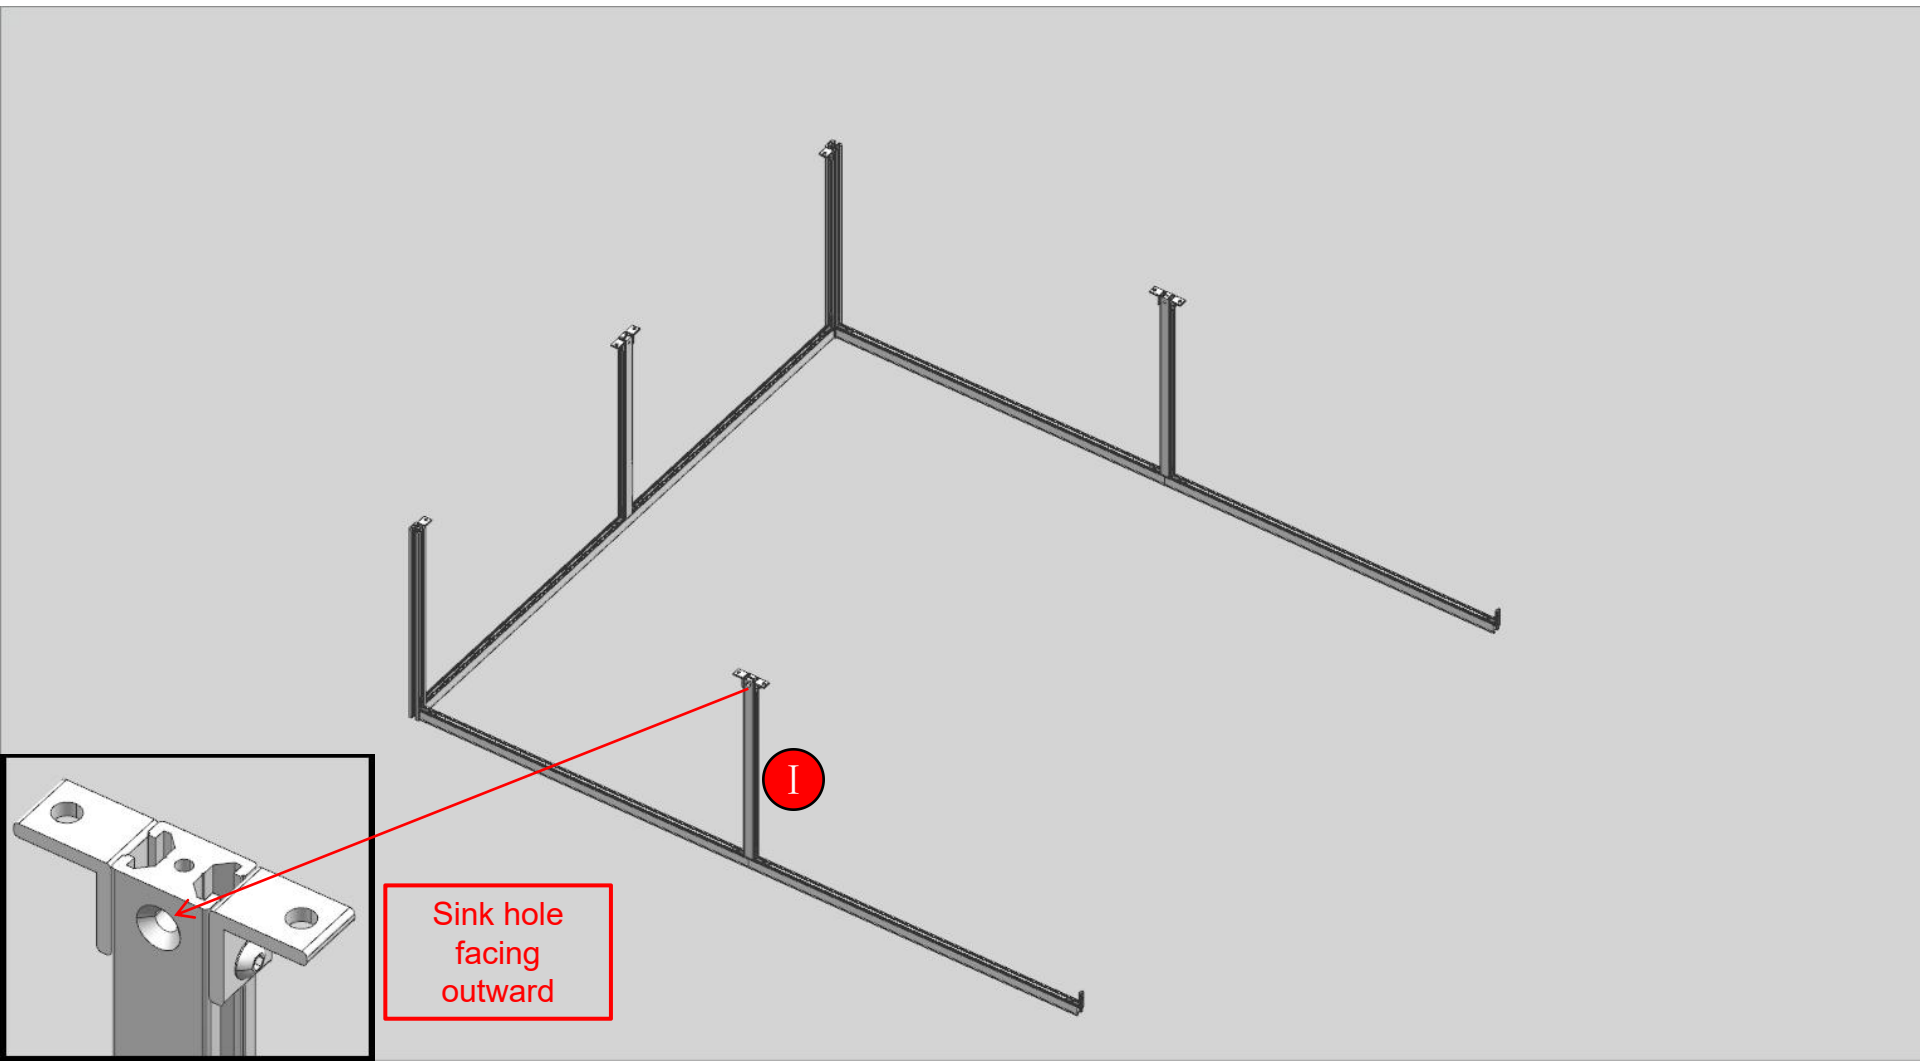

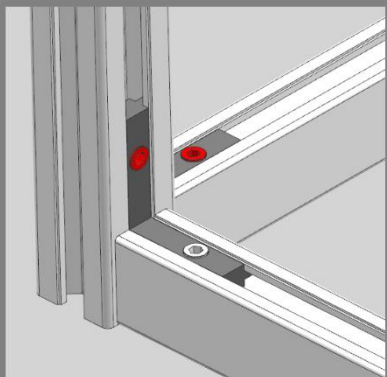

M5*6 fastening
screw




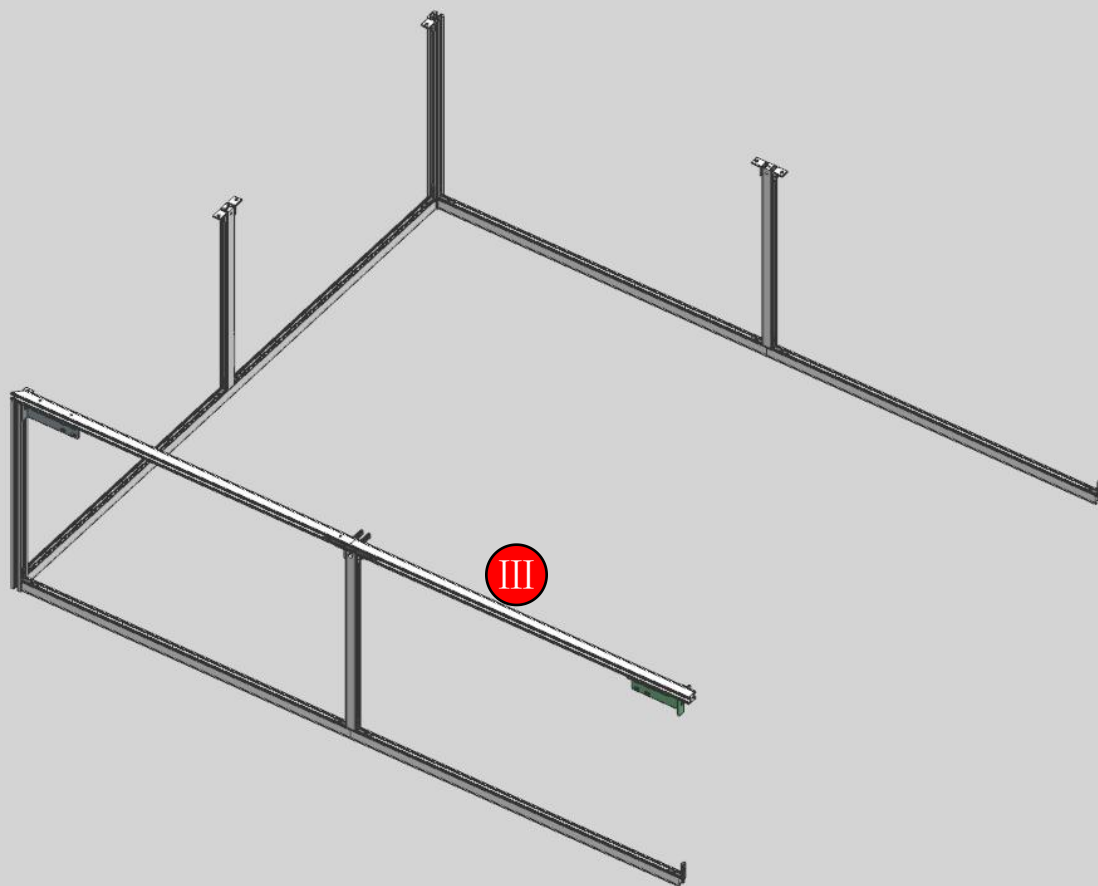


M4*16 flat round
head screw

M4*8 flat round head screw




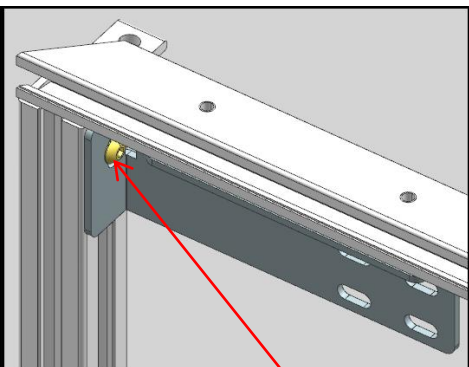



M4*16 flat round
head screw

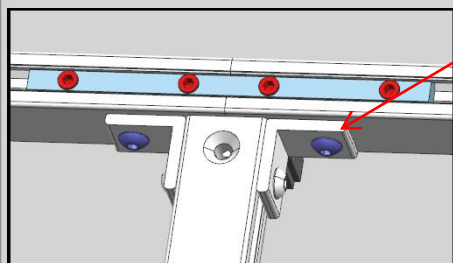

M4*8 flat round
head screw

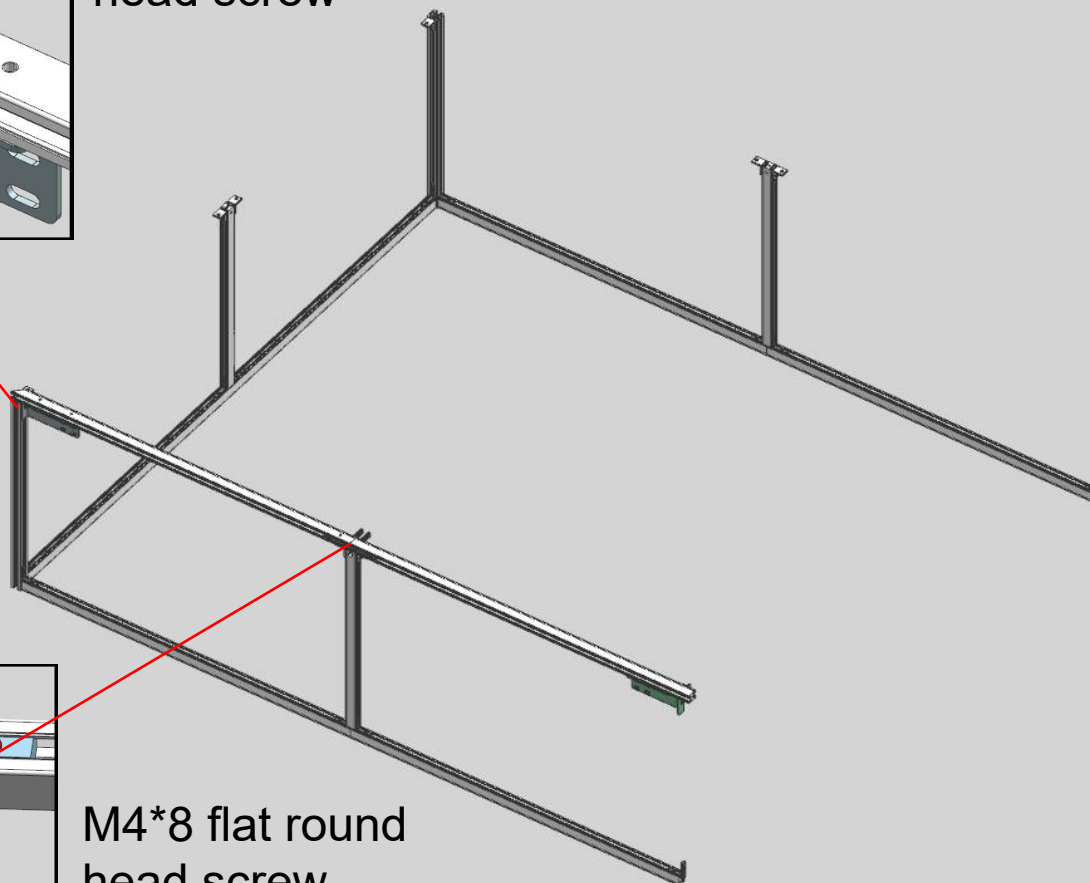


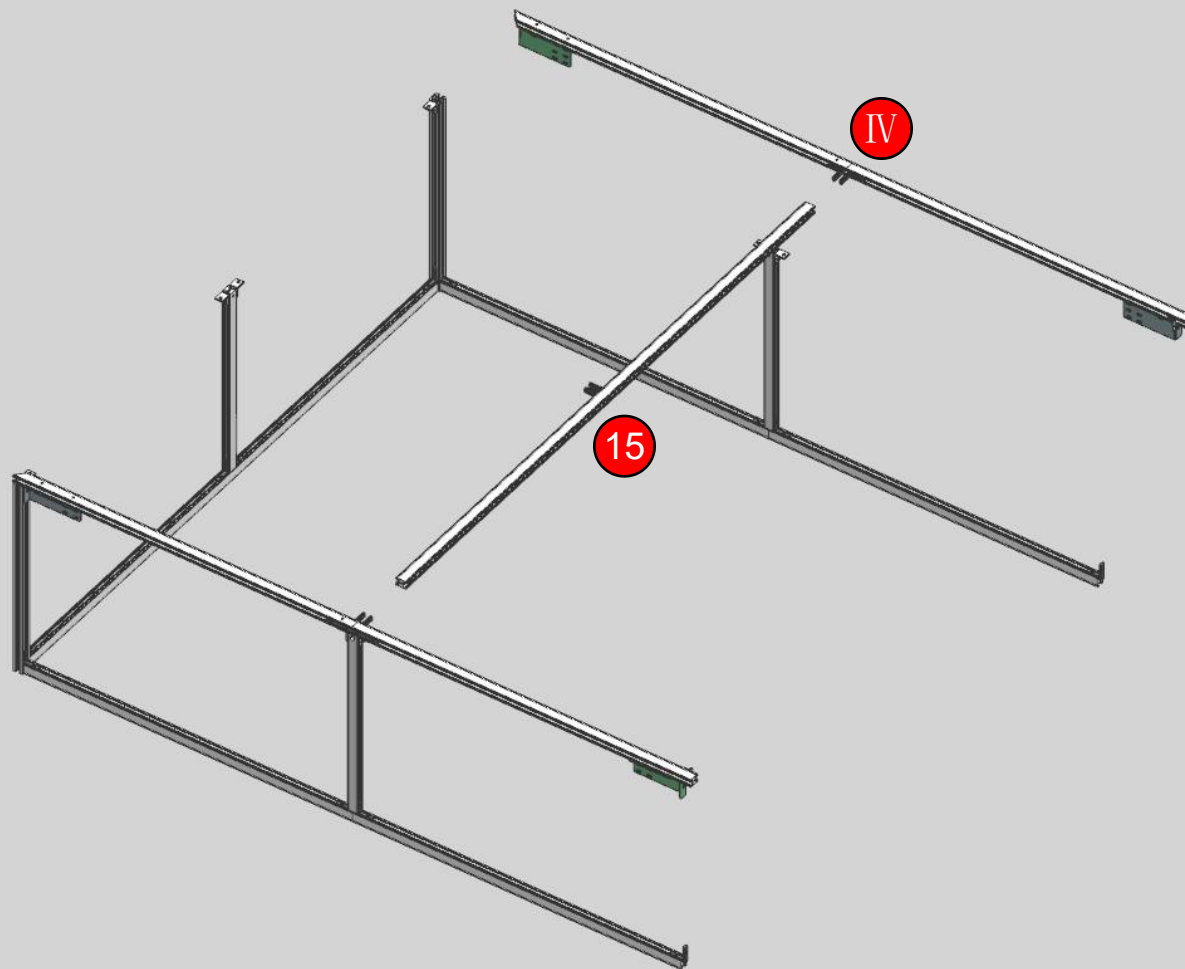


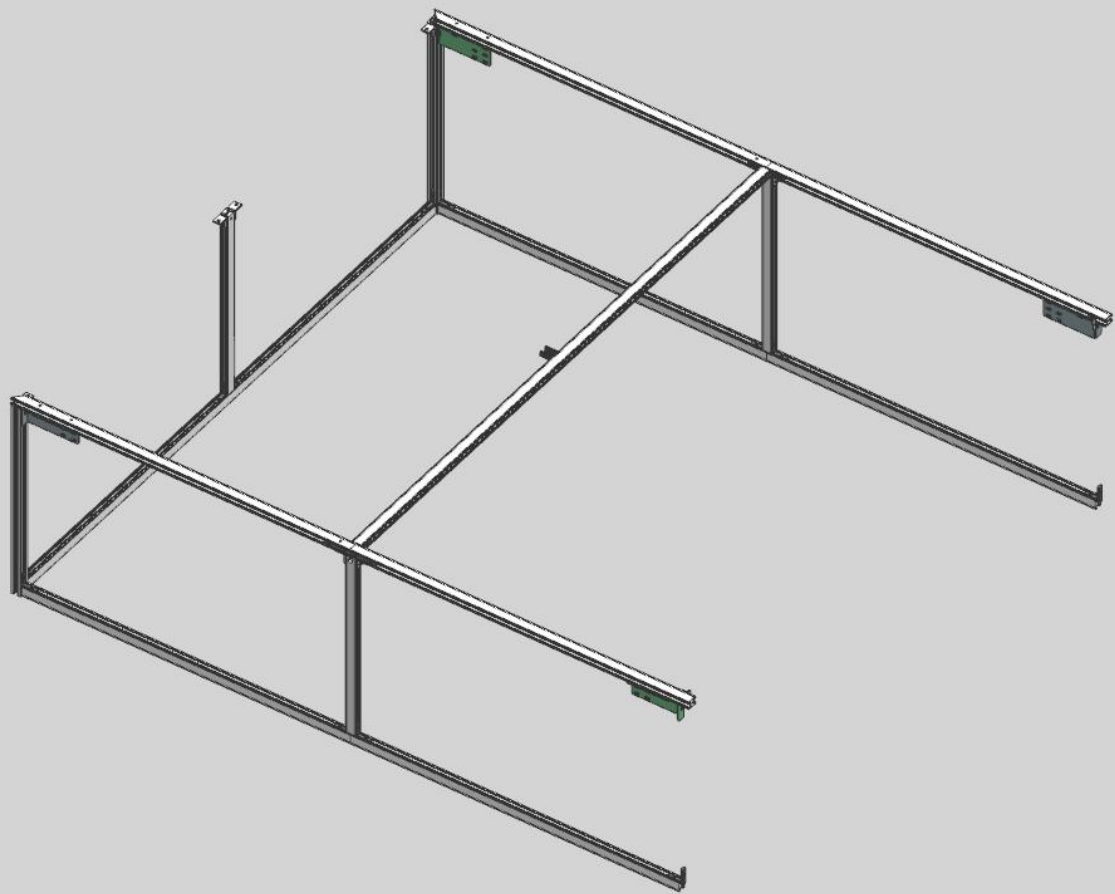


M4*16 flat round
head screw


M4*8 flat round head screw

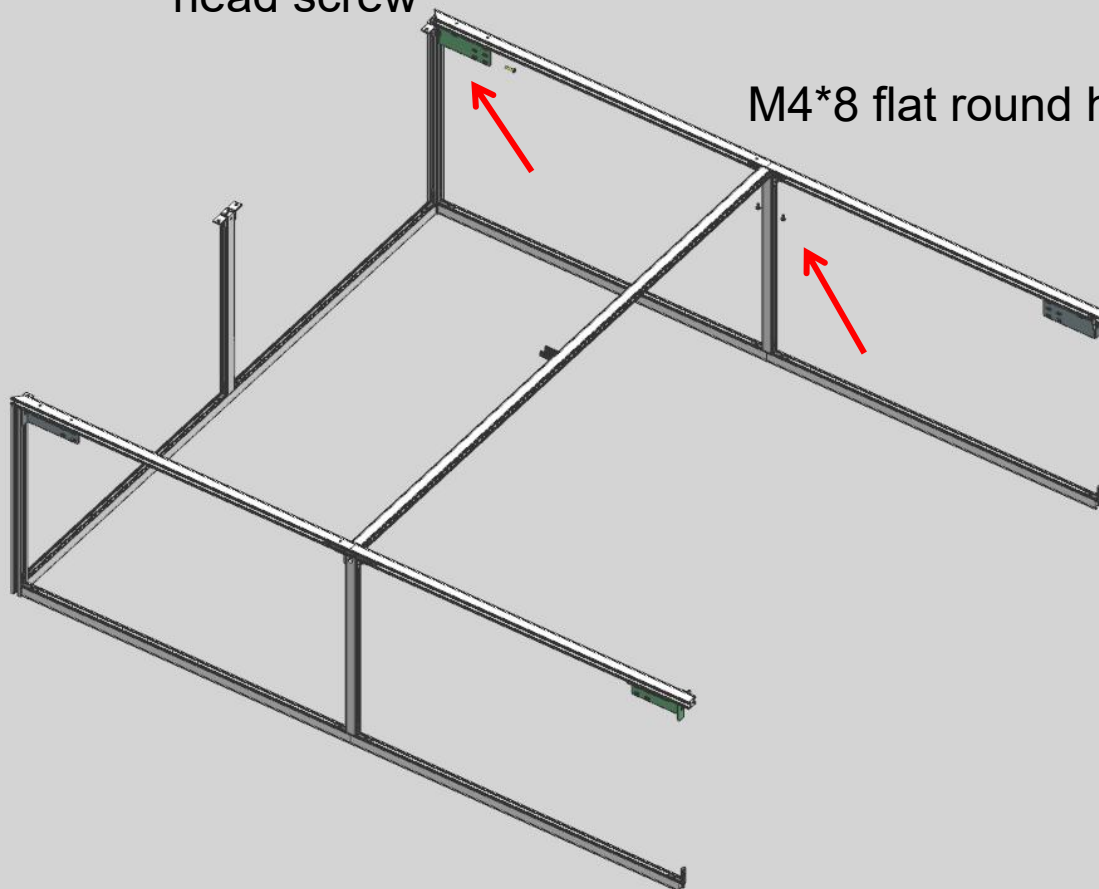



M4*16 flat round
head screw

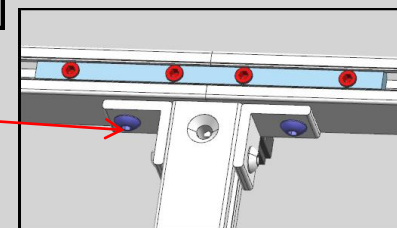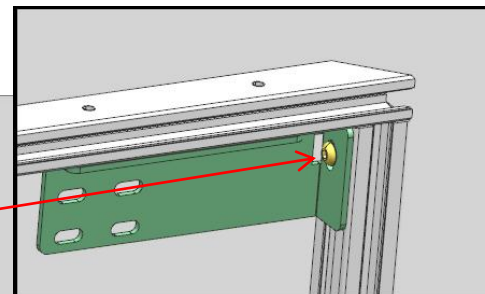



M4*8 flat round
head screw

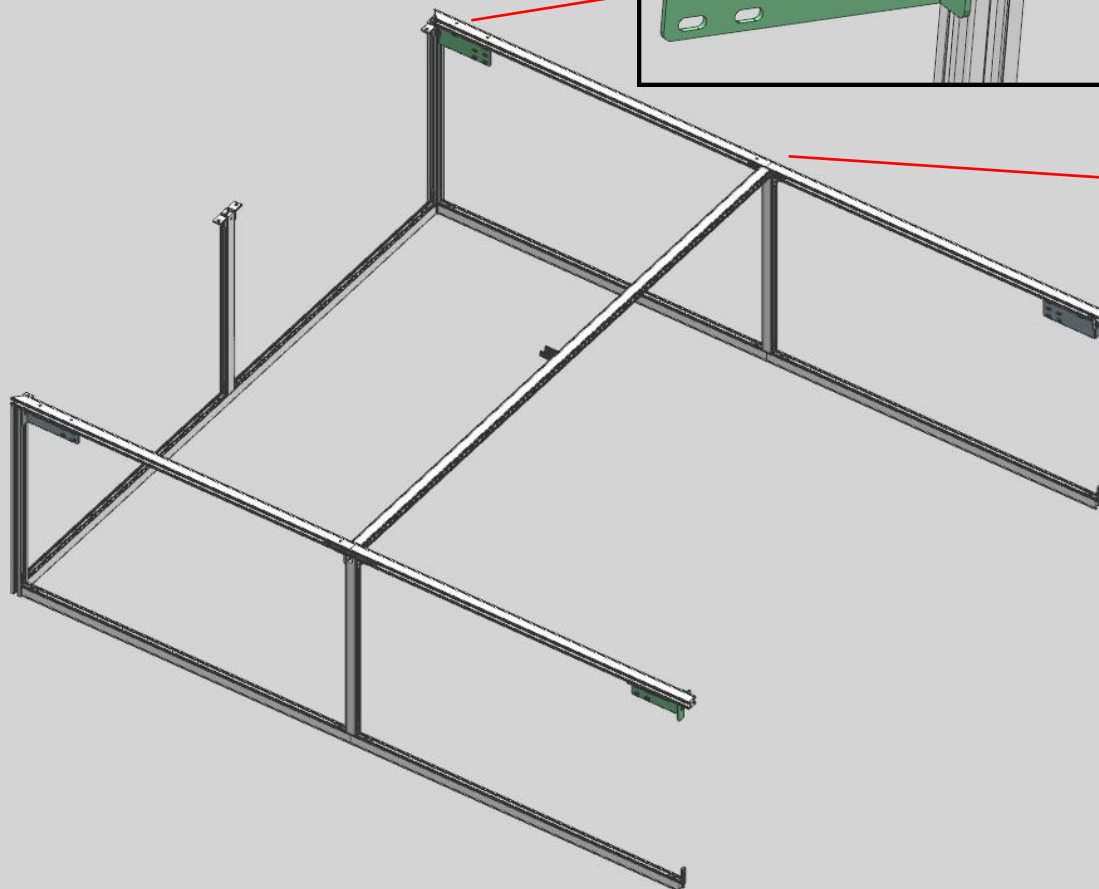


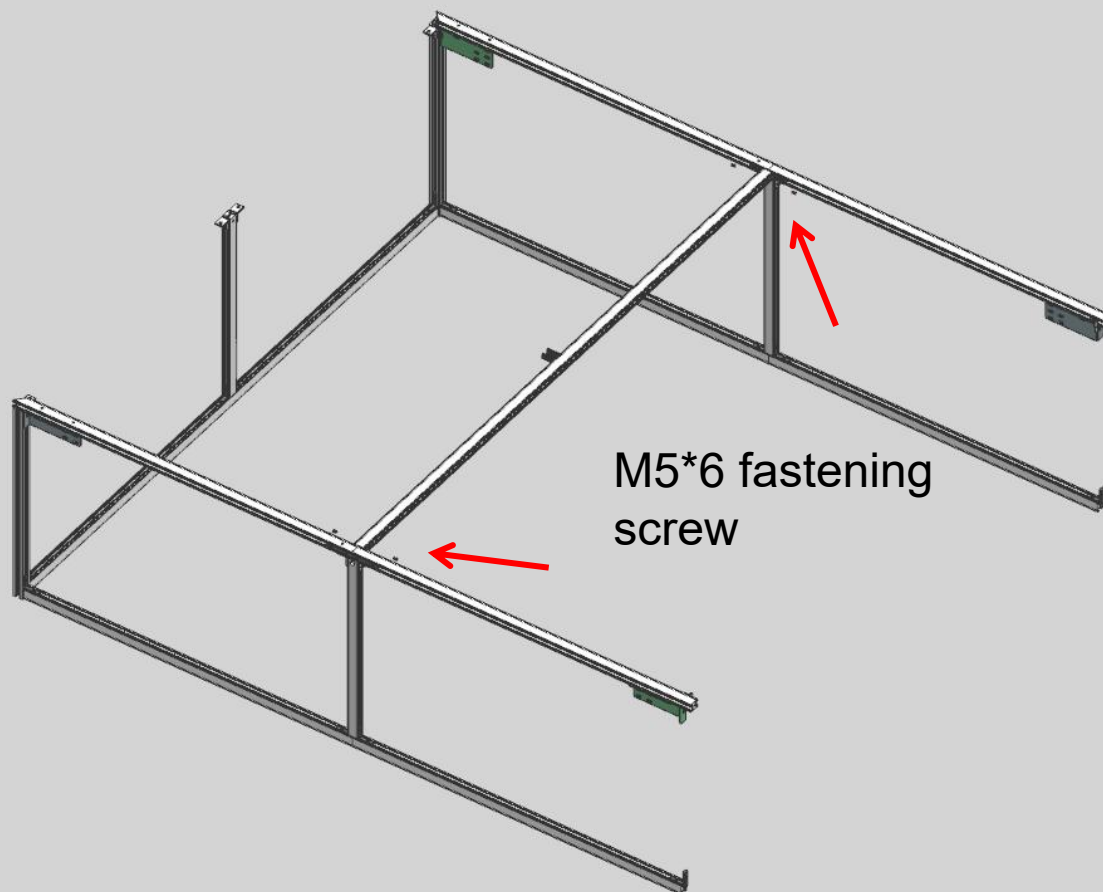


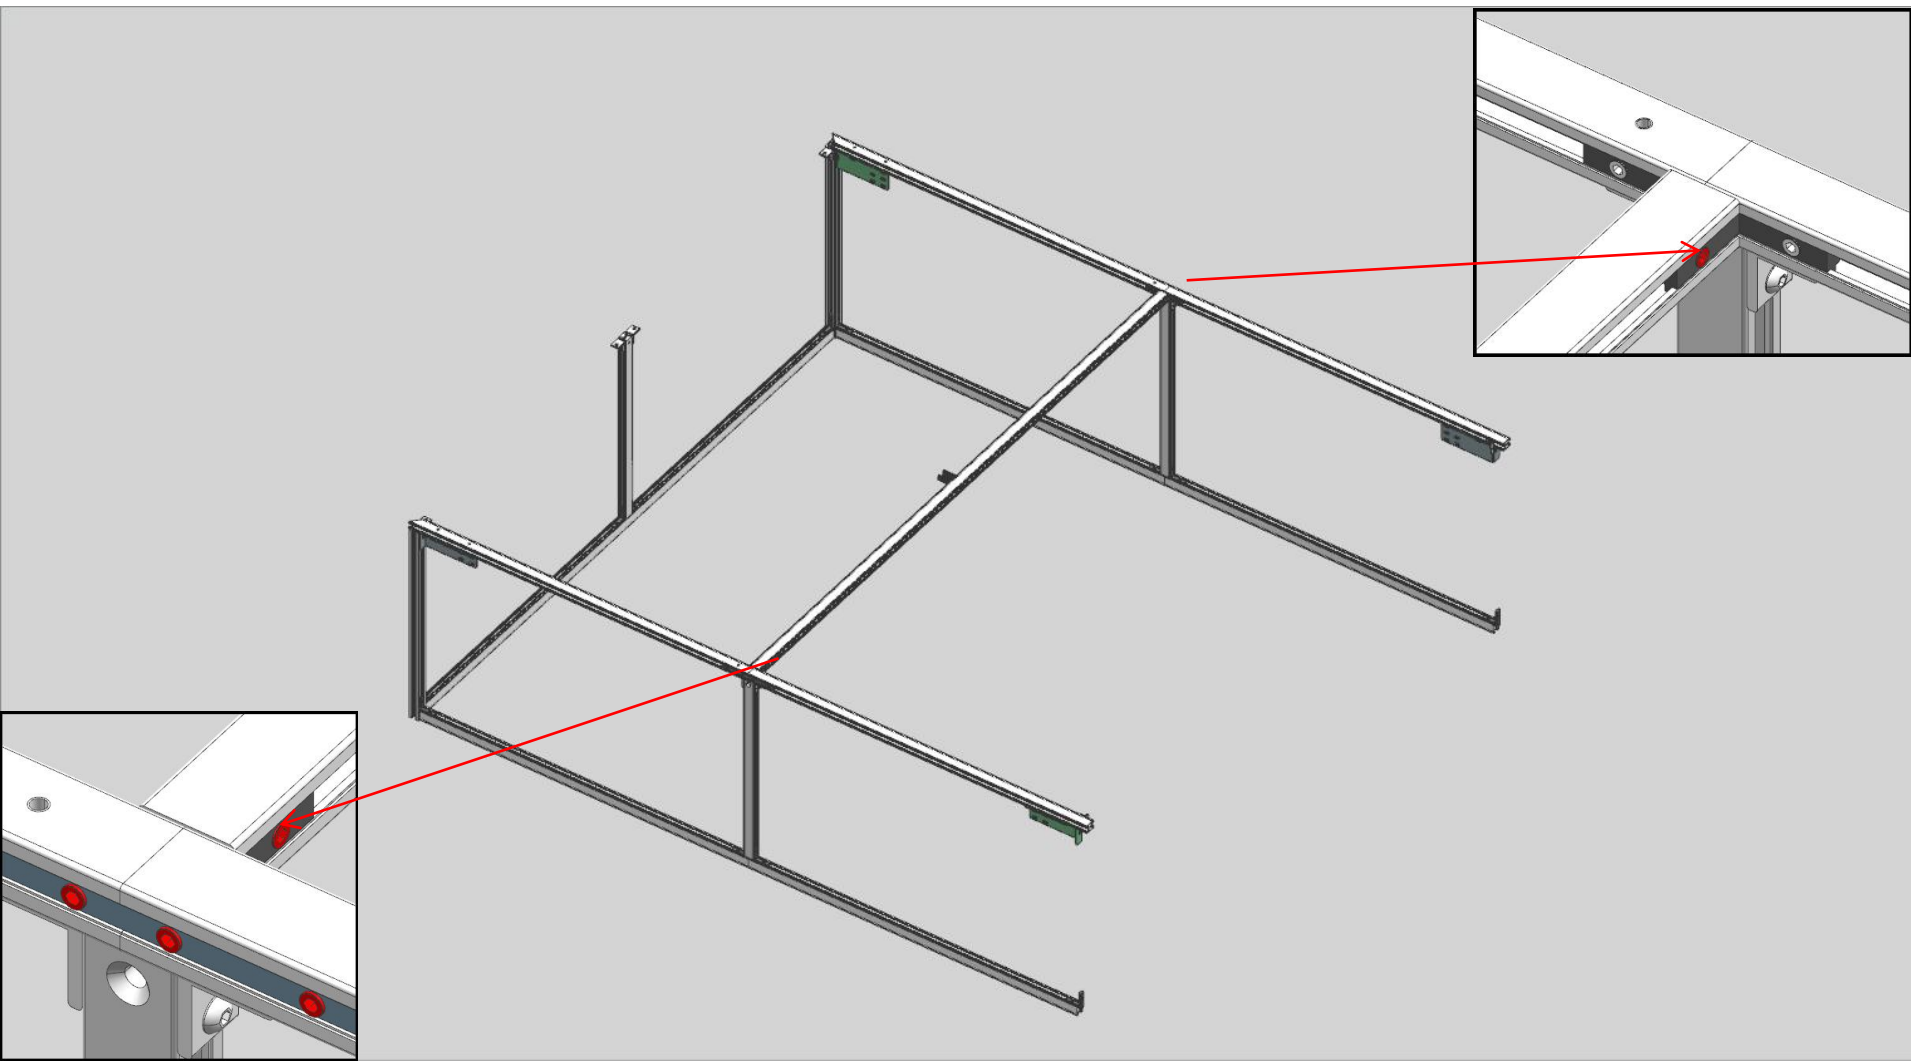

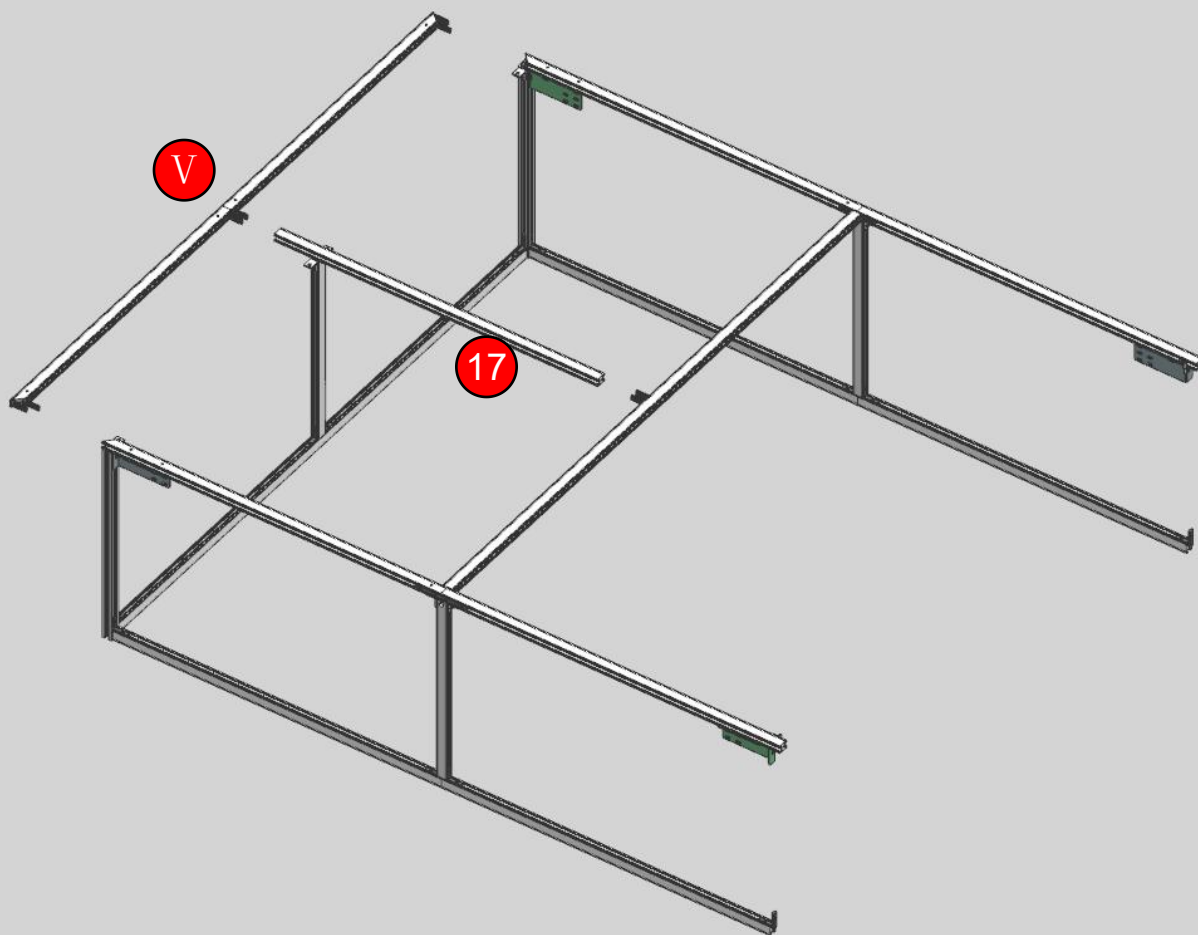

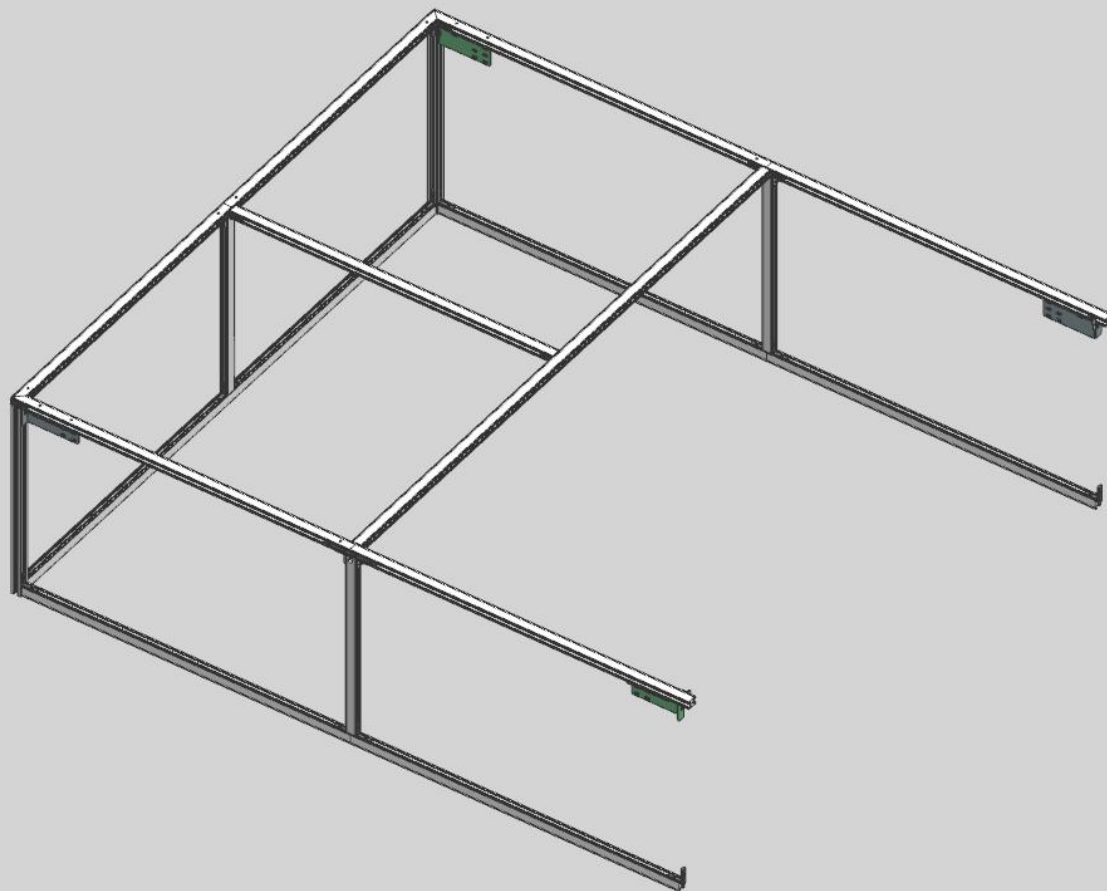

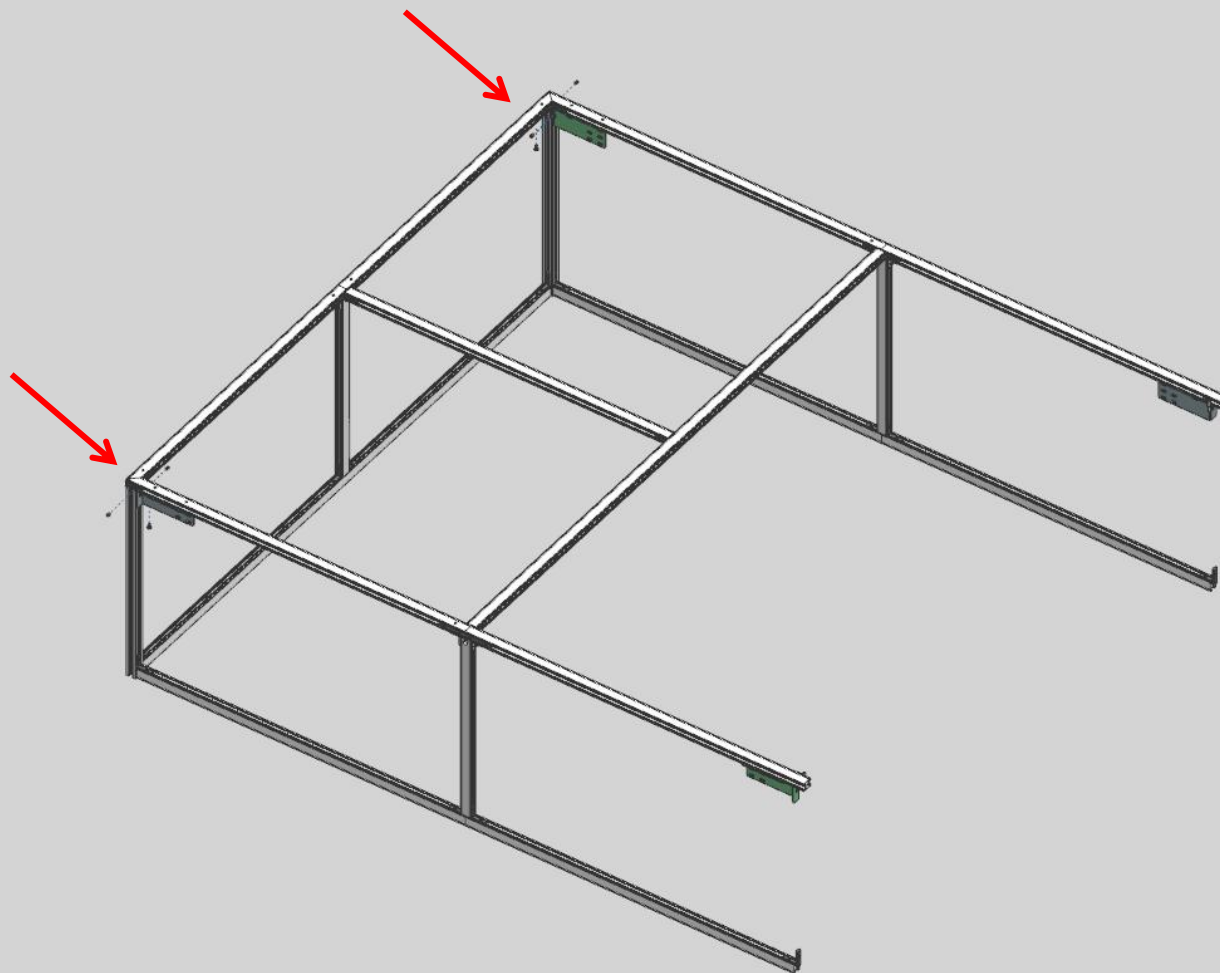


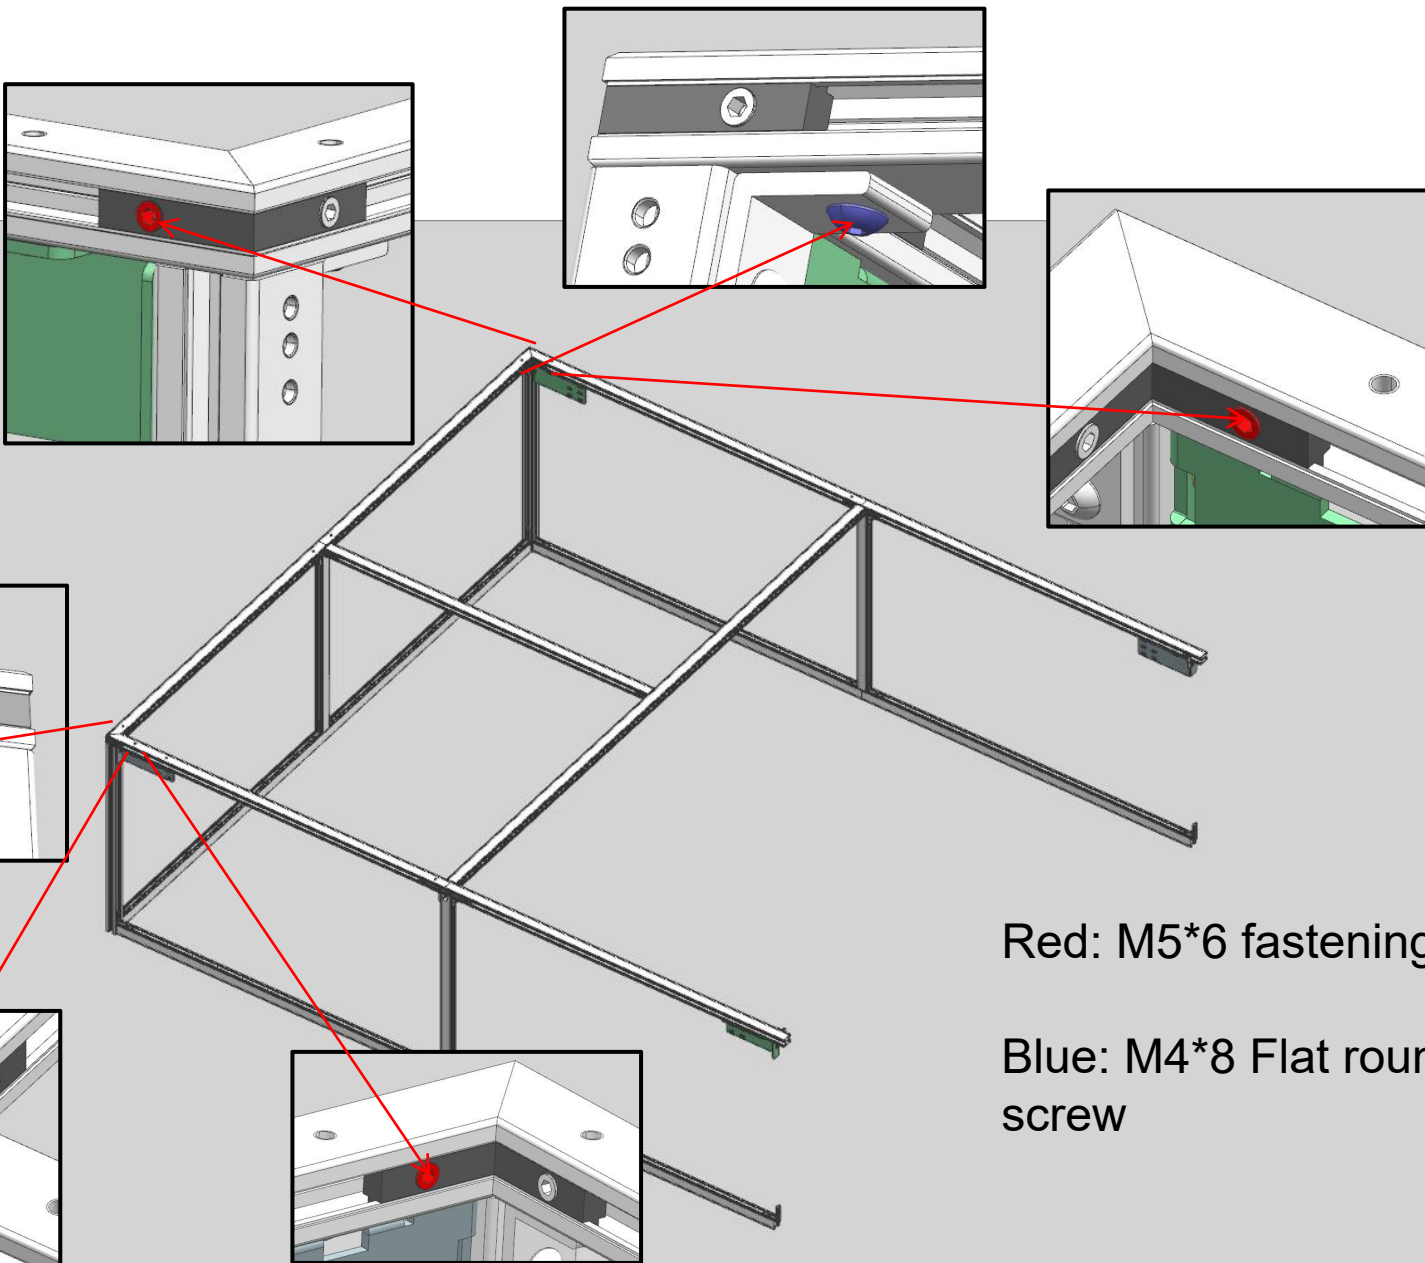




Red: M5*6 fastening screw

Blue: M4*8 Flat round head screw


M5*6 fastening
screw

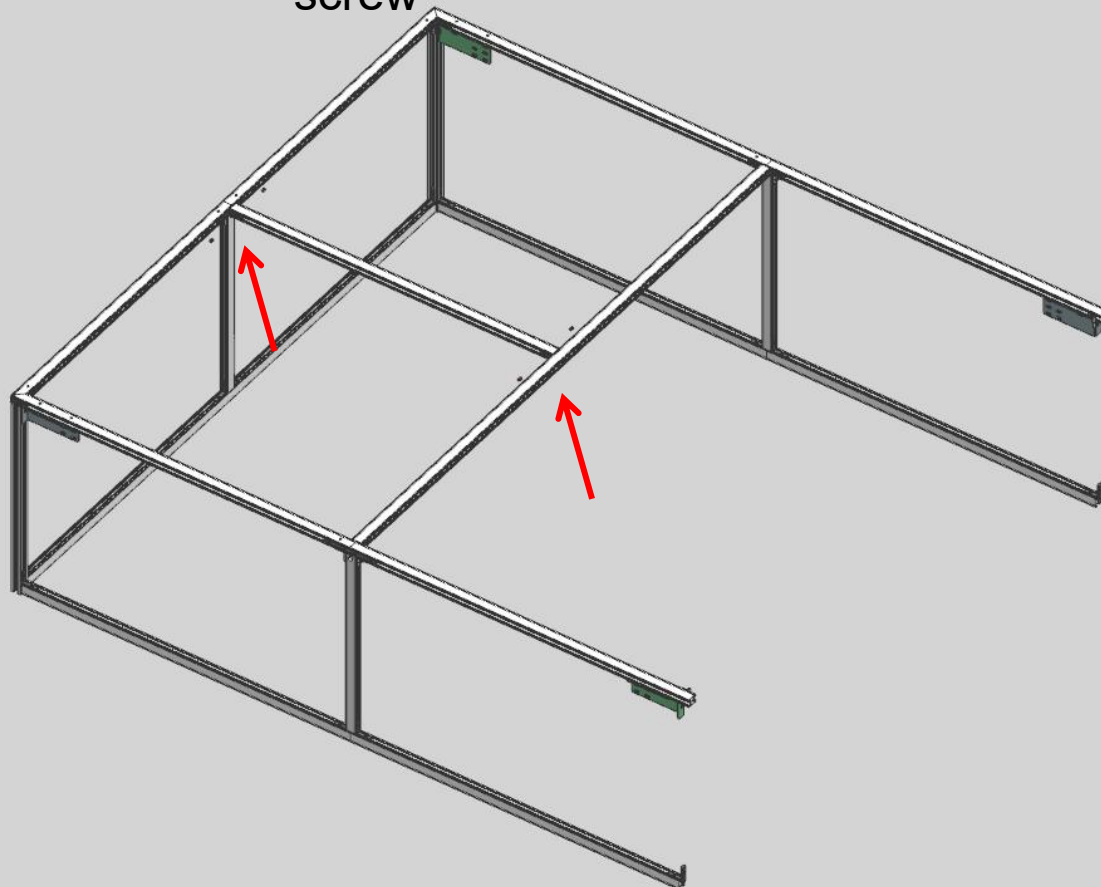


M5*6 fastening screw

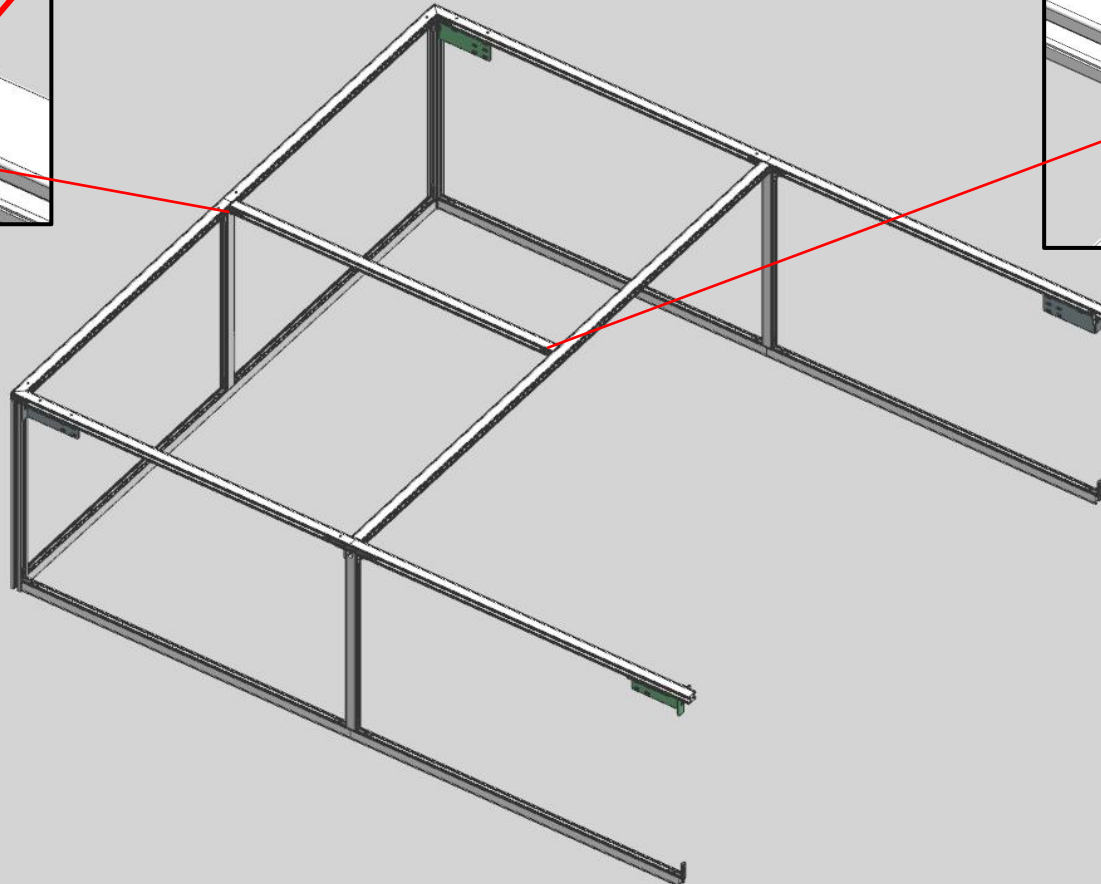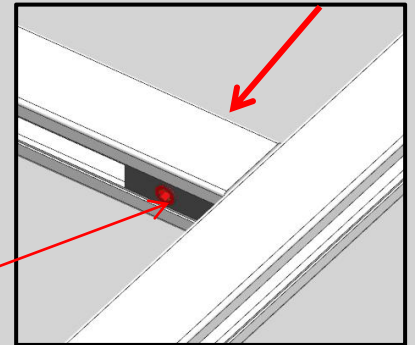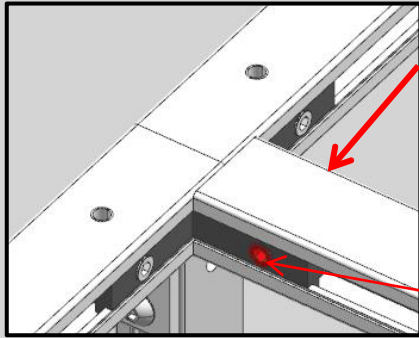


M4*8 Flat round
head screw

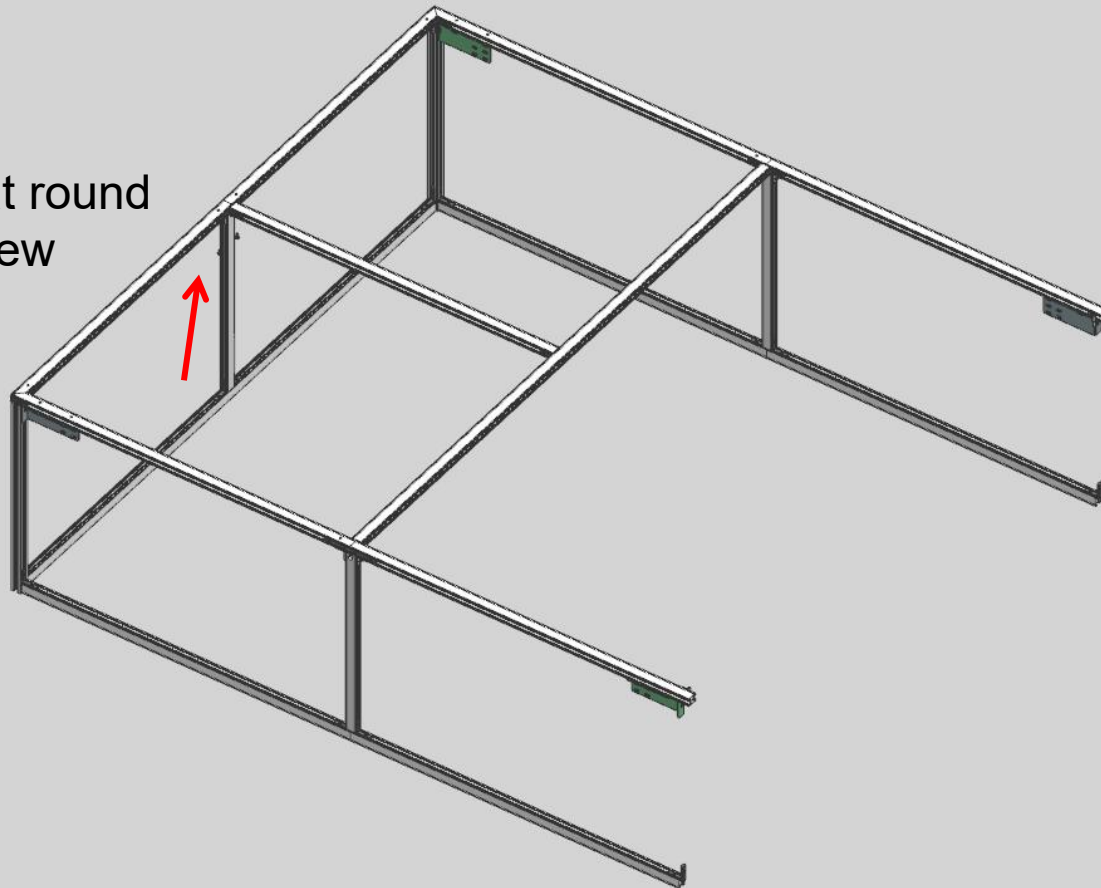



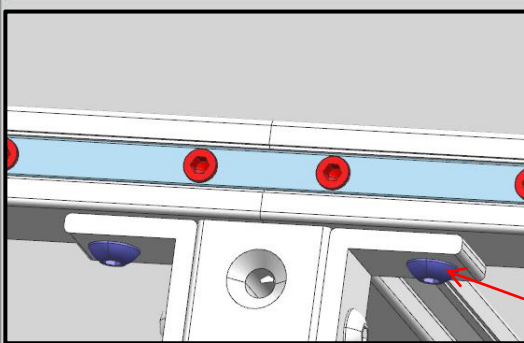



M4*8 Flat round
head screw

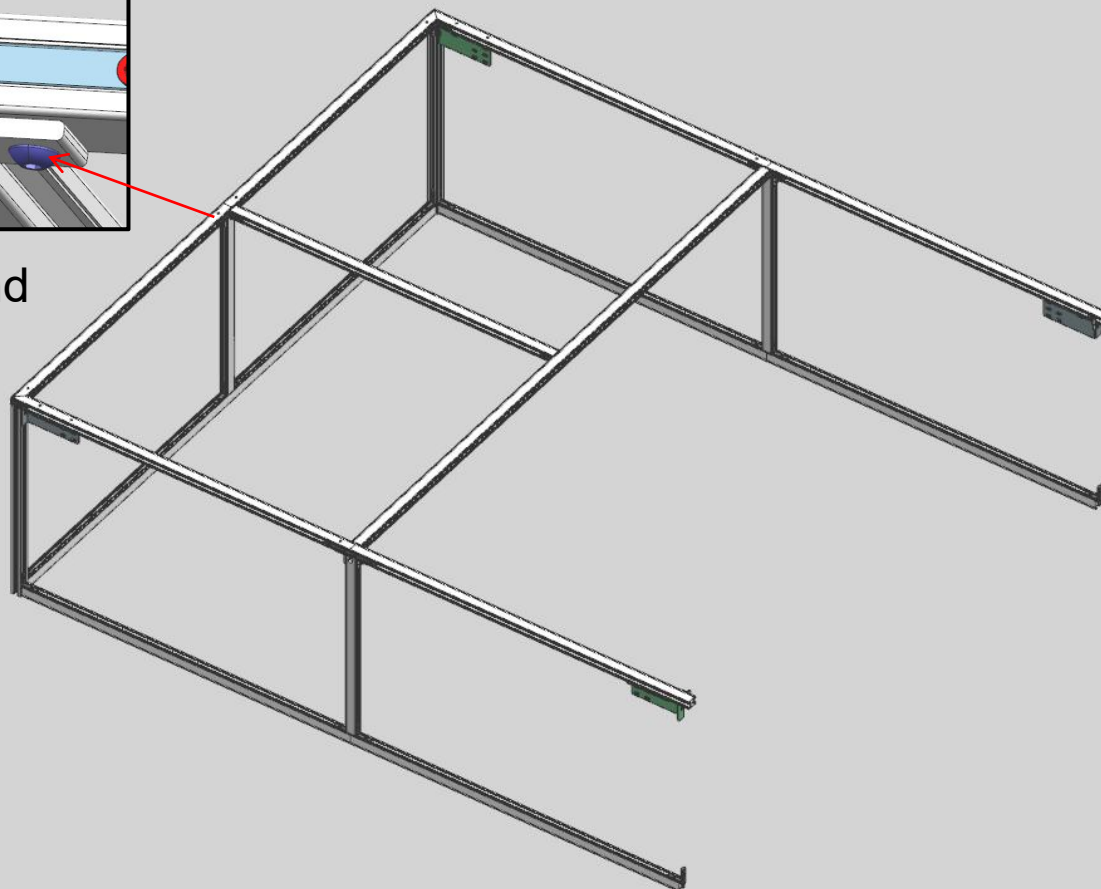


M5*6 fastening
screw

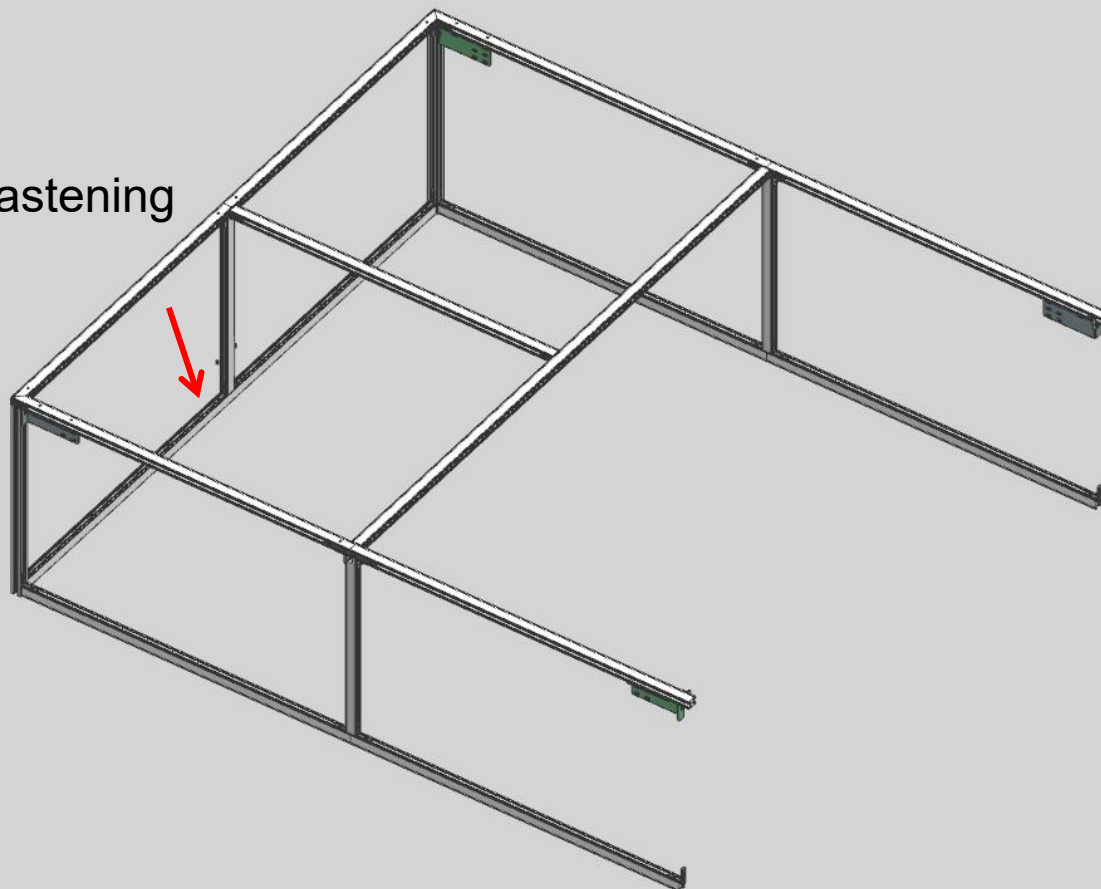

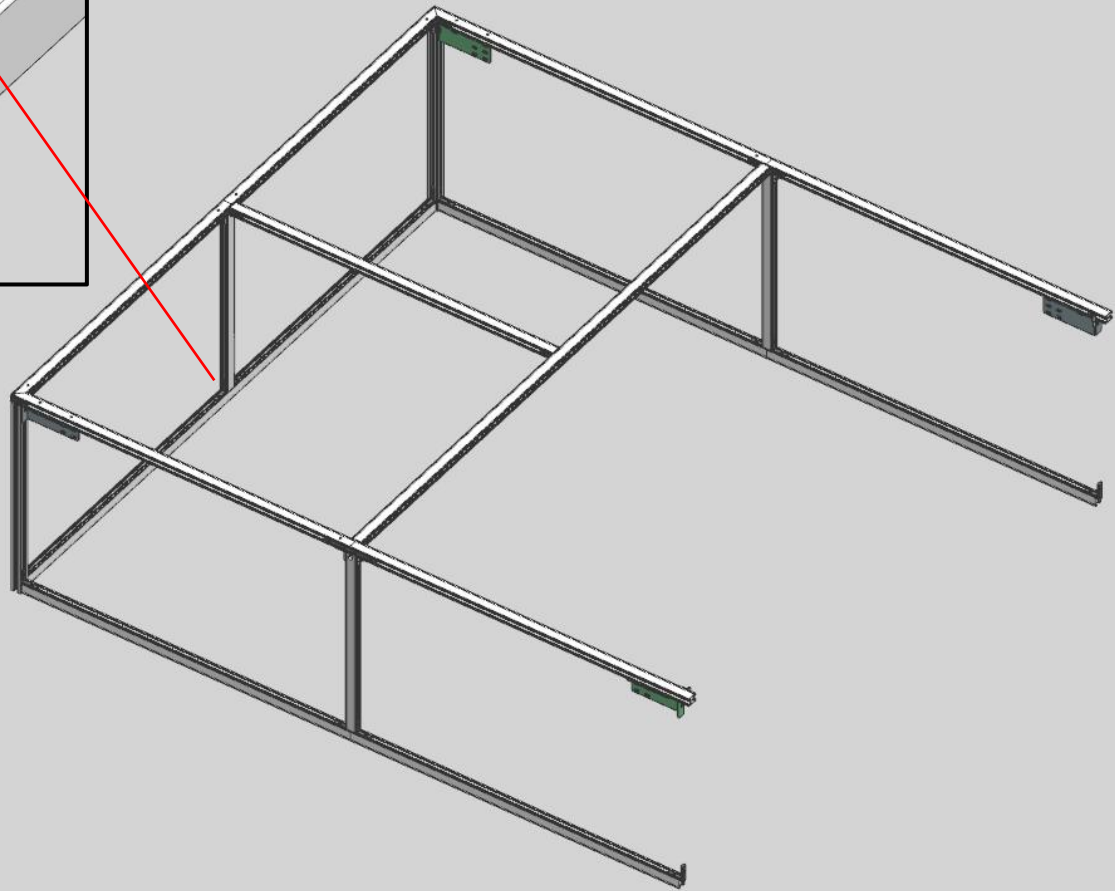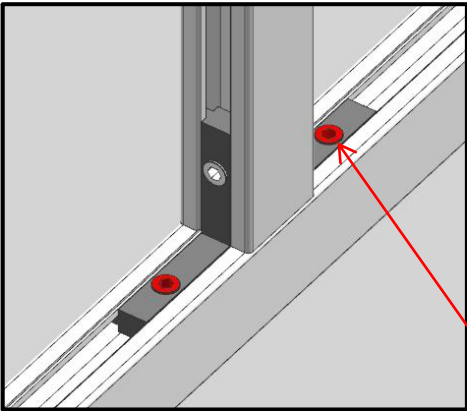



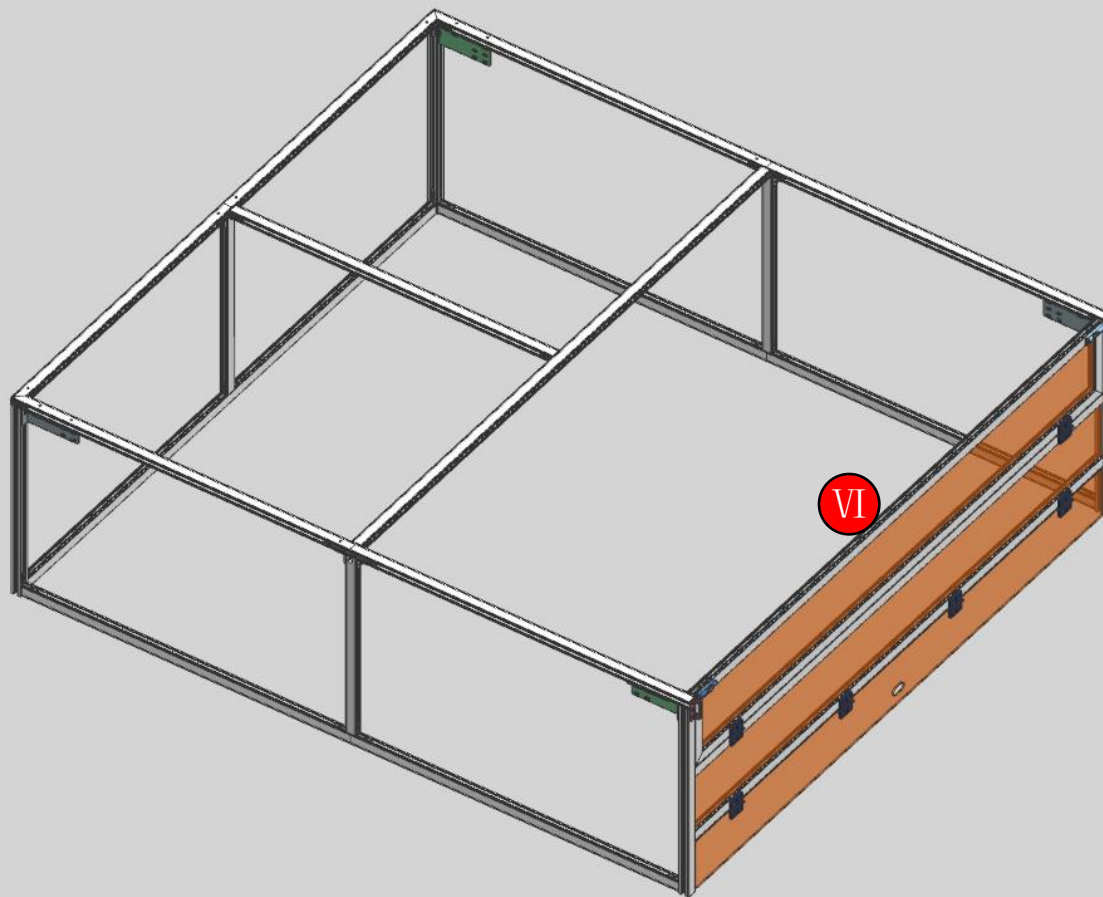


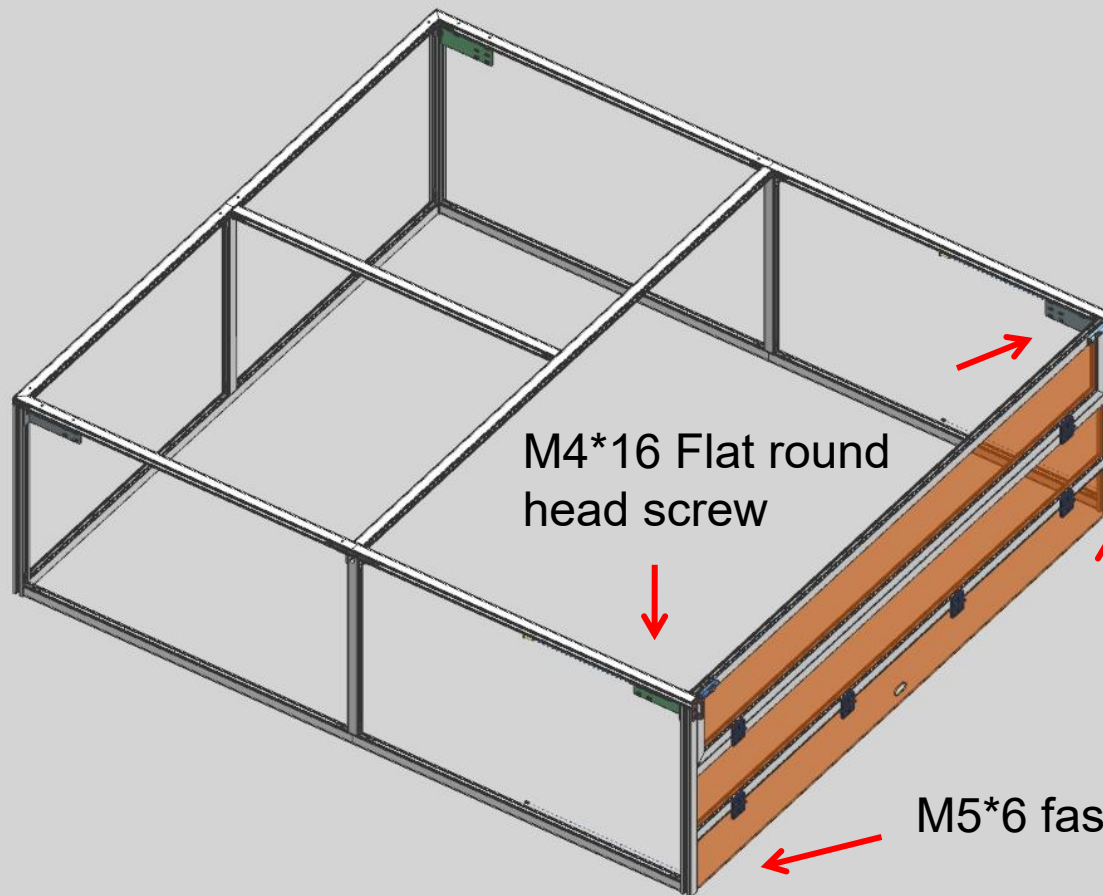

M4*16 Flat round
head screw

M5*6 fastening screw


M4*16 Flat round
head screw

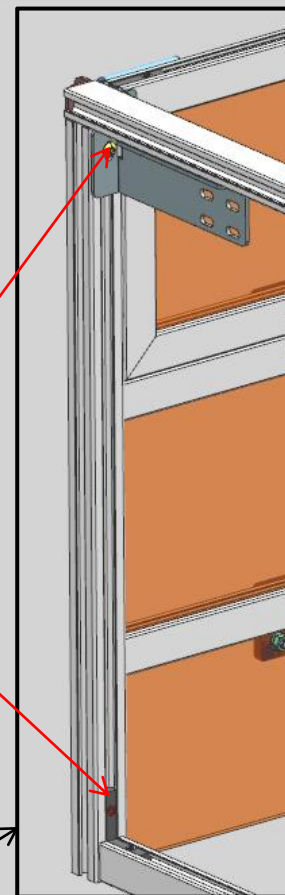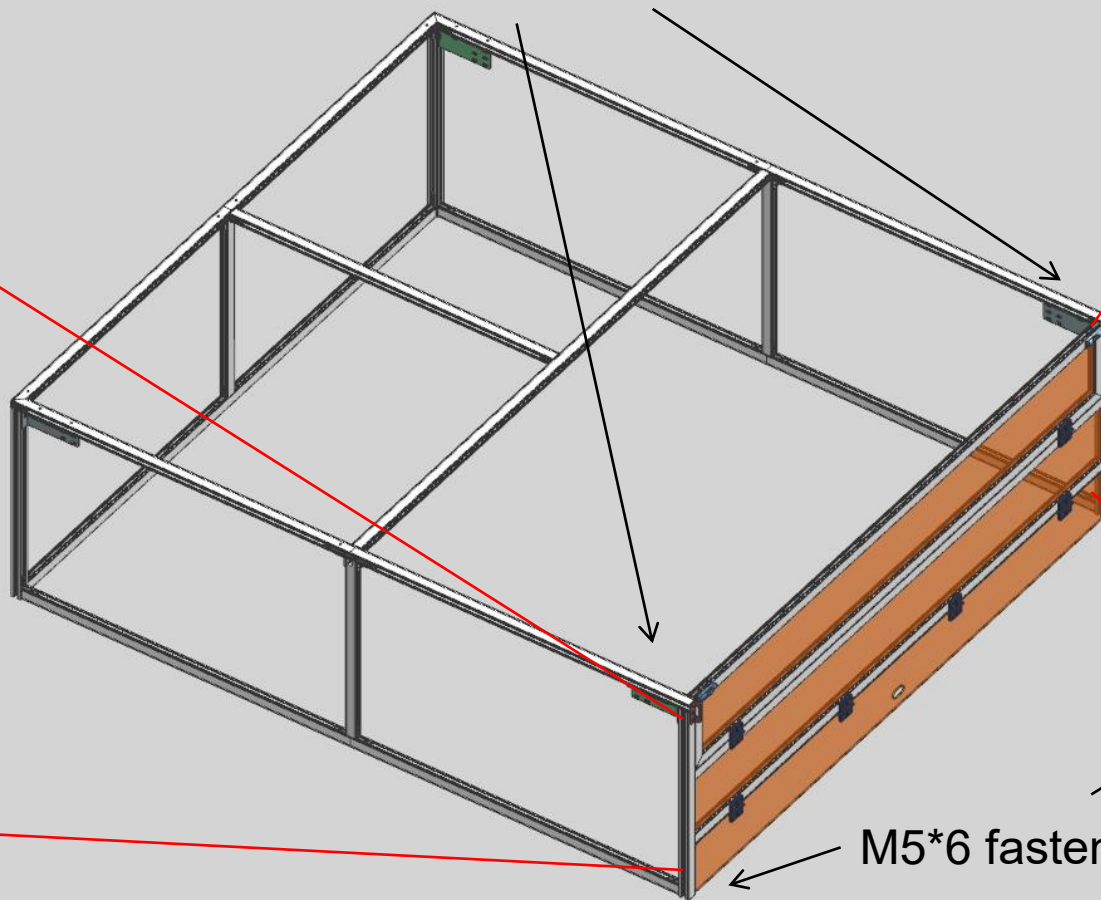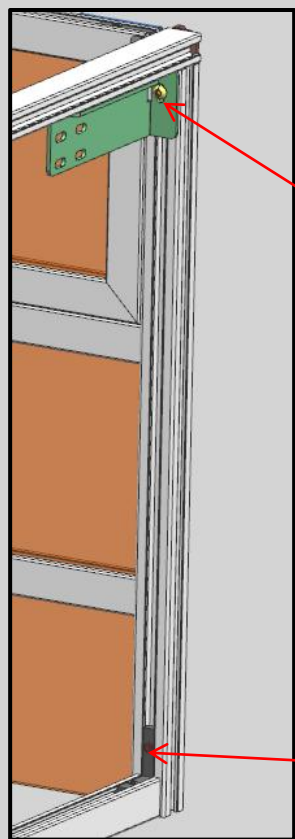

M5*6 fastening screw


An additional threaded hole
is located at the front


18


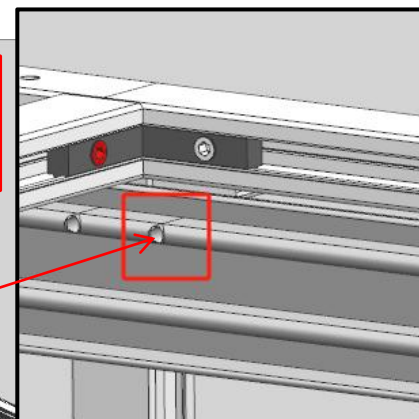



18


An additional
threaded hole is
located at the front

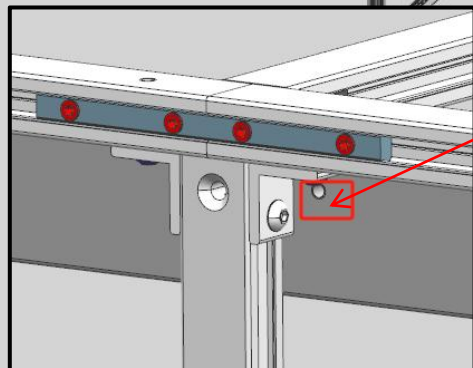


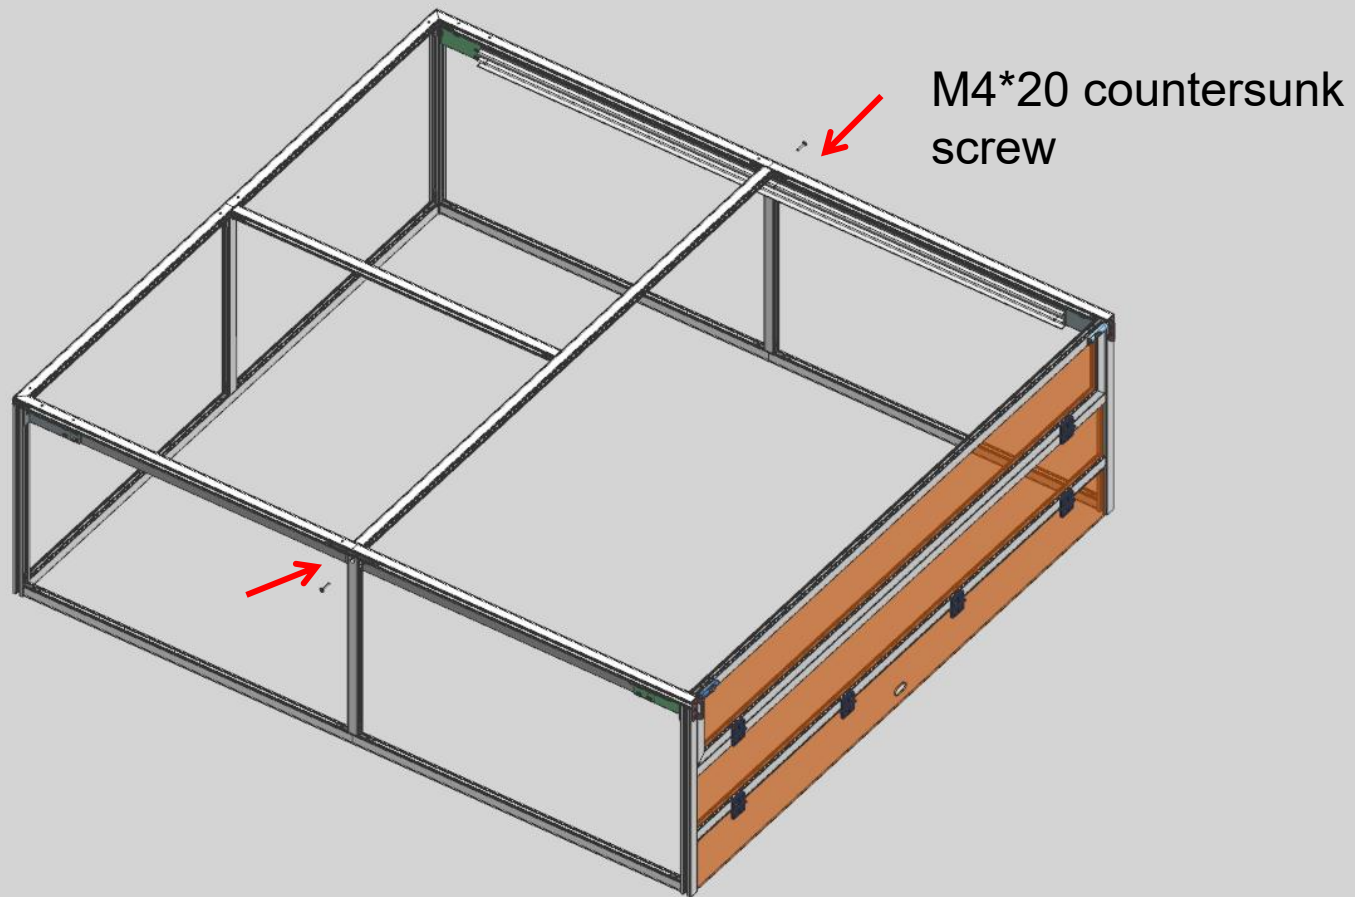


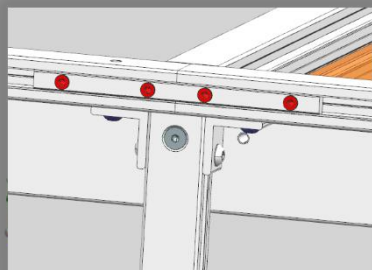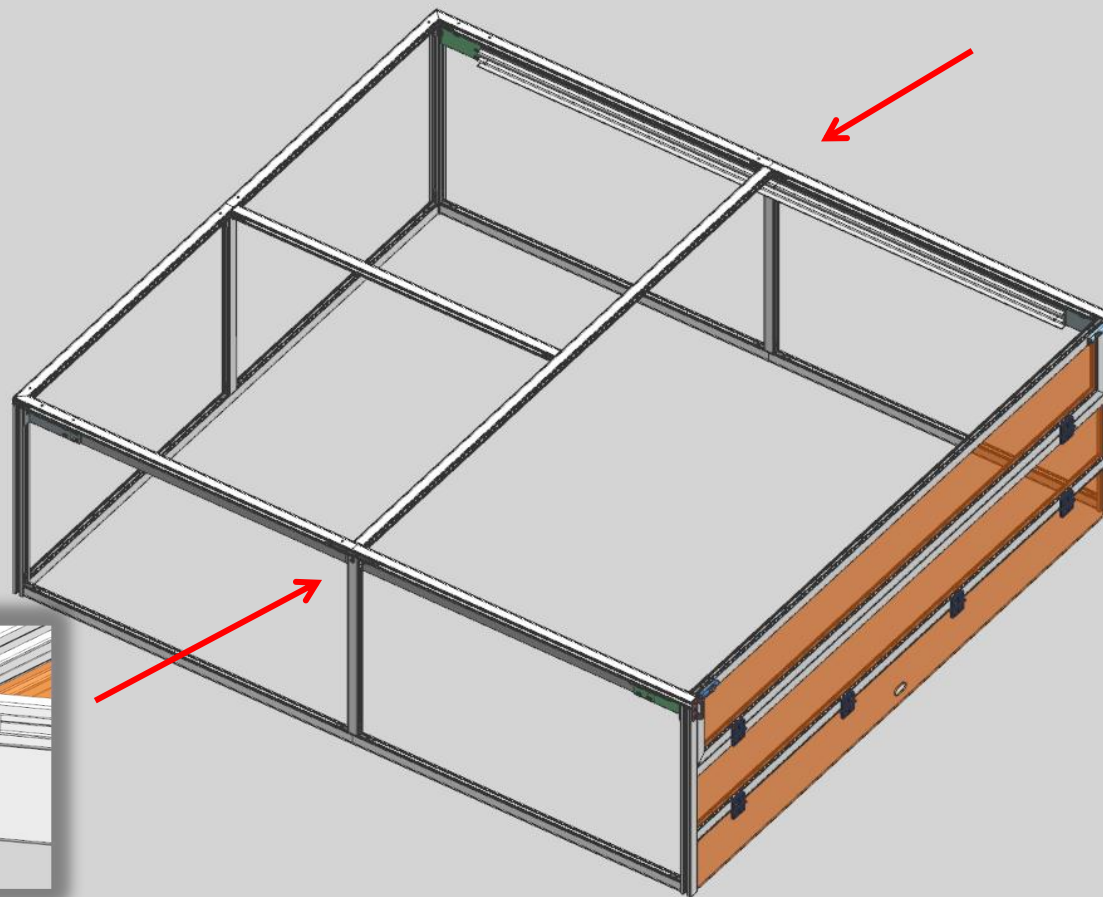


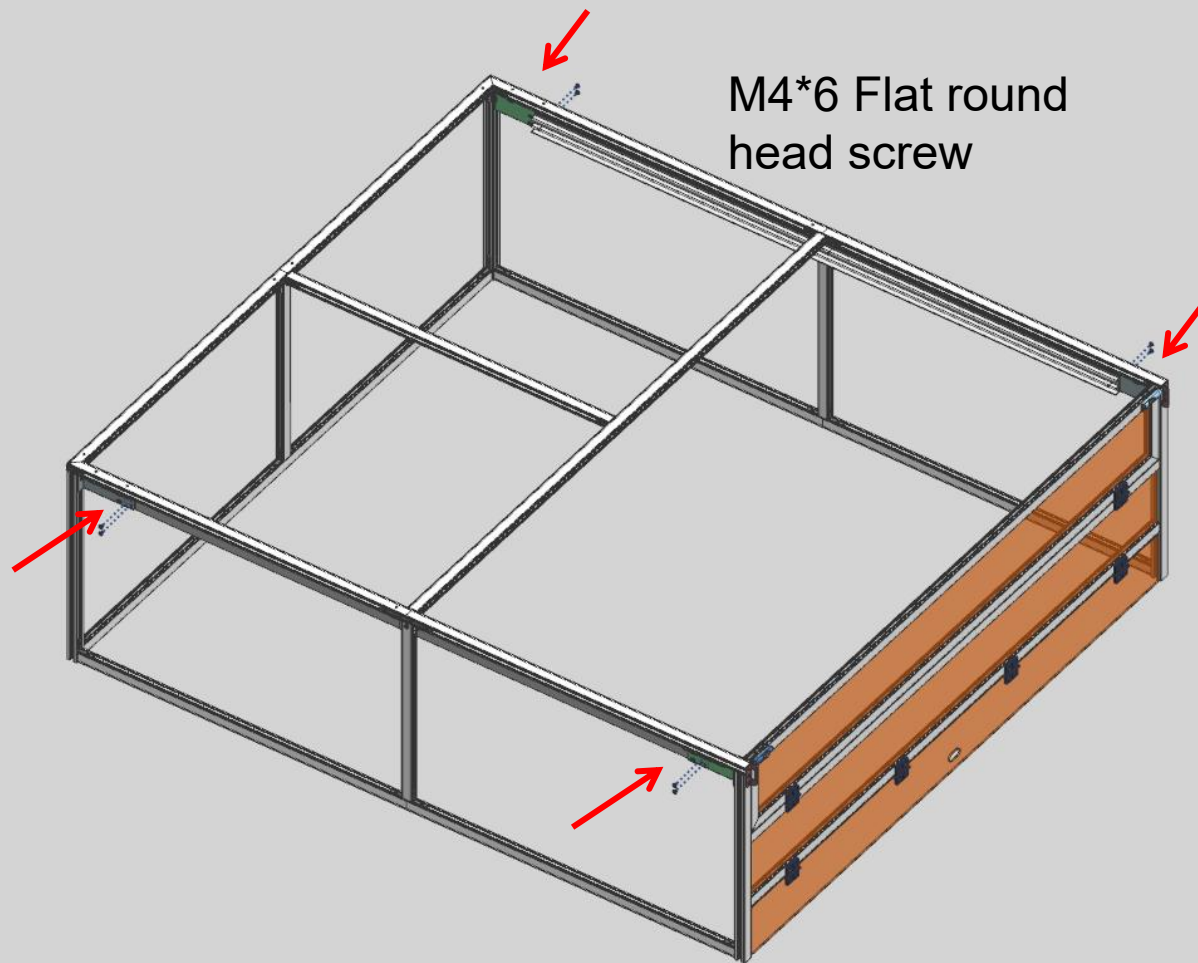

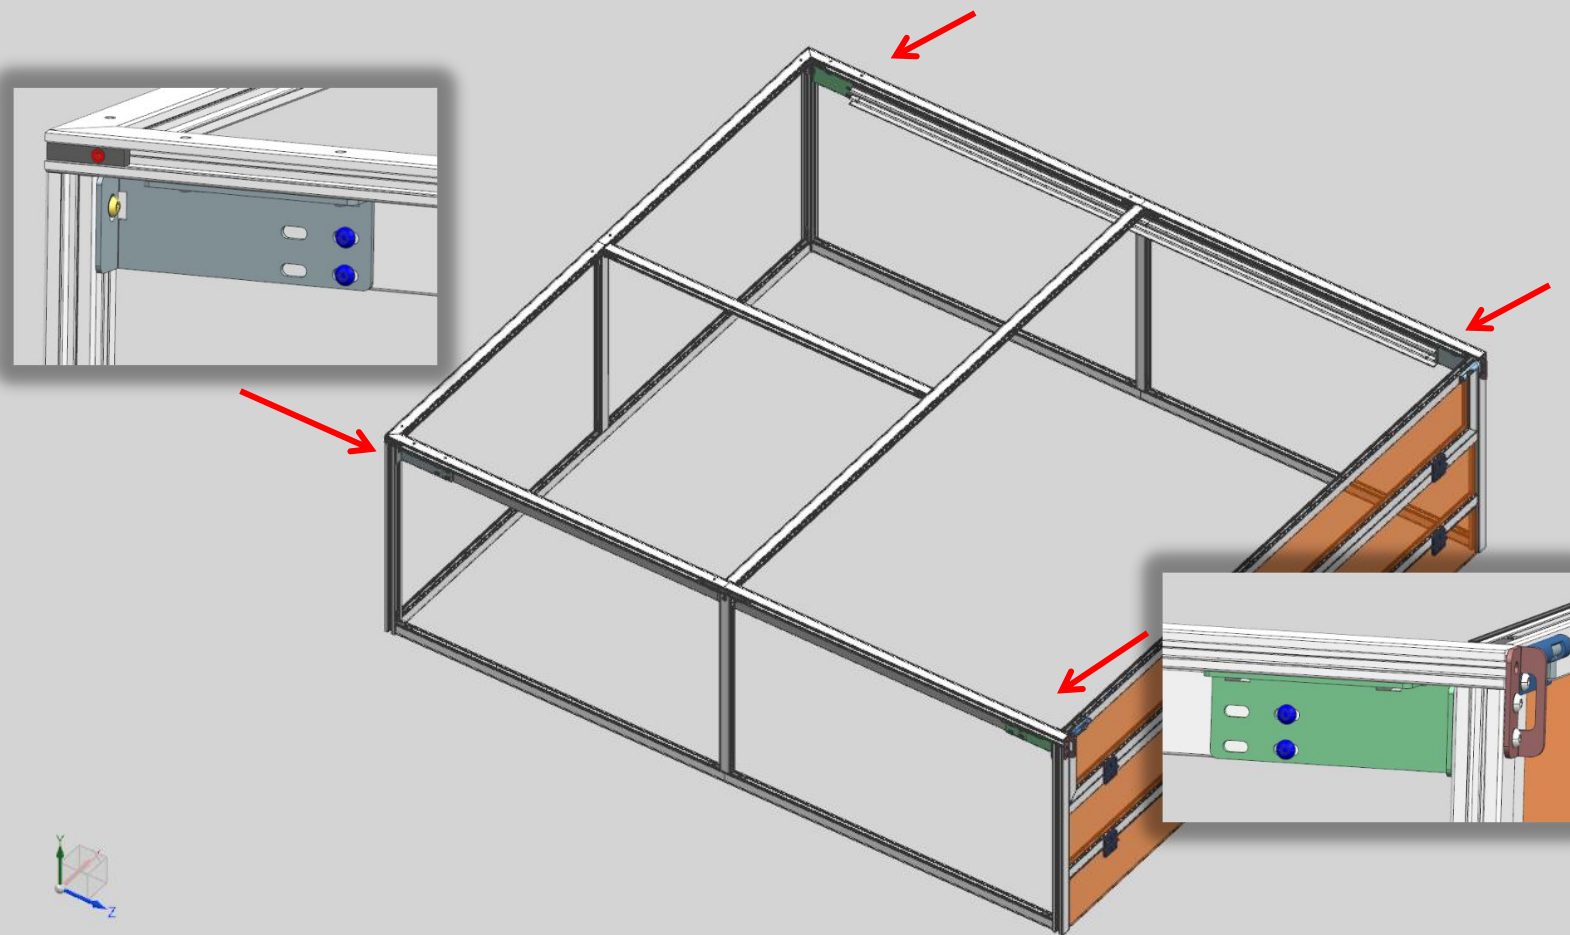




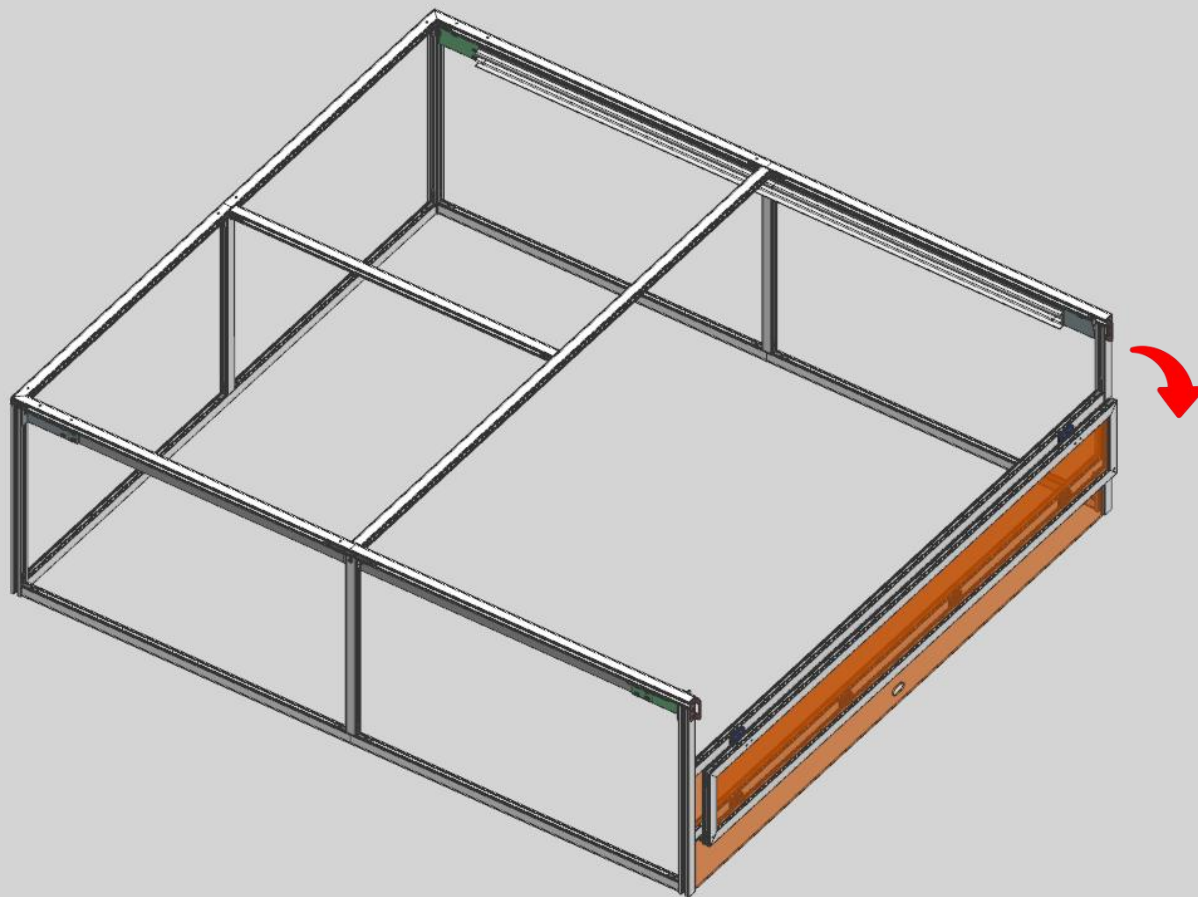


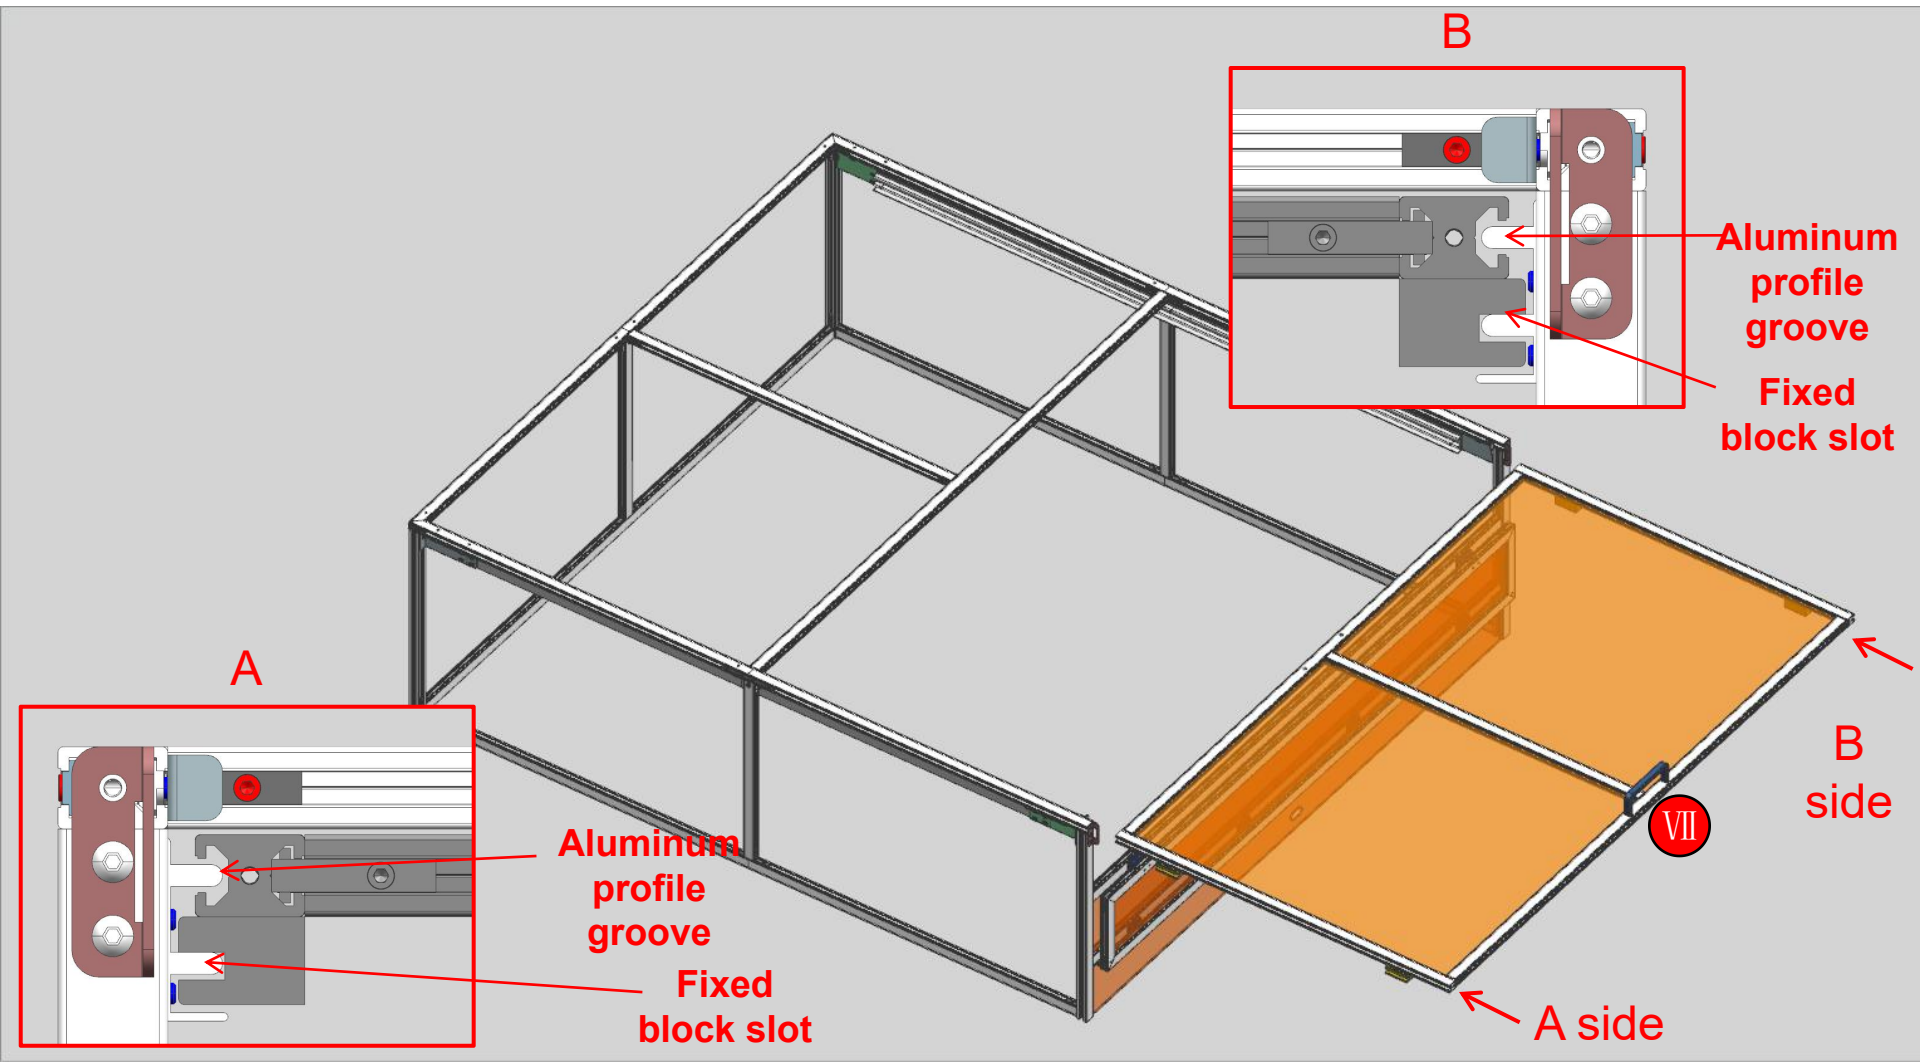

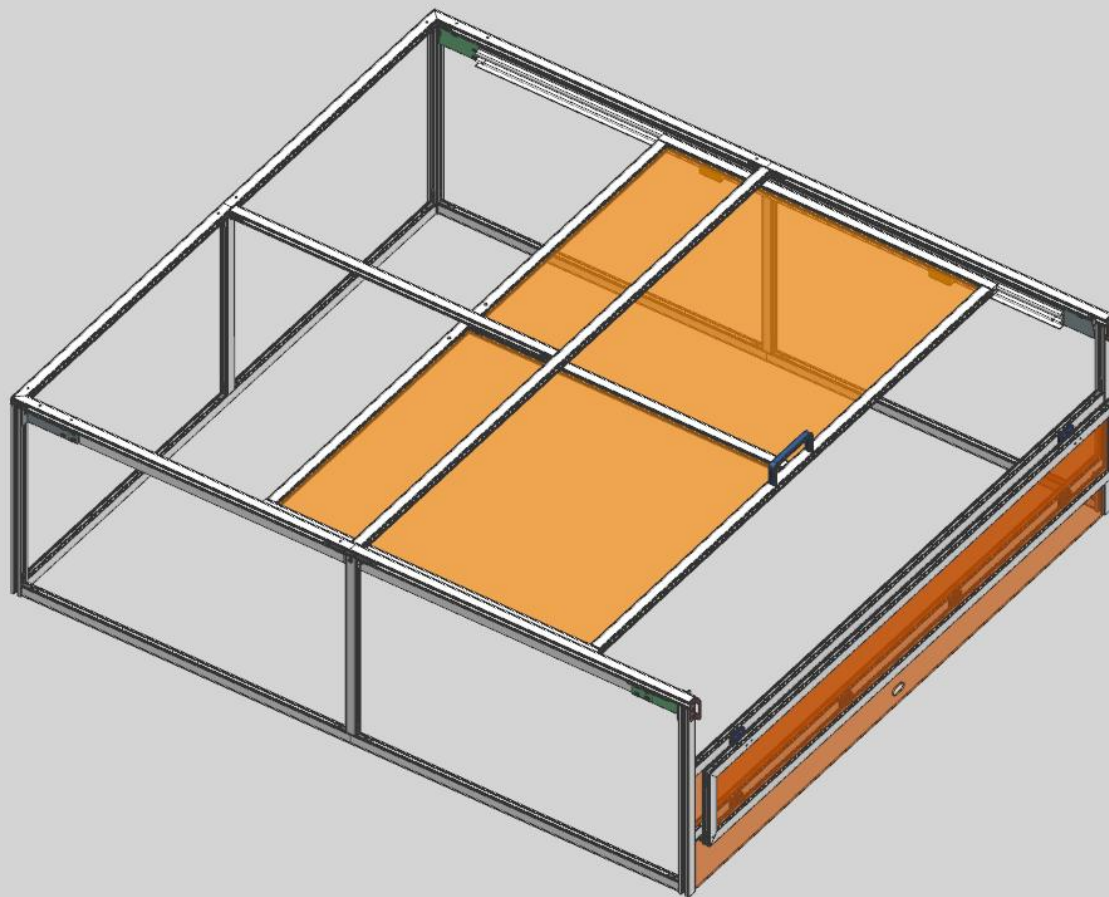




M4*10 Cylindrical
head screw

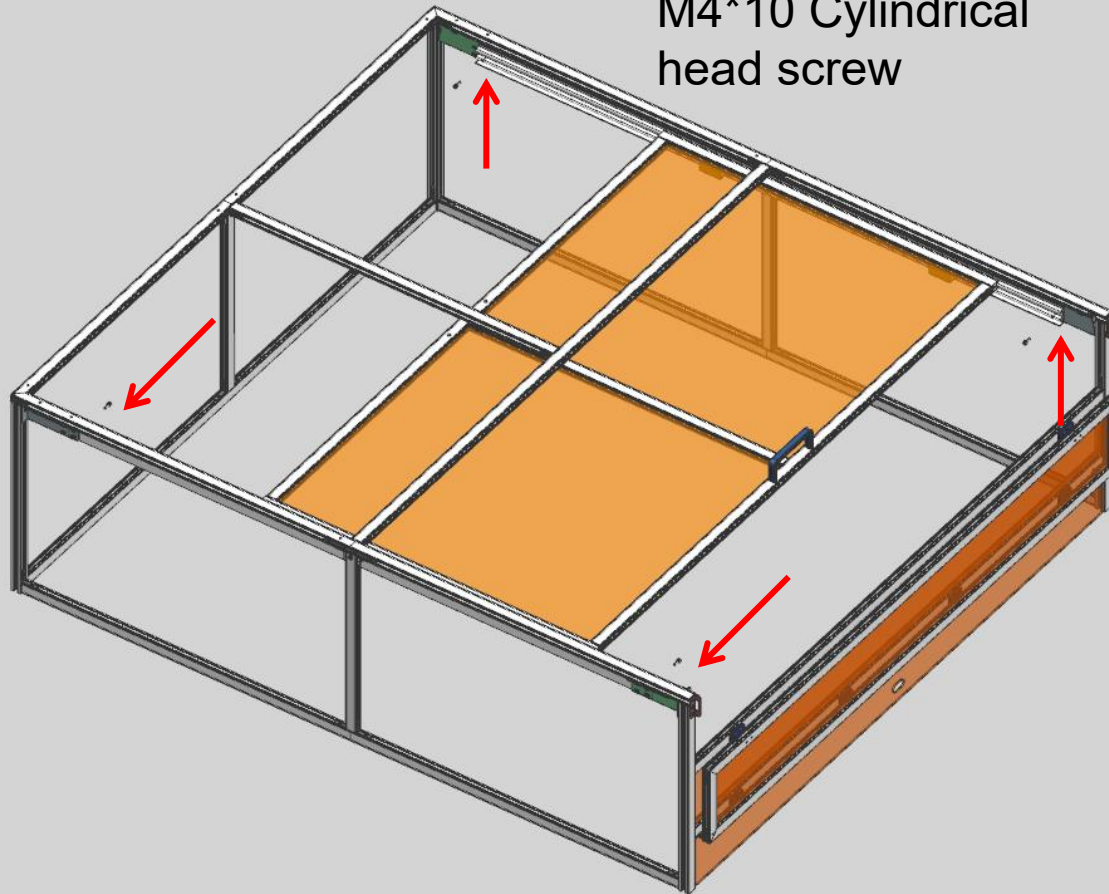


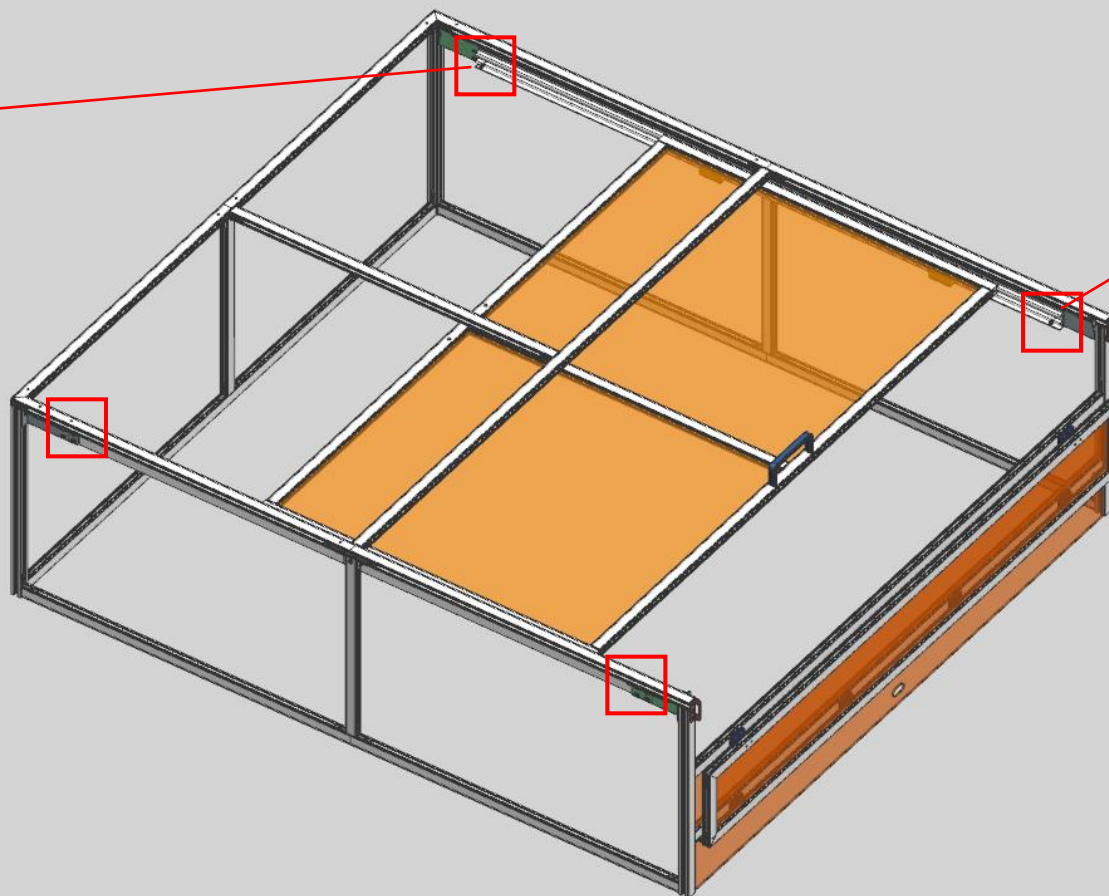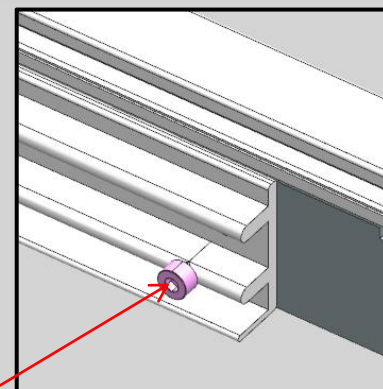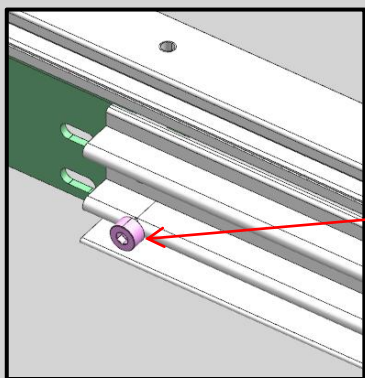

Aluminum profile
end cap

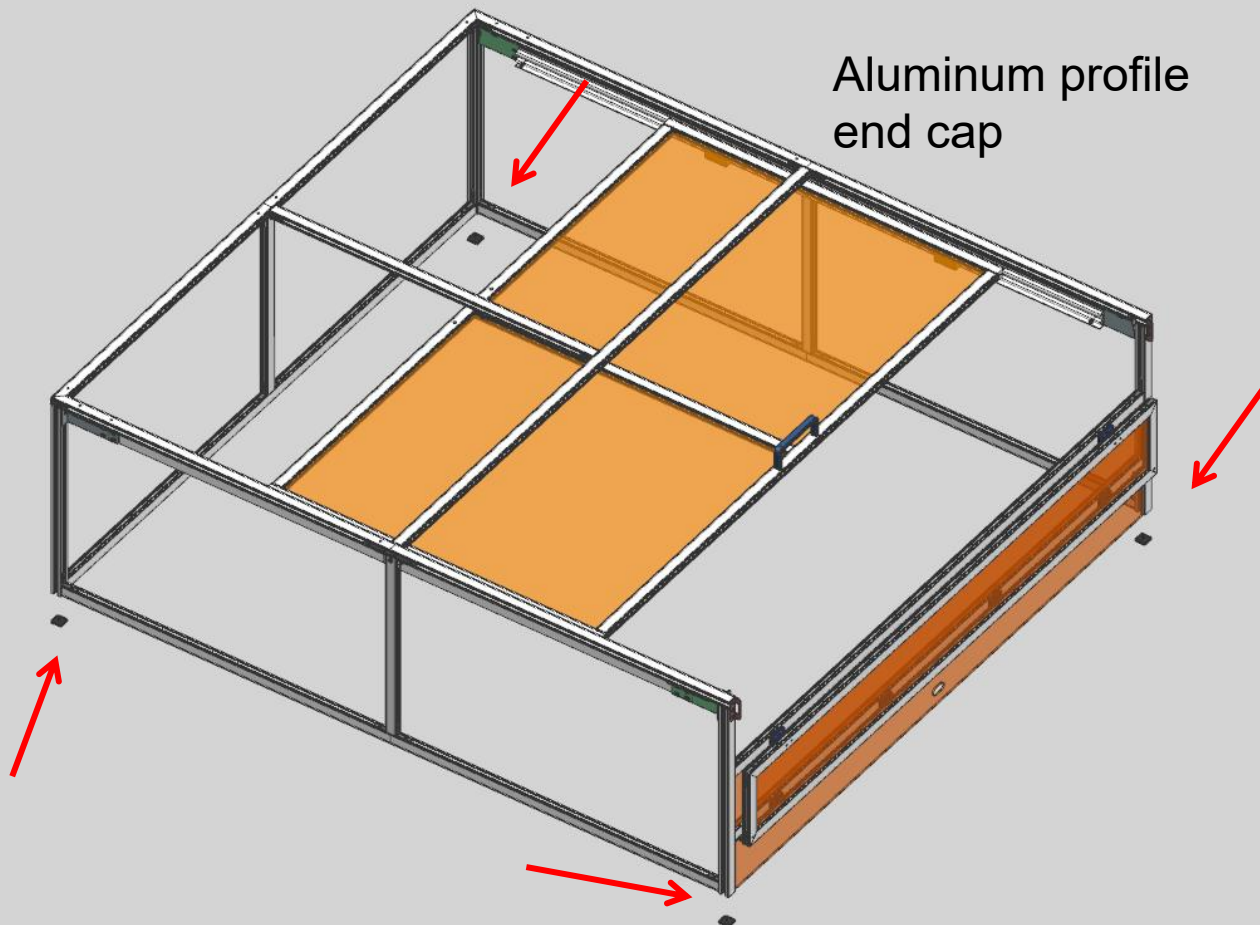


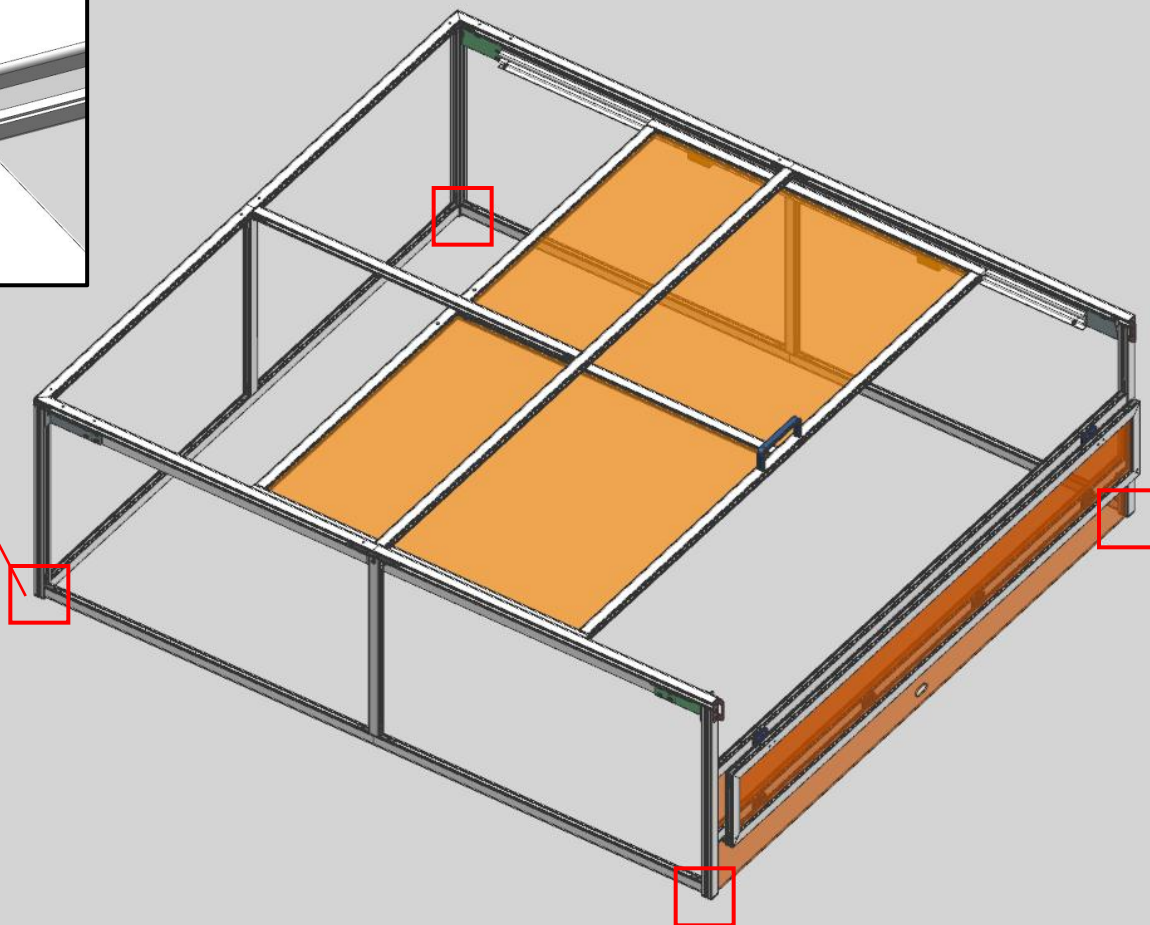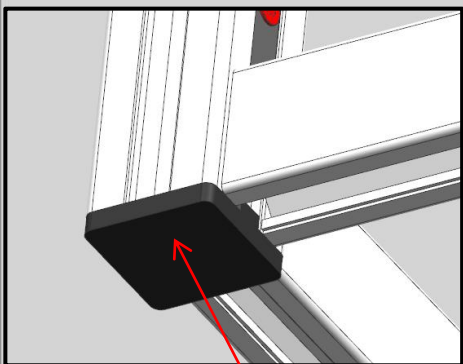


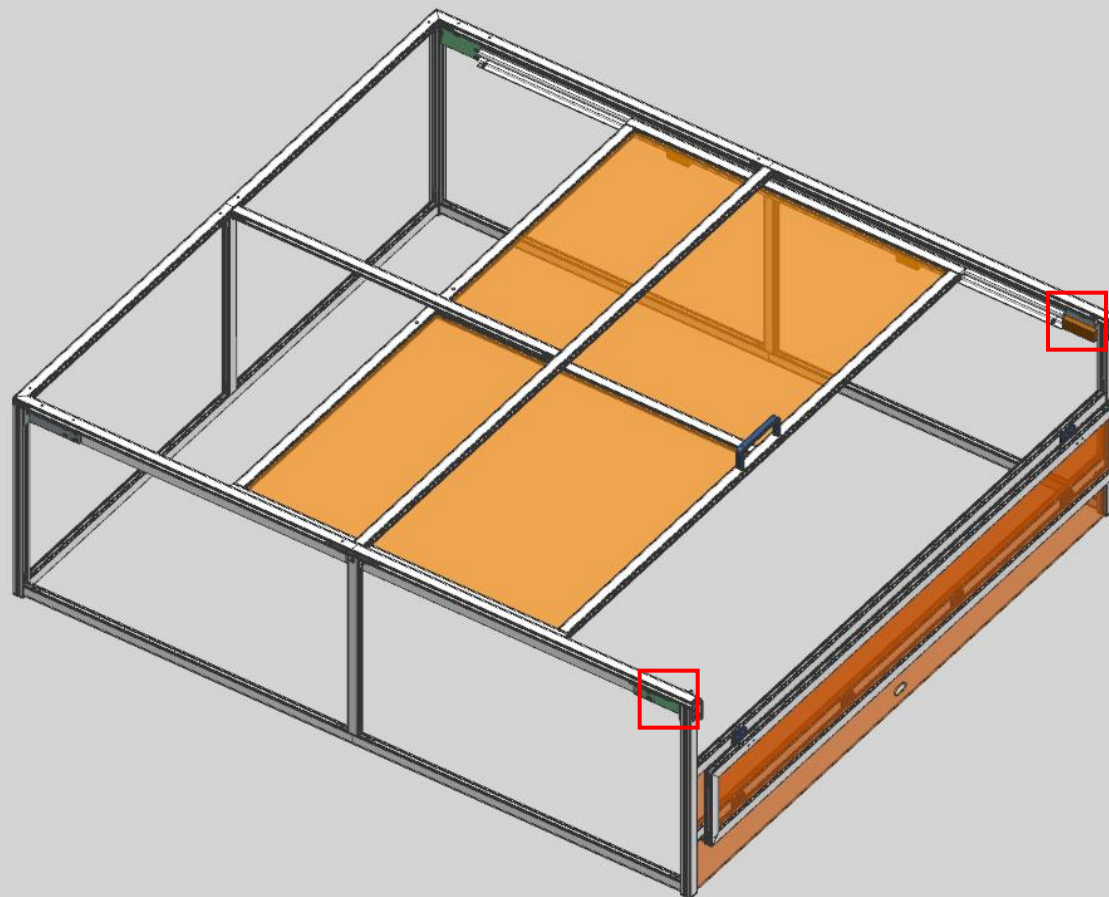


EVA
cotton



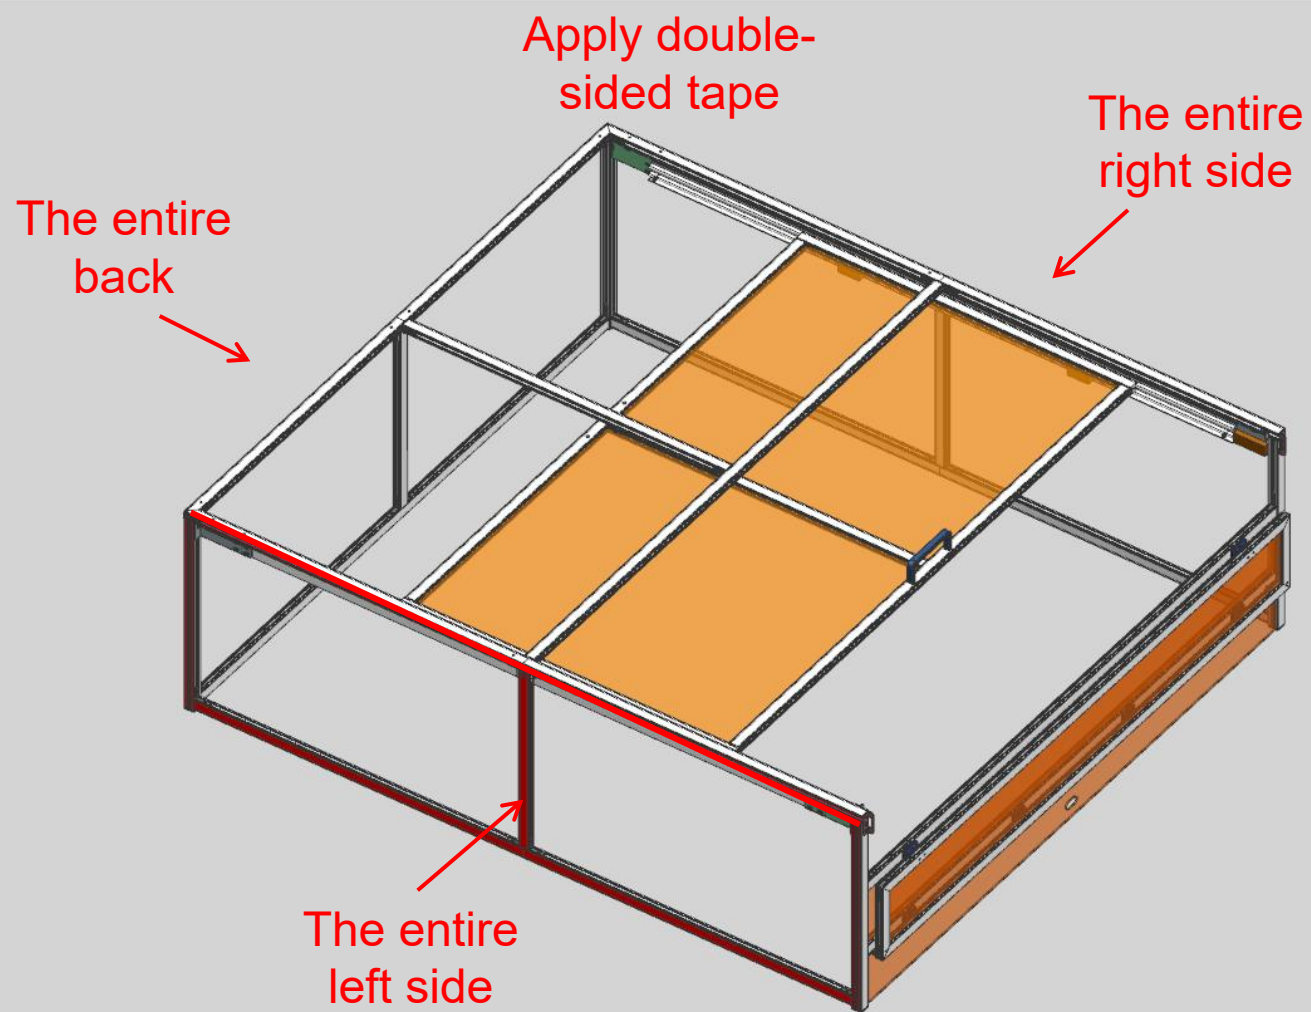

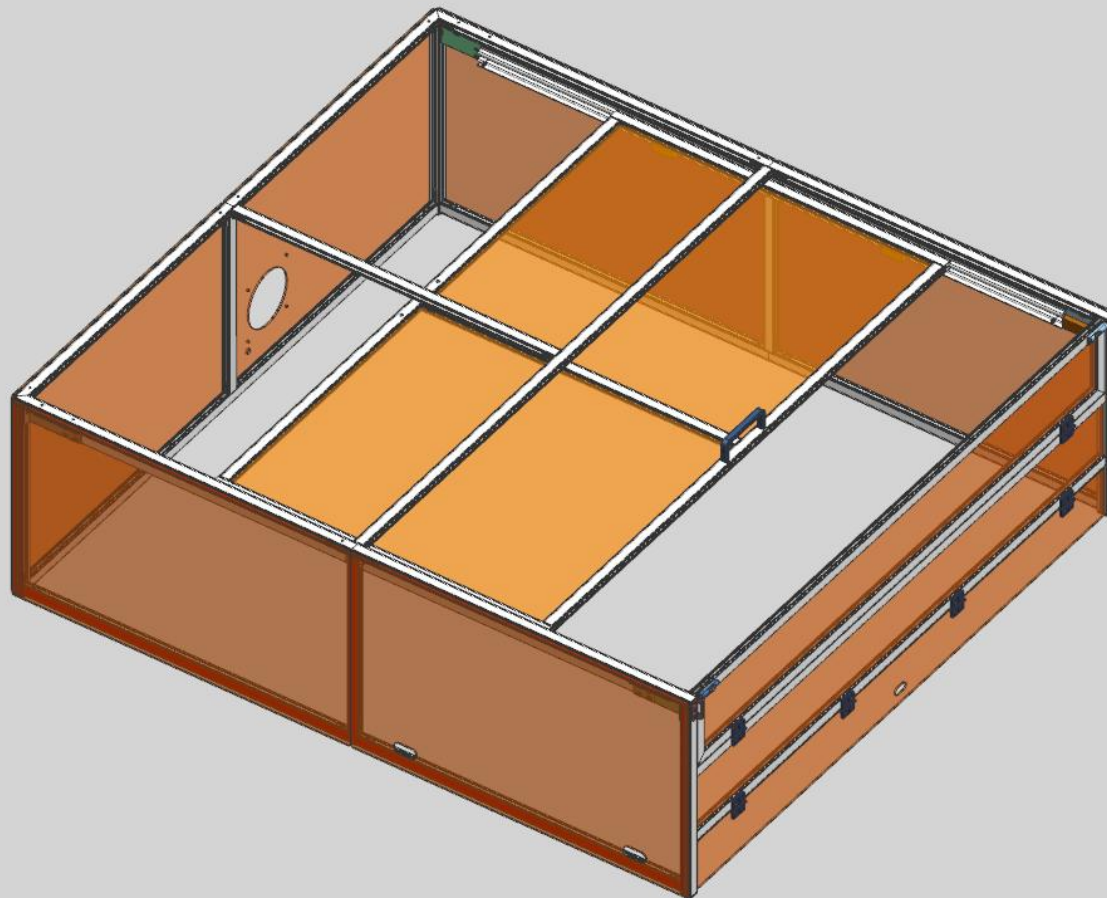


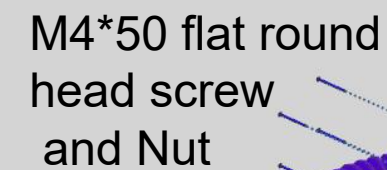


M4*50 flat round head screw and Nut



Install wire
protection
sleeve

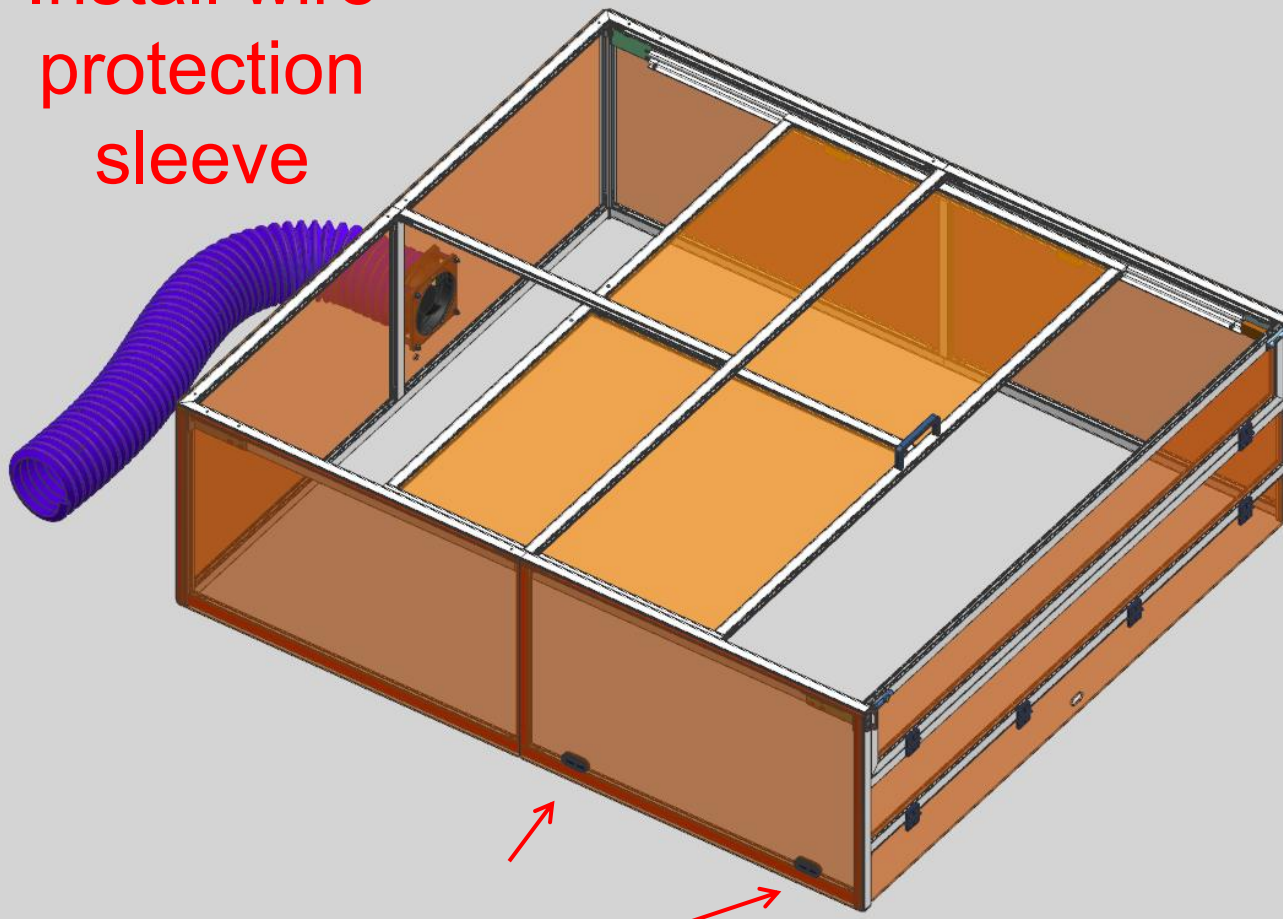


Install wire
buckle

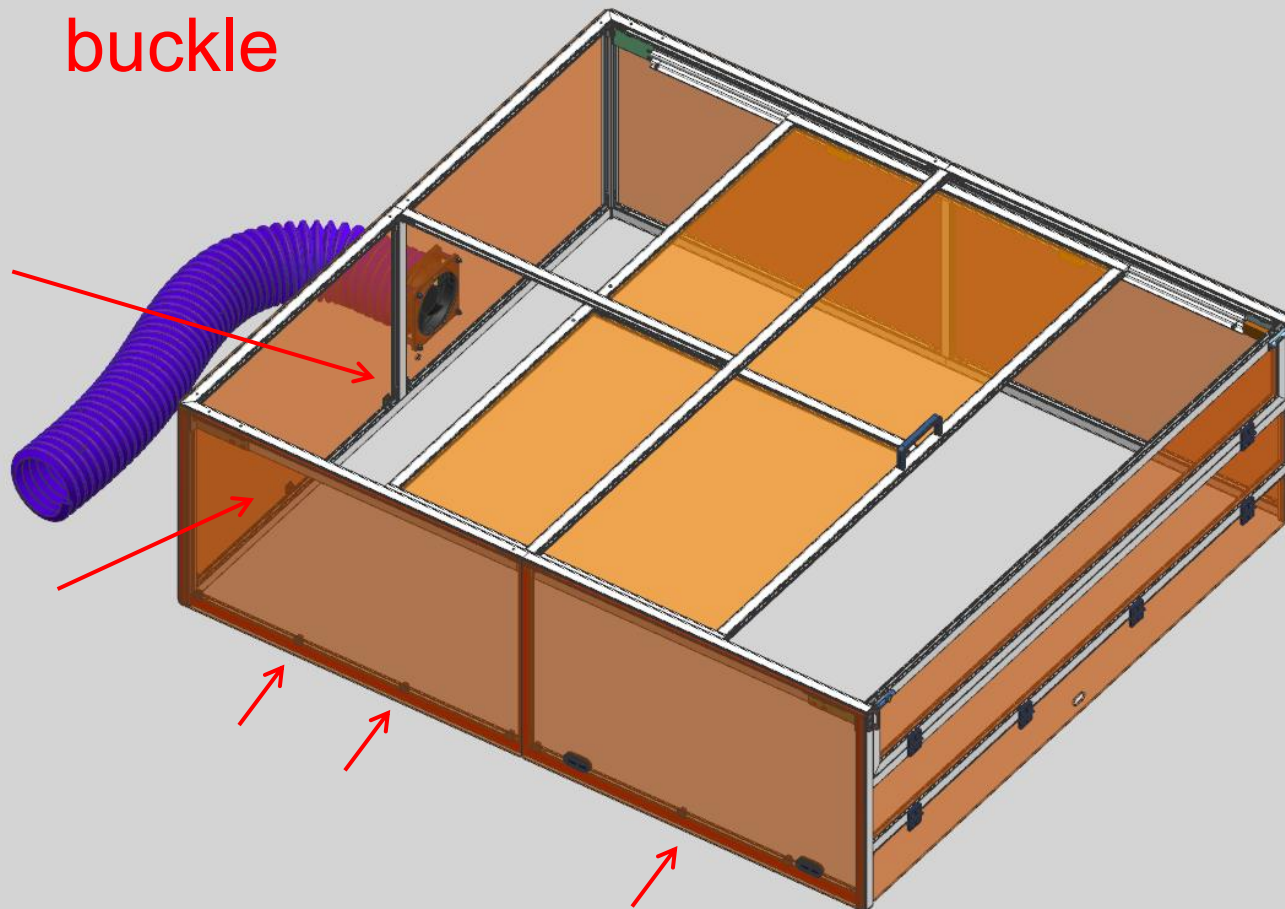

Apply double-sided tape

Top
↓

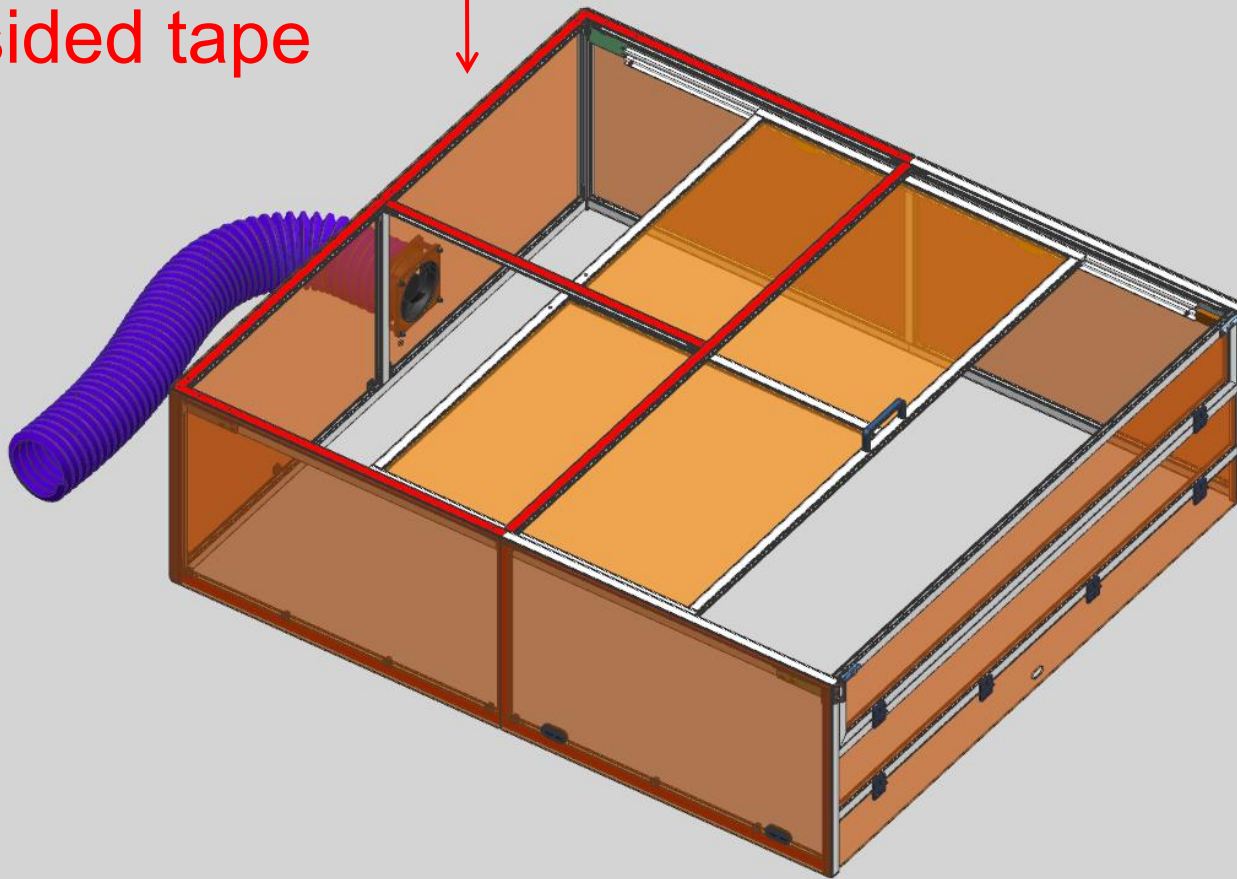

Complete

